

OPERATING THE DEVICE

SETTING THE CLOCK

1. In standby mode, press and hold the CLK / PRESET BUTTON. "12H" will blink.
2. Press the ►►/ SKIP+ / TUNE+ BUTTON or ◄◄/ SKIP- / TUNE- BUTTON to set the 12-Hour or 24-Hour format.
3. Press the CLK / PRESET BUTTON to confirm. The hour digits will blink.
4. Press the ►►/ SKIP+ / TUNE+ BUTTON or ◄◄/ SKIP- / TUNE- BUTTON to set the current hour.
5. Press the CLK / PRESET BUTTON to confirm. The minute digits will blink.
6. Press the ►►/ SKIP+ / TUNE+ BUTTON or ◄◄/ SKIP- / TUNE- BUTTON to set the current minute.
7. Press the CLK/PRESET button to confirm and the Clock Setting is completed.

NOTES:

- The clock settings may be lost if the main power switch is turned off. If this occurs, you will need to reset the clock.
- The PM indicator will light when the 12-hour format is selected.




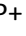


SETTING THE TIMER

In any mode, press the TIMER BUTTON, the TIMER indicator with time "180" will show in LCD Display.



1. Press the TIMER BUTTON repeatedly to adjust the timer in increments of 10 minutes.
2. Press the ►►/SKIP+ / TUNE+ BUTTON or ◄◄/SKIP- / TUNE- BUTTON to adjust the timer in increments / decrements of 1 minute.
3. After the set time is reached, the EKR-1000 alarm will sound.
4. When alarm sounds, press the any button to stop the alarm.

OPERATING MODES

LISTENING TO THE RADIO

1. Press the  / SOURCE BUTTON to turn on the EKR-1000.
2. Press the  / SOURCE BUTTON repeatedly to select the FM band. The FM indicator and frequency will show on LCD display.
 - a. Manual Tuning:
 - i) Press and hold the  / SKIP+ / TUNE+ BUTTON or  / SKIP- / TUNE- BUTTON to search the next/previous available station.
 - ii) If the reception is poor, try manual tuning to fine-tune the station. Press the  / SKIP+ / TUNE+ BUTTON or  / SKIP- / TUNE- BUTTON briefly to manually tune through the frequency band.
 - iii) Adjust the VOL + / VOL – to obtain the desired volume level.
 - b. Auto Station Storing:
 - i. Press the SCAN BUTTON for more than 2 seconds. The unit will auto scan available stations in the FM band and store them in memory.
3. Re-position the antenna if necessary.






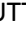
NOTE:

The LCD display will change to show the clock time after a few seconds. Press the  / SKIP+ / TUNE+ BUTTON or  / SKIP- / TUNE- BUTTON to check the tuned frequency.





SETTING THE RADIO STATION PRESETS

The EKR-1000 allows you to store up to 30 stations for easy recall at any time.

To Manually Set Presets:

1. Press the  / SOURCE BUTTON to turn on the unit.
2. Press the  / SOURCE BUTTON repeatedly to select FM band. The FM indicator and frequency will show on LCD display.
3. Press the  / SKIP+ / TUNE+ BUTTON or  / SKIP- / TUNE- BUTTON to select the desired station.
4. Press the CLK / PRESET BUTTON to enable the program function and the program number “P01” will show on the LCD display and flashing.
5. Press the  / SKIP+ / TUNE+ BUTTON or  / SKIP- / TUNE- BUTTON to select the desired program number.
6. Press the CLK / PRESET BUTTON to confirm.
7. Repeat above steps #3 thru #6 to preset up to 20 stations.
8. To retrieve one of the preset stations already programmed, press CLK/PRESET BUTTON repeatedly until you reach the desired program number of the station.



BLUETOOTH OPERATION

1. Press the  /SOURCE BUTTON to turn on the unit.
2. Press the  /SOURCE BUTTON repeatedly to select Bluetooth Mode. The “BT” and BT indicator will show on the LCD display and flash. The unit will enter Pairing/Discoverable mode.
3. Turn on the Bluetooth function for the device you want to link to, and enable the search or scan function to find the EMERSON EKR-1000.
4. Select “EMERSON EKR-1000” from the device list when it appears on your device screen. If required, enter the pass code “0000” to pair (link) the unit with your device.
5. If you are pairing (linking) your computer to the speaker using Bluetooth, you may need to set the EMERSON EKR-1000 as your computer’s default sound device.
6. After successfully pairing (linking) the Bluetooth enable device, the BT indicator will stop flashing, remain lit, and emit a brief welcome melody.
7. If you want to connect the unit to another Bluetooth device, press and hold the  /SCAN/PAIR  BUTTON. The BT indicator will flash to confirm that the unit is in Pairing/Discoverable mode. Repeat steps 3 and 4.

To Connect to a Previously Paired Bluetooth Device

The EKR-1000 can store one previously paired device for quick pairing during power on. When the unit is powered on and the previously paired device is found within the operating range, the unit will pair the device automatically.

NOTE:

- Due to different operating systems of Bluetooth devices, the time taken to pair might be different. If pairing is unsuccessful the first time, please restart the pairing process by pressing and holding the  /SCAN/PAIR  BUTTON again and wait for the BT indicator flash.
- The pairing time might be longer for first time pairing or when pairing a new Bluetooth device.
- Make sure you have the latest firmware for your Bluetooth mobile devices.
- Make sure your device is working properly. Check your device’s manual for details on Bluetooth pairing and linking.
- Refer to manual of your cell phone, tablet PC, computer, or other Bluetooth enabled devices for Bluetooth operation because the process may vary from model to model.

PLAYING FROM A BLUETOOTH DEVICE

You can play music from your Bluetooth device wirelessly to the unit after pairing.

1. Select your favorite song and then press the PLAY button on your Bluetooth device or the ►II /SCAN/PAIR ↻ BUTTON on the unit to play or pause the Bluetooth device playback.
2. Adjust both the VOL + / VOL – BUTTONS of the unit and on your Bluetooth device until you reach a comfortable listening level.

NOTES:

- If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if connected.
- Remember to turn off the unit when you have finished listening. Don't forget to switch off the power of your external audio device as well.

USING AS A HANDS-FREE SPEAKERPHONE

To use the unit as a speakerphone for receiving a phone call from a Bluetooth enabled phone.

1. Set up the Bluetooth connection with your smartphone by following the BLUETOOTH OPERATION section.
2. When a call is received when music is playing, the music will be replaced by the ringtone. Press the ►II /SCAN/PAIR ↻ BUTTON once to answer the call.
3. Use the VOL +/VOL- buttons to adjust the desired volume level.
4. To ignore an incoming call, simply press the ⏪ button.
5. When the call is completed, press the ⏪ button once to end the call. If you were playing music from your cell phone to the unit before answering the call, the music will automatically resume playing when you hang up.
6. Quickly press the ►II /SCAN/PAIR ↻ BUTTON twice to re-dial the last number you dialed.

USING THE LIGHT FUNCTION

Please and hold the LIGHT BUTTON to turn on the LED light. Please and hold LIGHT BUTTON again to turn off the LED light.

RESETTING THE UNIT

If the system does not respond or exhibits erratic or intermittent operation, you may have experienced an electrostatic discharge (ESD) or a power surge that triggered the internal microcontroller to shut down automatically. If this occurs, simply disconnect the AC Adaptor, wait for at least 3 minutes, and then setup the unit again as if you were using it for the very first time.

CARE & MAINTENANCE

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

1. Clean the unit with a soft, damp (never wet) cloth. Solvent or detergent should never be used.
2. To reduce the risk of fire or electric shock, avoid operating your unit under direct sunlight or in hot, humid, or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise, such as fluorescent lamps or motors.
4. For better Clock Display clarity, avoid operating the unit under direct sunlight or in strong room illumination.
5. Unplug the unit from the electrical power outlet immediately in case of malfunction.

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSES	POSSIBLE REMEDIES
The unit does not respond (no power).	The unit is disconnected from the AC outlet.	Reconnect to the AC outlet.
	The AC outlet has no power.	Try the unit on another outlet.
Unit is ON, but there is low or no volume.	Volume set too low.	Press the VOL+ button to increase the volume level.
FM has no sound.	Unit is not in Radio mode.	Press the Source button repeatedly to select Radio mode.
Bluetooth has no sound.	Unit is not linked with your Bluetooth enabled device.	Go through “Bluetooth Operations” process to link the speakers.
	Unit placement out of range.	Relocate the unit within Bluetooth operating range (~30 feet).
	Your Bluetooth enabled device volume set too low.	Increase volume level of your Bluetooth enabled device.
Noise or sound is distorted on FM broadcast.	Station not tuned properly.	Fine tune the FM broadcast station.
	FM wire antenna is not fully extended.	Fully extend the FM wire antenna.
Unit gets warm after extended play at high volume.	This is normal.	Turn the unit off for a period of time or lower volume.