

Directions for use

LED projector

Please read this manual
carefully before using the projector

Matters needing attention ➤

The installation

- For best results, use this unit in a dark room or with curtains drawn.
- Please use the unit carefully. Falling or hitting the unit may damage the parts, blur the image, and display it incorrectly.

Remote control battery

- Replacing a battery with the wrong model may cause an explosion. Always follow the instructions for disposing of the used battery.
- The battery shall not be exposed to sunlight, fire or similar overheating.

Pay attention to waterproof

- This product is not waterproof. In order to prevent electric shock and short circuit, water splashing or splashing should be avoided, and no liquid objects such as vases and water cups should be placed around the product.

power supply

- Please shut down the product after 4 hours of continuous operation, and turn off the power for 30 minutes before turning it on
- Please use the power cord or adapter of the specified specification, if you need to replace it, please contact the supplier for replacement.
- Use the power cord with care and avoid excessive bending; damage to the power cord may result in electric shock and fire.
- After use, the power cord should be unplugged from the power outlet.

warn

- The disconnecting device of this projector is the appliance input socket on the product. No other objects should be placed near the appliance input socket, so as not to hinder the disconnection of the multimedia projector from the power supply.

This is a Class A product. In a living environment, this product may cause radio interference. In this case, the user may be required to take practical measures against the interference

Matters needing attention ➤

clean

- Unplug the power cord first.
- Clean the casing regularly with a damp cloth, and neutral detergent can be used; Do not use strong cleansers or solvents (such as alcohol or diluents).
- The lens should be cleaned with glasses cloth or lens paper, taking care not to scratch or scratch the lens.
- Please use a soft brush to clean the vents and speaker parts of the unit regularly, otherwise the vents will be blocked by dust and cause the unit to overheat and cause the unit to malfunction.

Kind tips

- Do not disassemble the projector at will, there is a risk of electric shock and affect the normal warranty..
- Do not place any liquid or heavy objects on the machine.
- Do not place items around the product that could block the product vents.
- To avoid possible injury to children, please place the product in an area out of the reach of children.
- If you find that this product is damaged, please do not try to repair it yourself, please contact the supplier.
- When the product is working, in order to protect your eyes, please keep an appropriate distance to watch, do not look directly at the lens, so as not to burn your eyes

Warranty Terms

This machine provides a one-year warranty service from the date of purchase. If there is a quality problem within one year, please contact the local dealer or the store where you purchased it.

Accessories list: manual/remote control/power cord (gift)

Product parameter introduction ➤

product name	LED projector	Display principle	LED
Light bulb	LED	Supply voltage	DC 19V
language	English	Projection method	front or rear
Operation method	Remote control/buttons	working environment	0–35°C
Output Interface	Headphone sound output	input interface	HDMI / USB / AUDIO

Kind tips

In order to enable users to experience the fast and efficient projection Android system, it is recommended that customers do not download too many apps that are not commonly used, or regularly clean up the software that is not commonly used after use. Too much software will make the Android system unresponsive and even crash. If there is a crash phenomenon during the use of the Android system, please turn off the power of the projector and enter the Android system again.


Introduction to Multimedia Support Formats ➤

file type	Supported file formats
picture	BMP / JPG / JPEG / PNG
video	3GP / AVI / FLV / MP4 / MPG / VOB / TS / M2TS / DAT / MKV
audio	MP3 / APE / AAC / FLAC / OGG / WAV / WMA / MID / DTS / M4A

⚠ Due to Dolby's patent copyright issues, this machine does not support various Dolby-related audio decoding.


Introduction of remote control

※ Android version:Android projector
(General Edition)

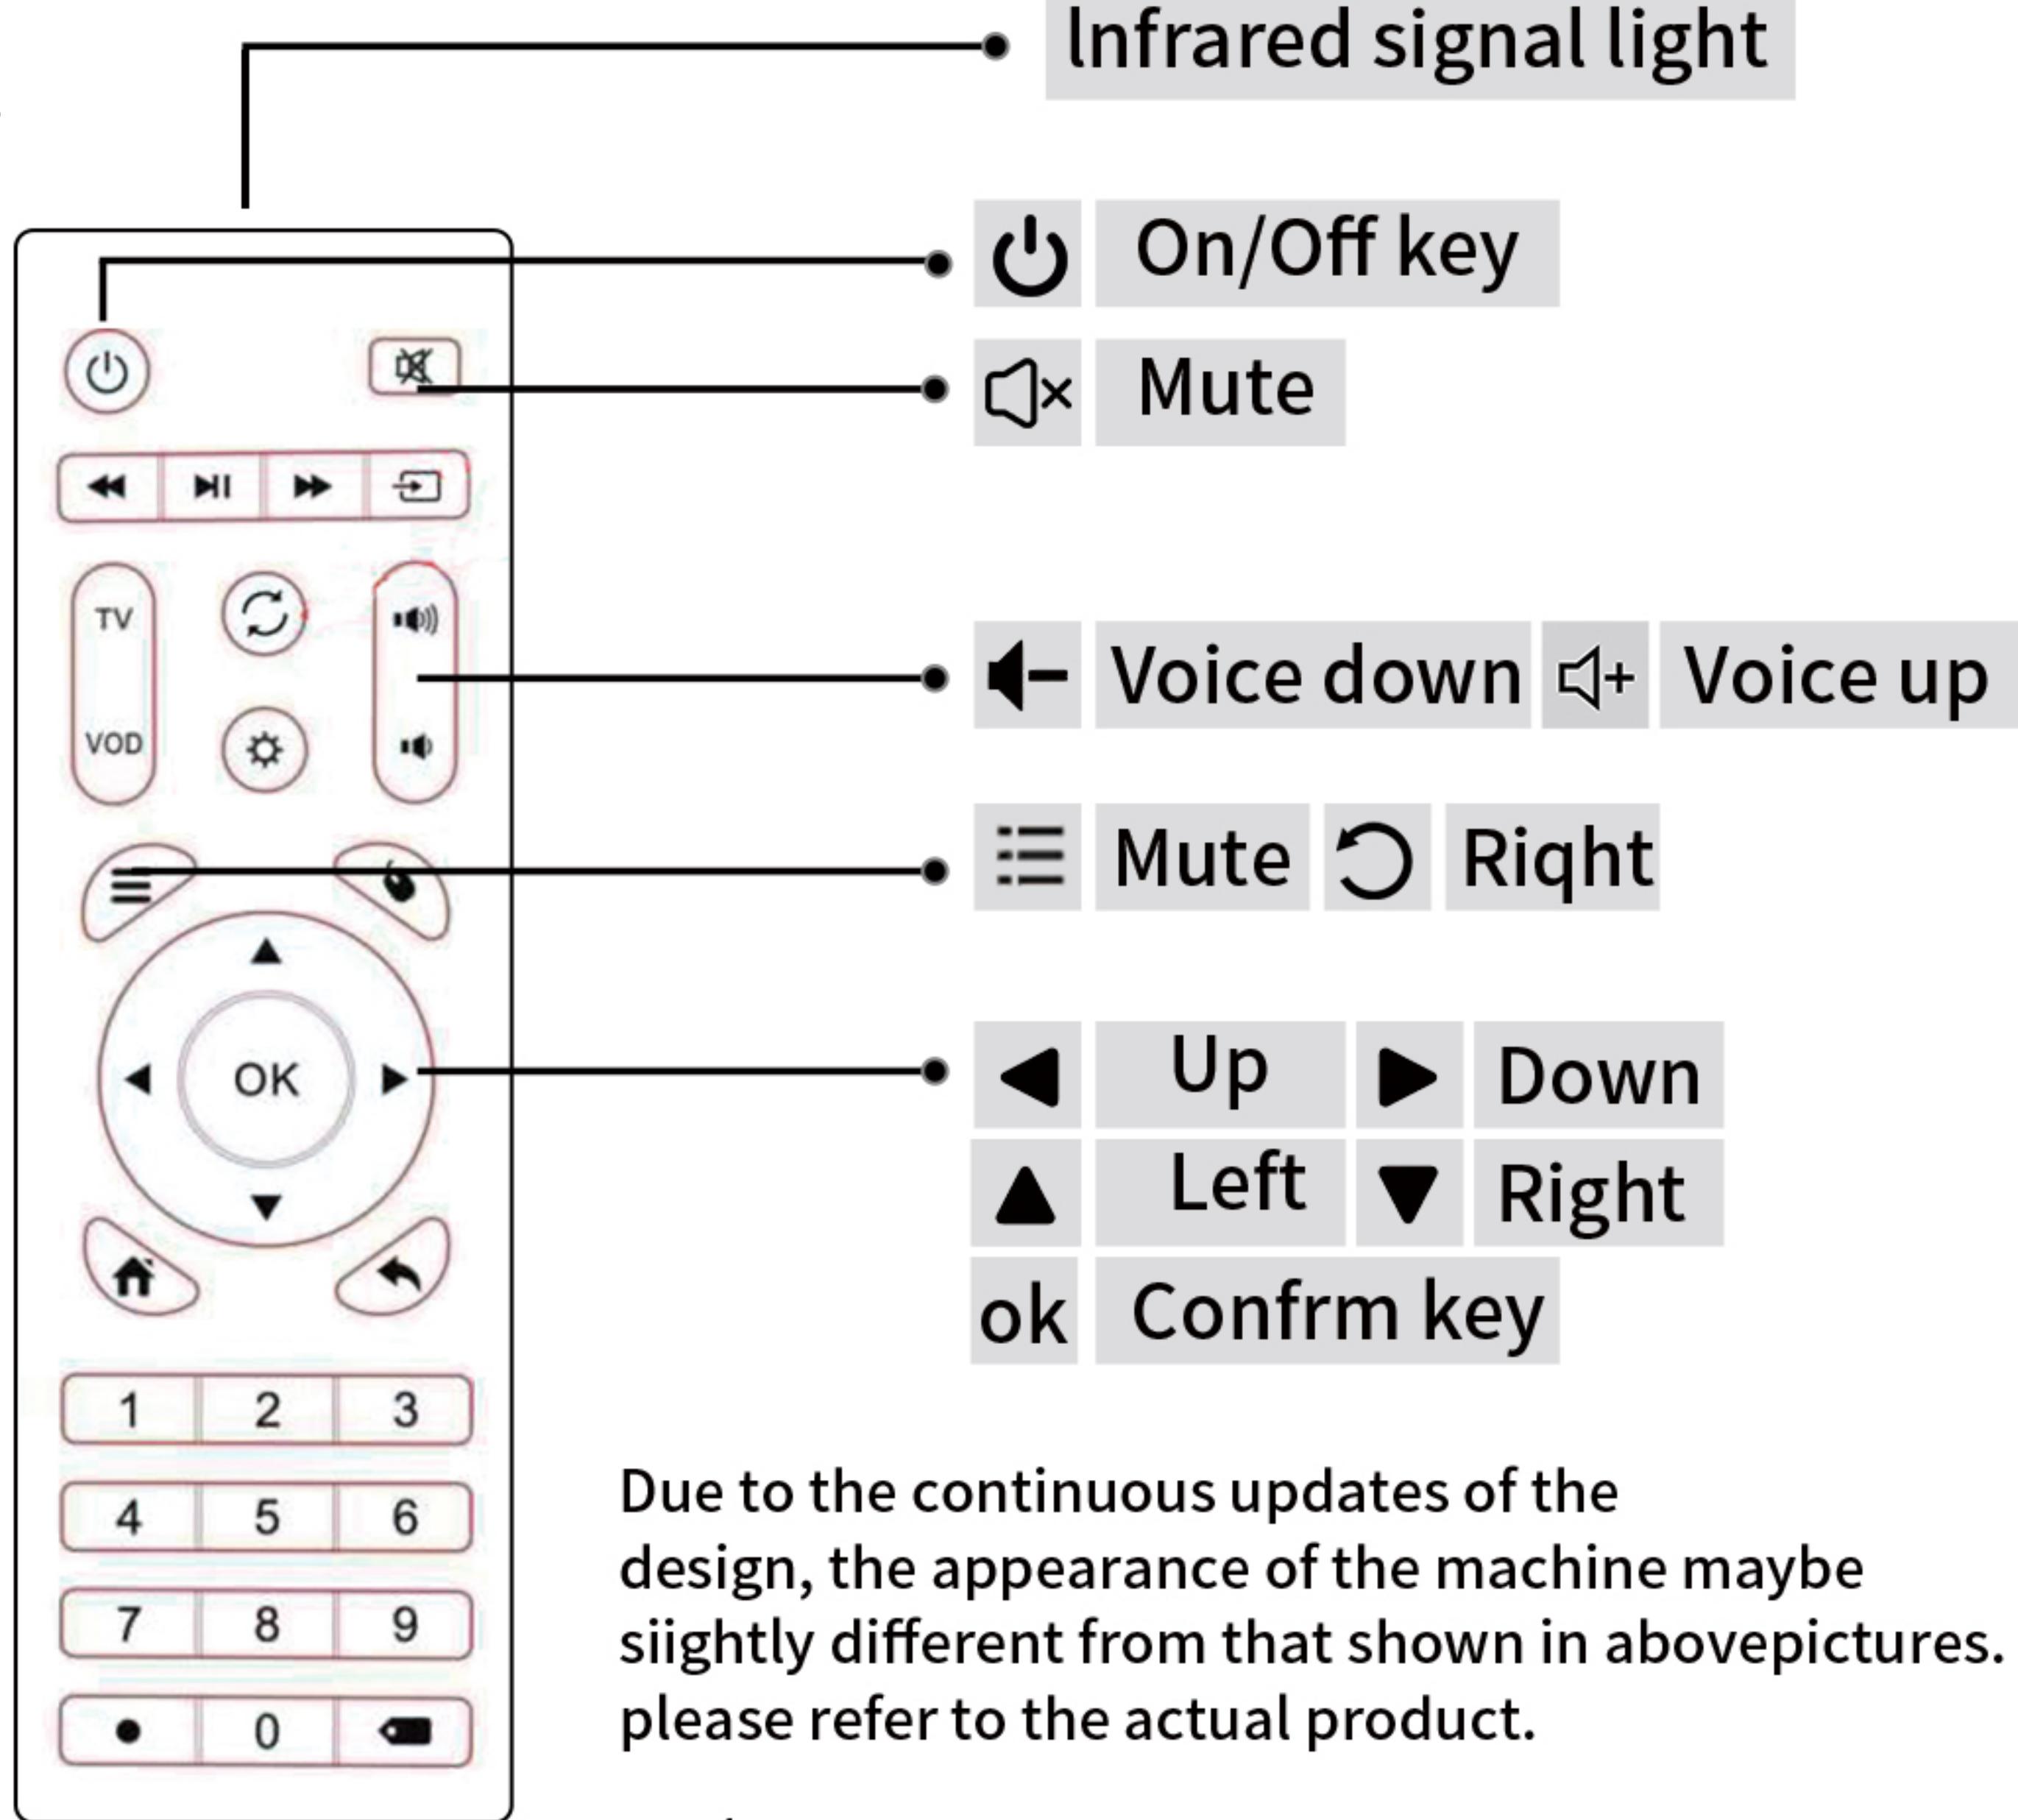

Due to the continuous updates of the design, the appearance of the machine maybe slightly different from that shown in above pictures. please refer to the actual product.


- After entering the main interface, press the signal source "''' button on the remote control;
- Select the desired signal source channel in the pop-up interface, such as "HDMI", "AV", etc.;
- Press the "OK" button on the remote control to enter the corresponding signal source state.

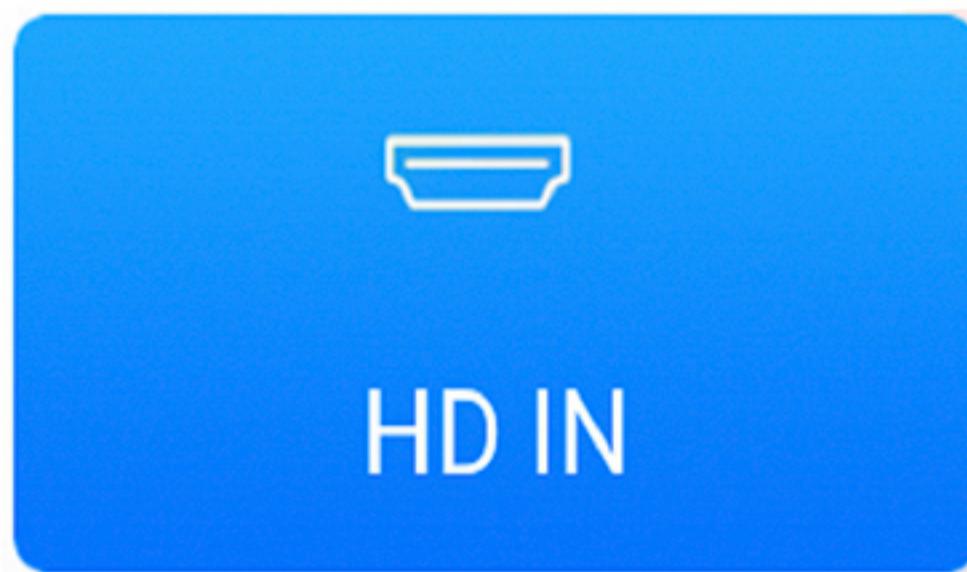


- Insert the USB flash drive that has stored multimedia files into the USB port;
- In the main interface, press the signal source "→" button on the remote control, and select "Mobile Storage" in the pop-up interface;
- After entering the interface, find the multimedia file you want to play and play it.

WiFi settings ➤


- On the main page, use the arrow keys to select to enter "Settings".

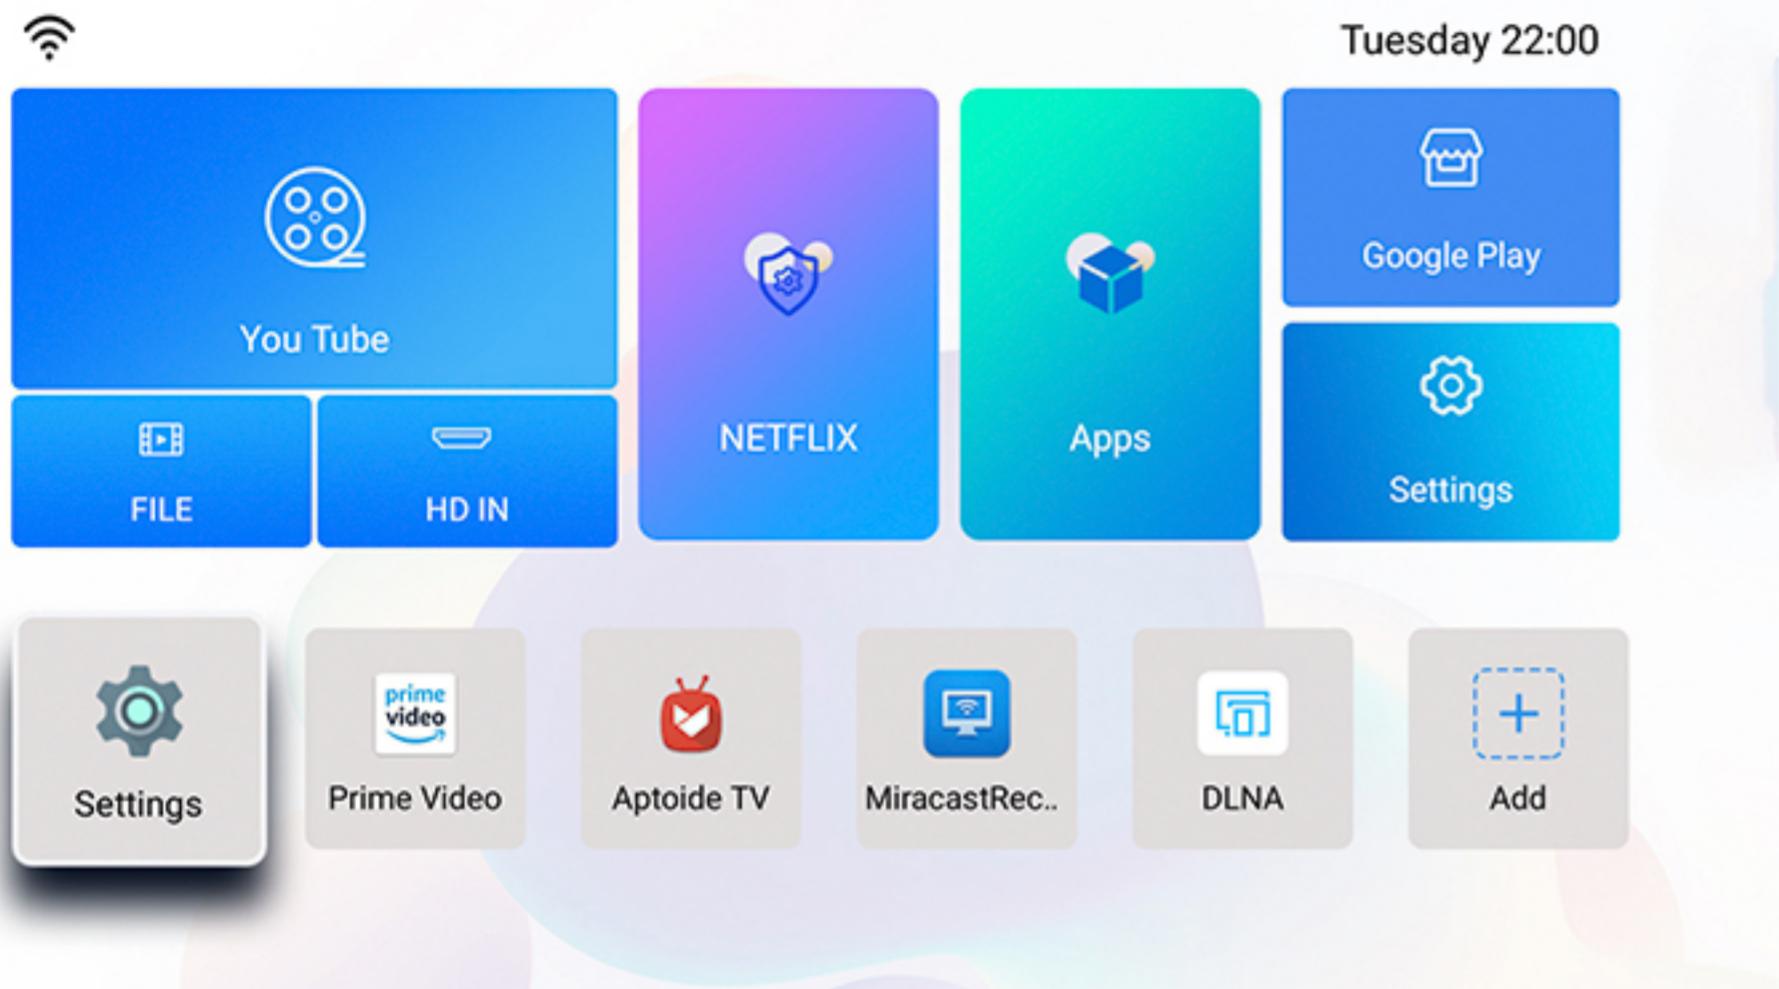


- In the pop-up interface, select "Network Settings"

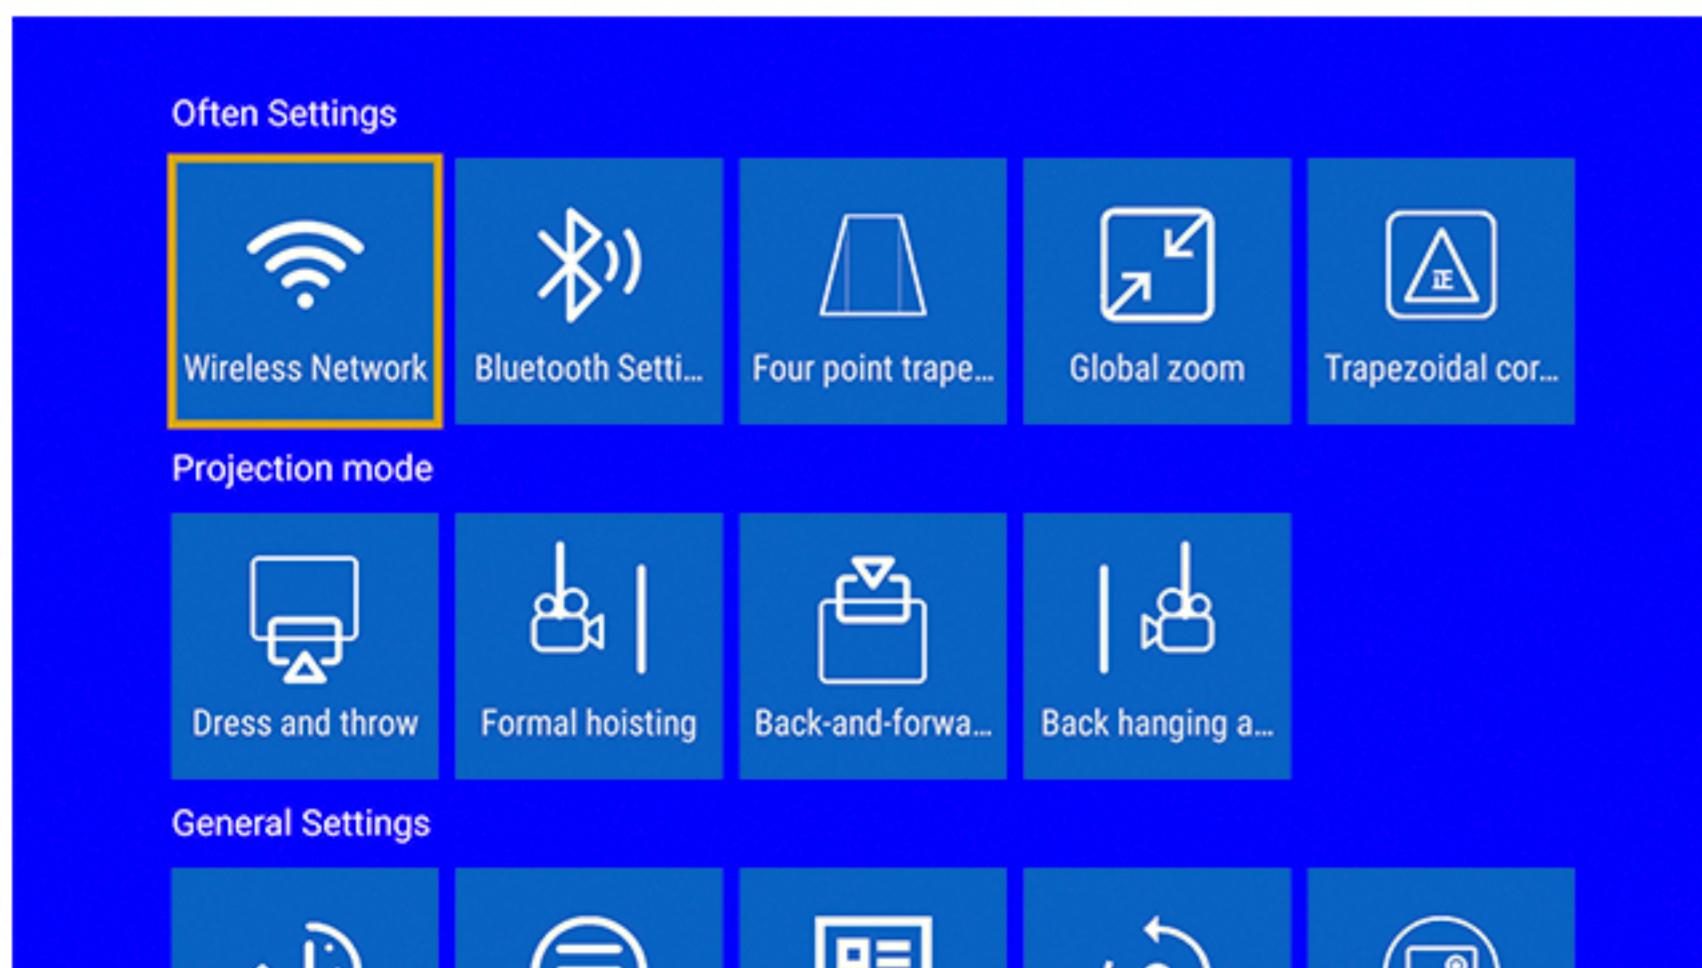

- In the network settings interface, turn on the "WIFI switch" to search for the network, and select the WIFI to be connected.

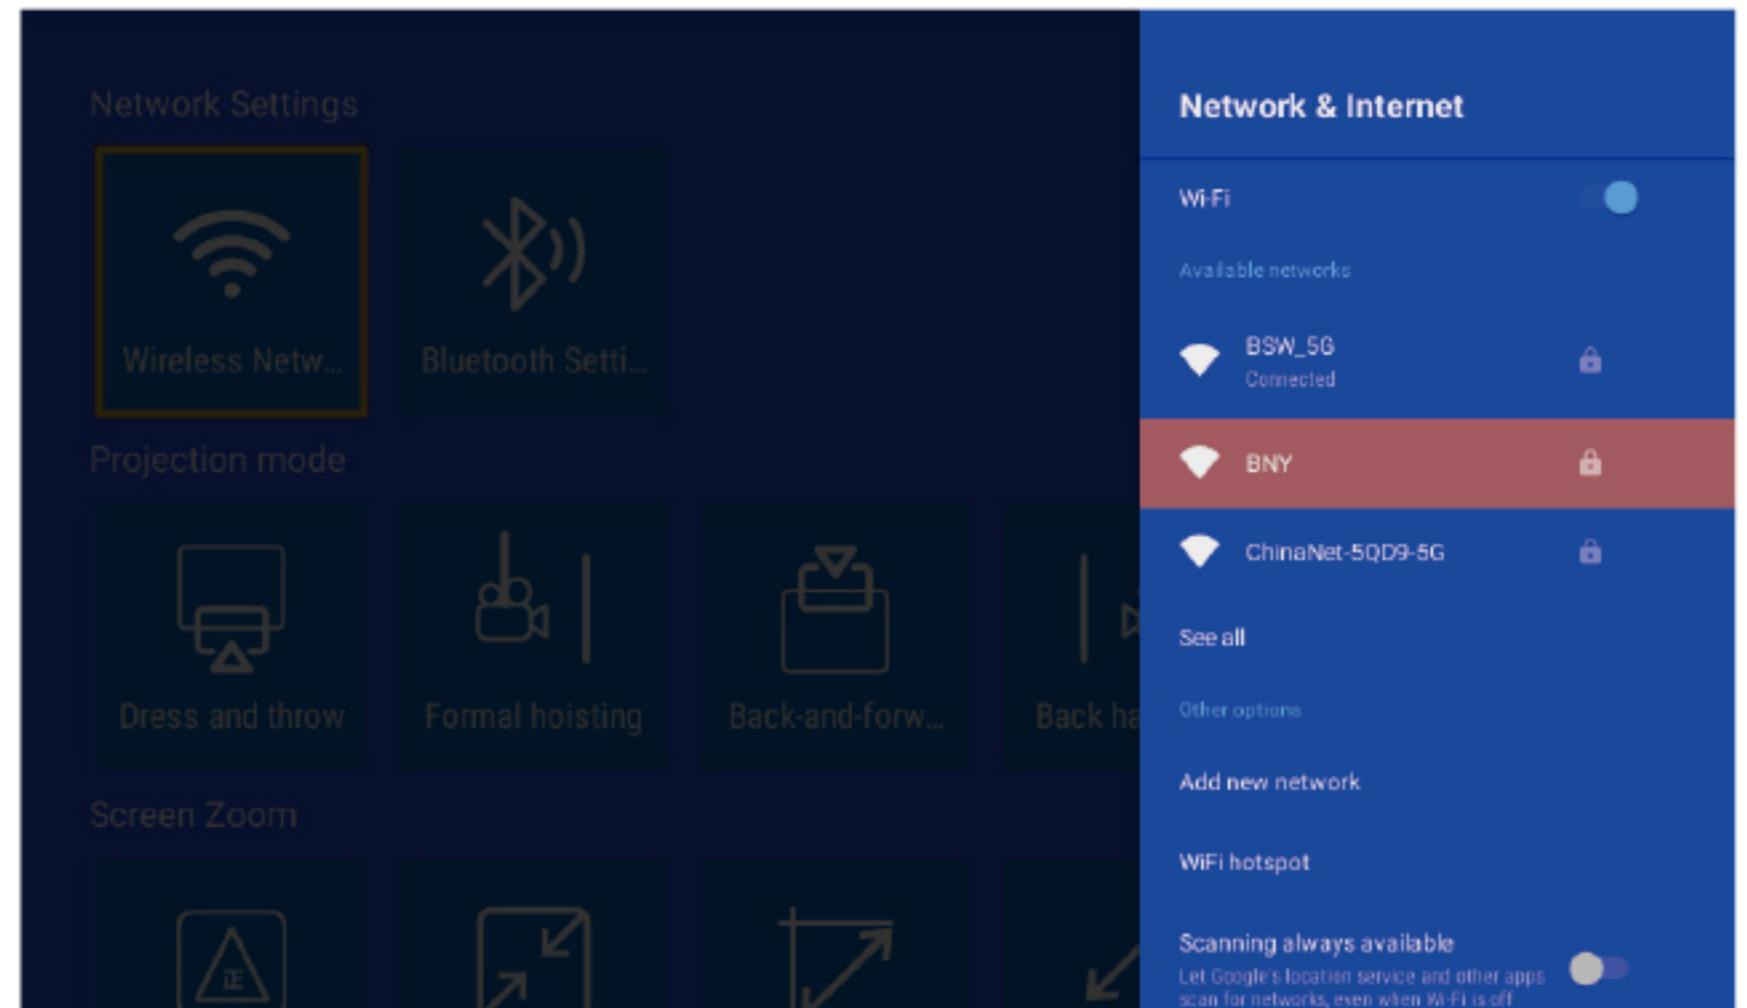


- After entering the password through the keyboard, click Confirm connection.

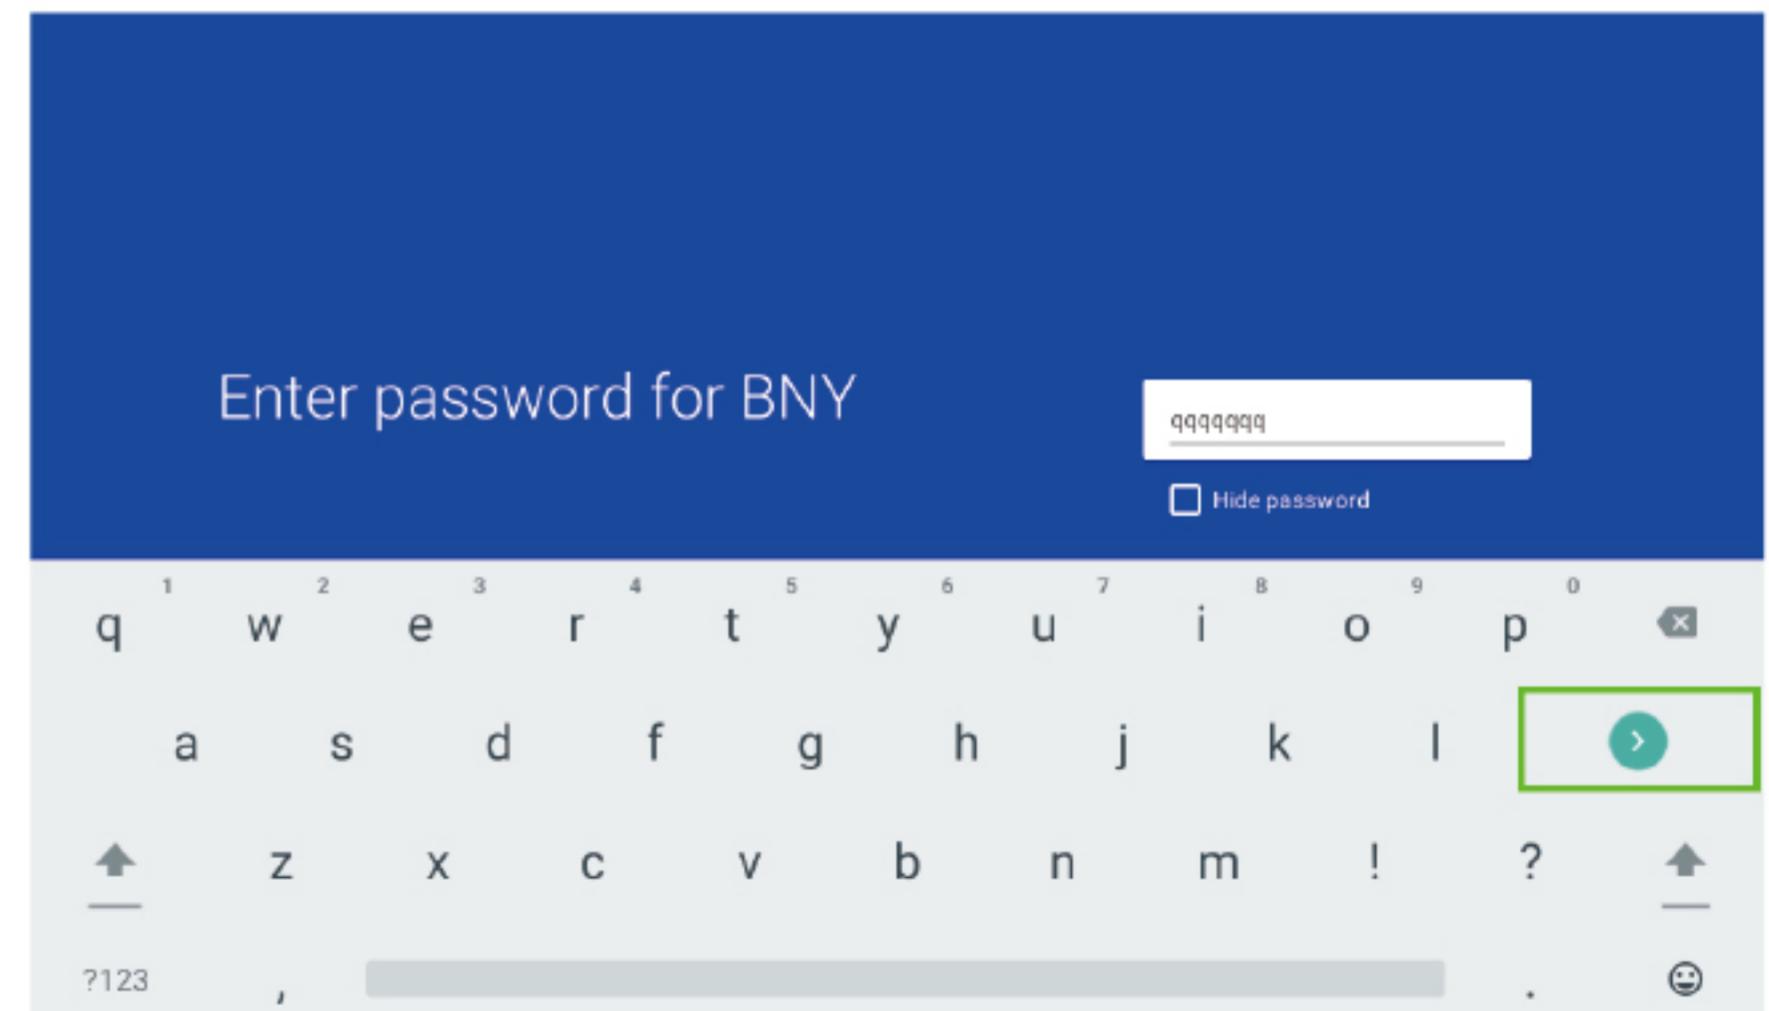


Electronic Keystone Settings


- In the main page, use the arrow keys to select to enter "Settings";

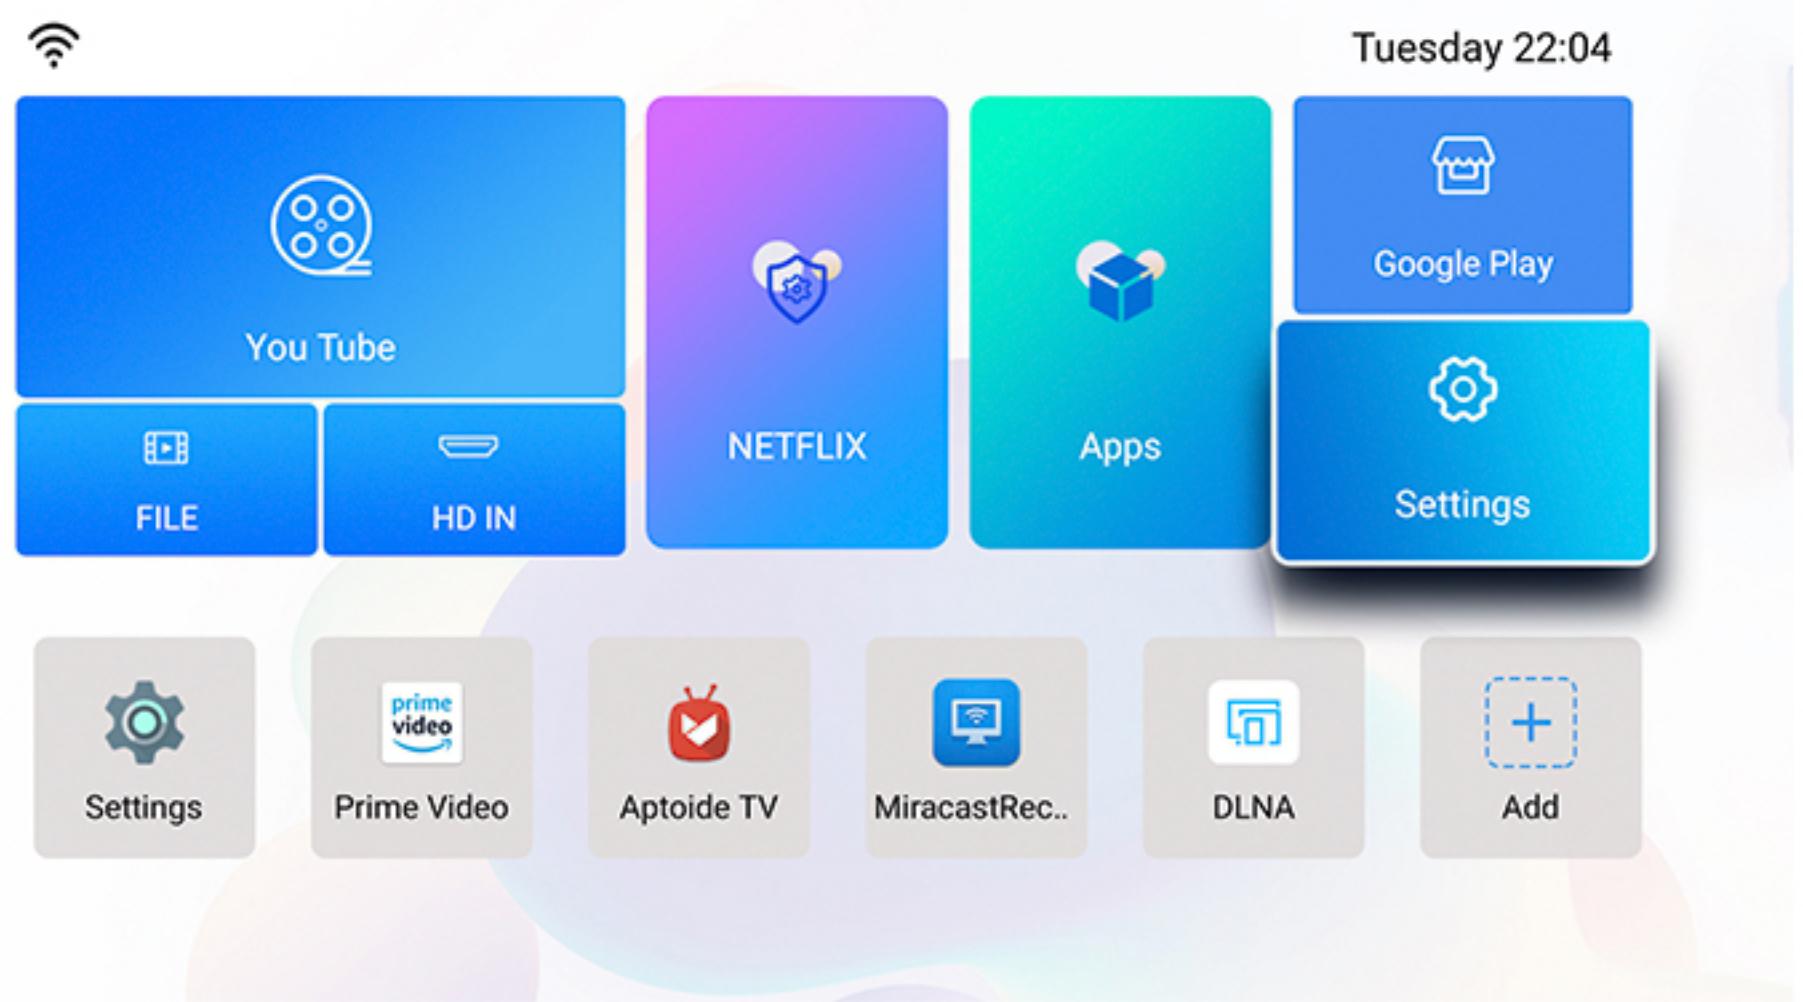

- Use the arrow keys to adjust the four corners until the picture is corrected.

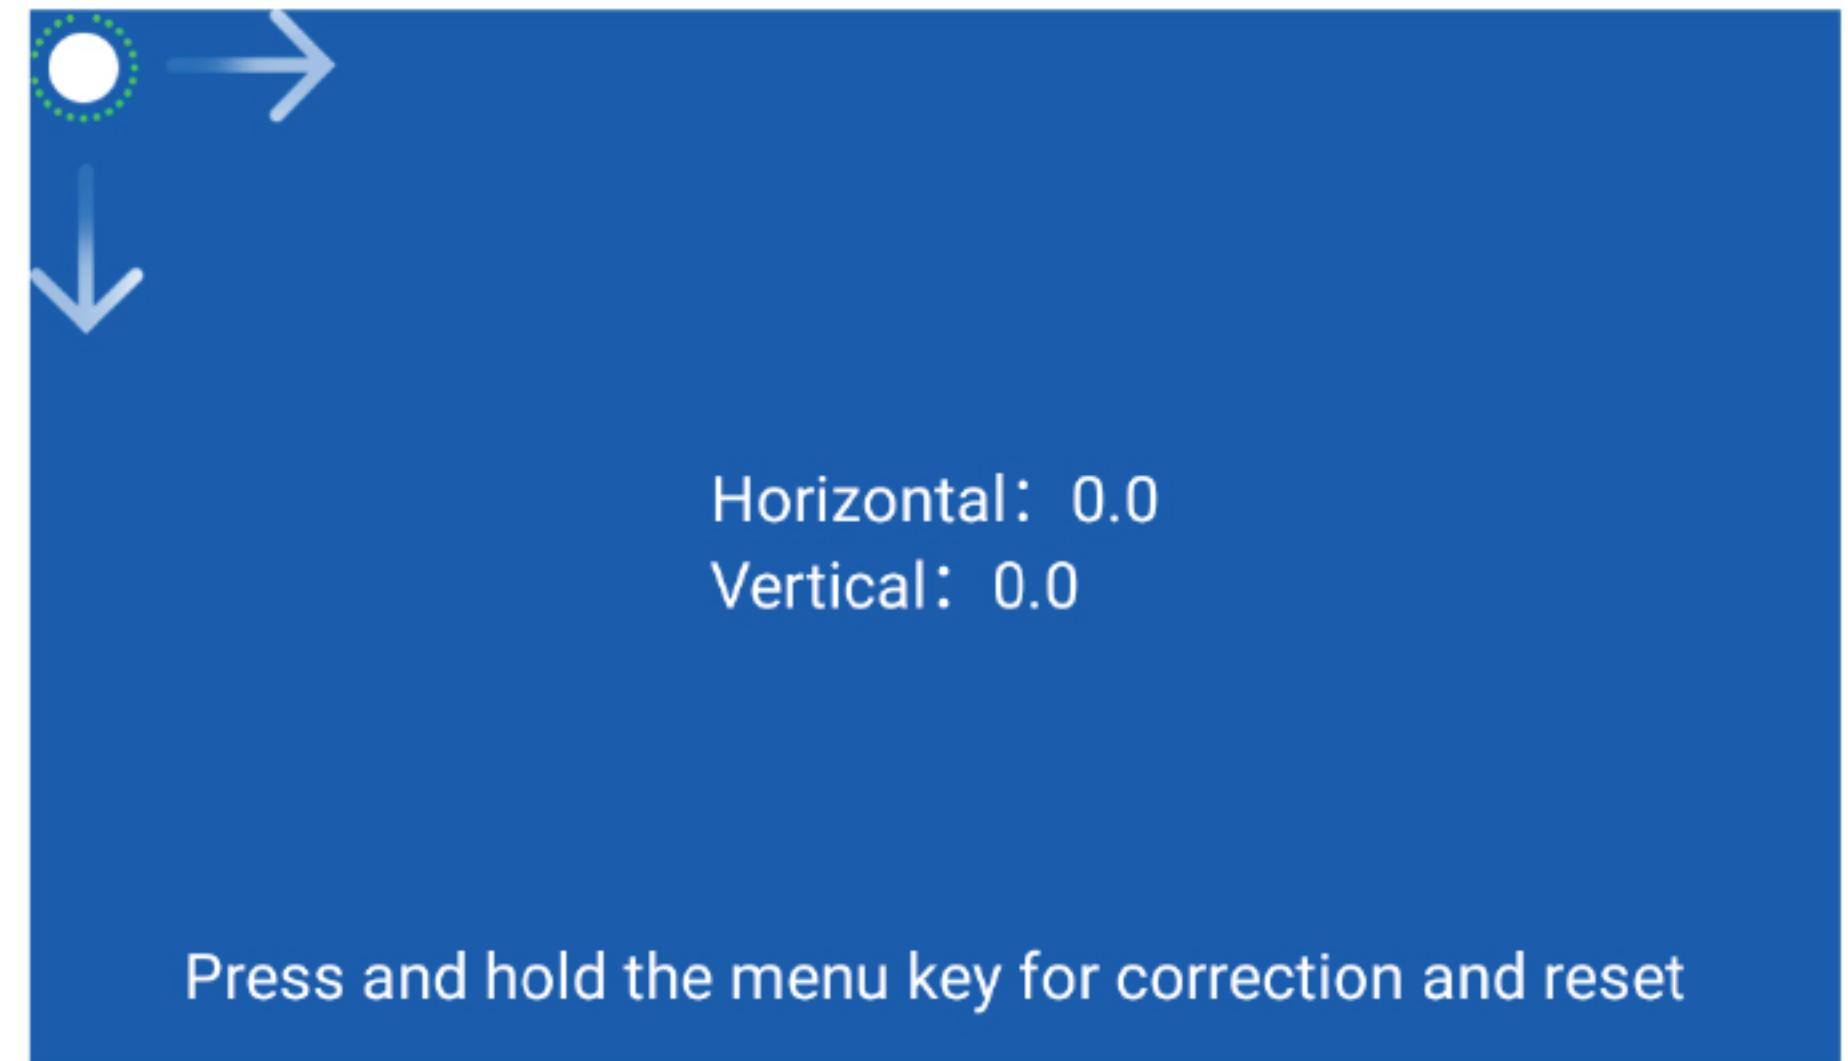


- In the projection setting interface, choose to enter "four-point trapezoid";

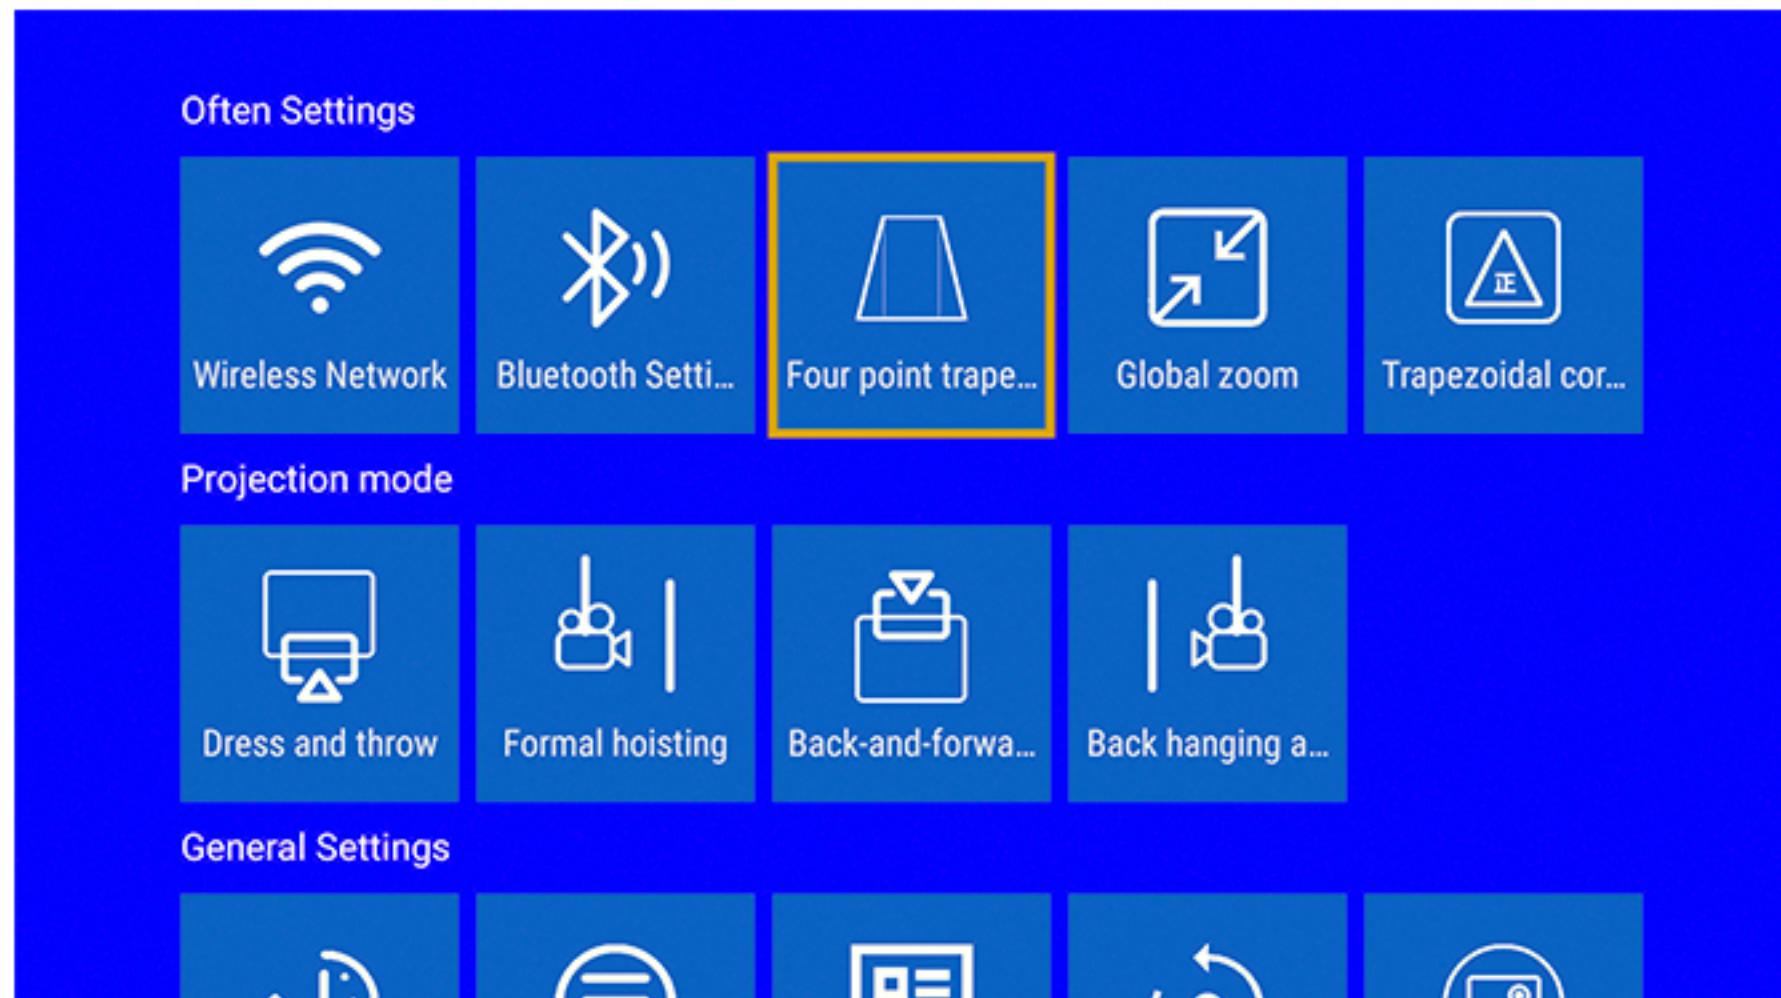


Bluetooth settings ➤


- In the main page, use the arrow keys to select to enter "Settings";

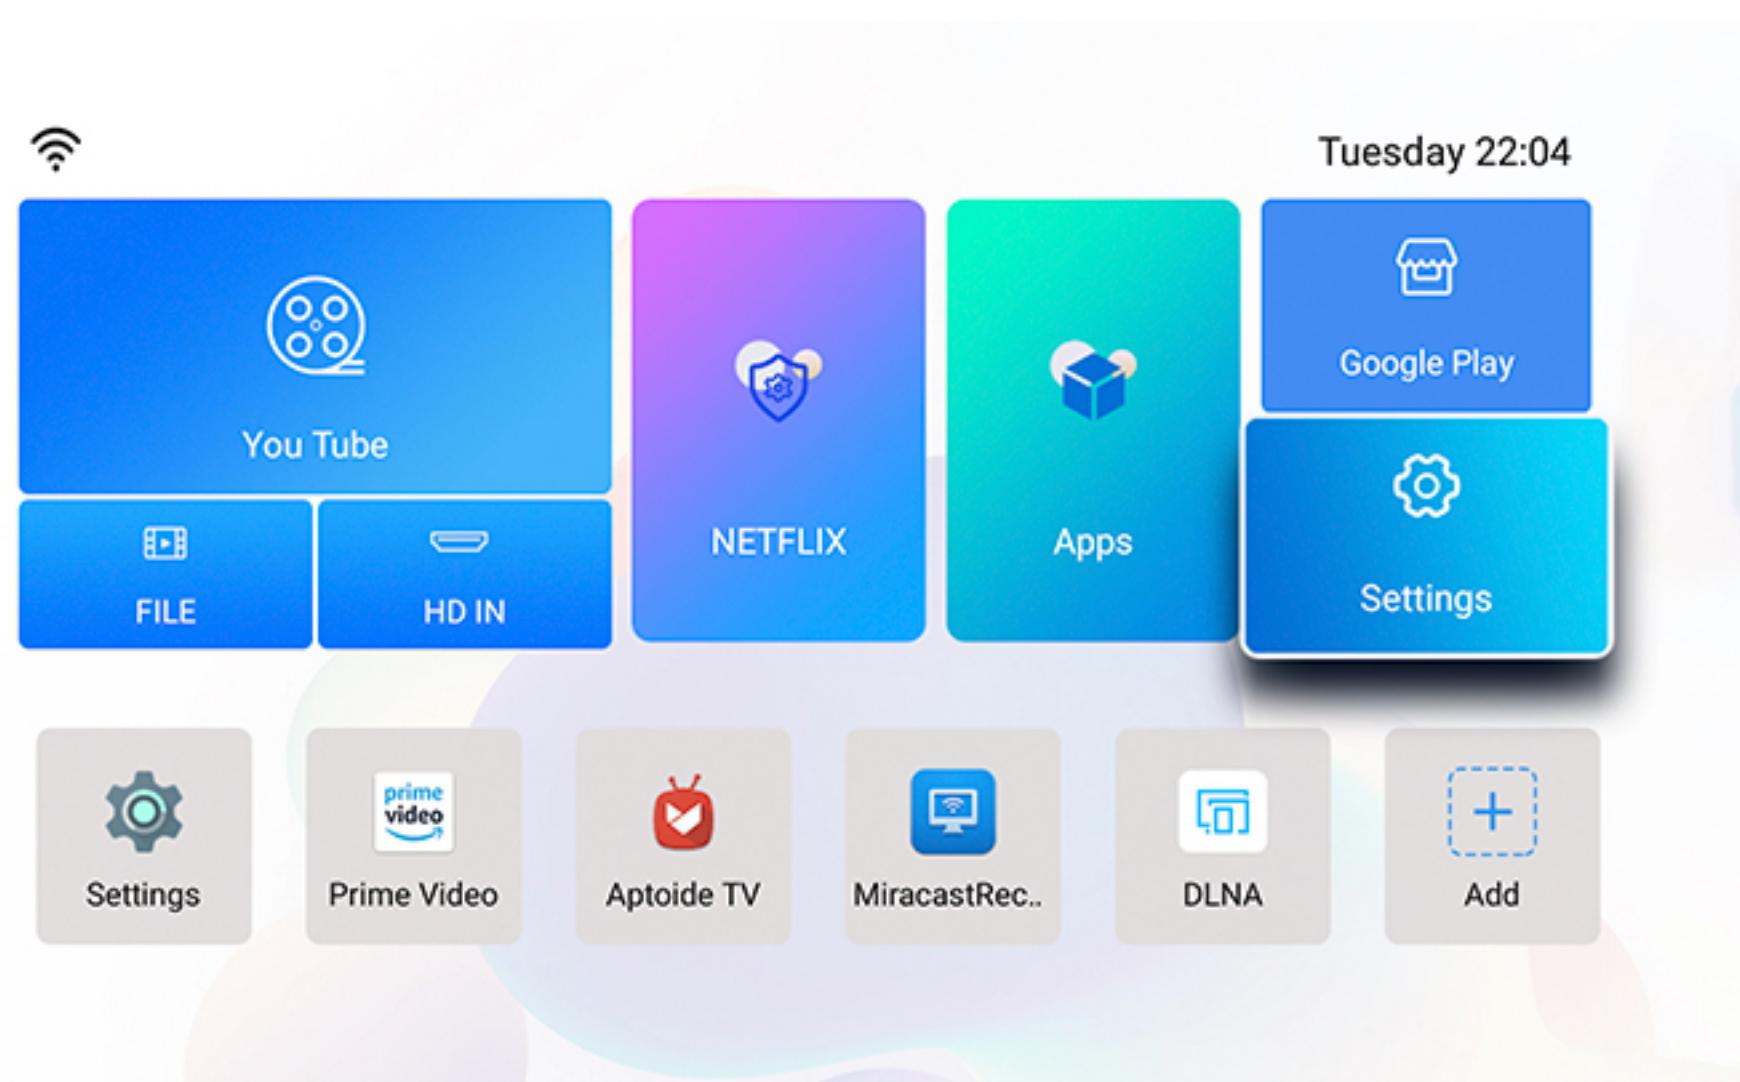

- Select "Projection Settings" in the pop-up interface;

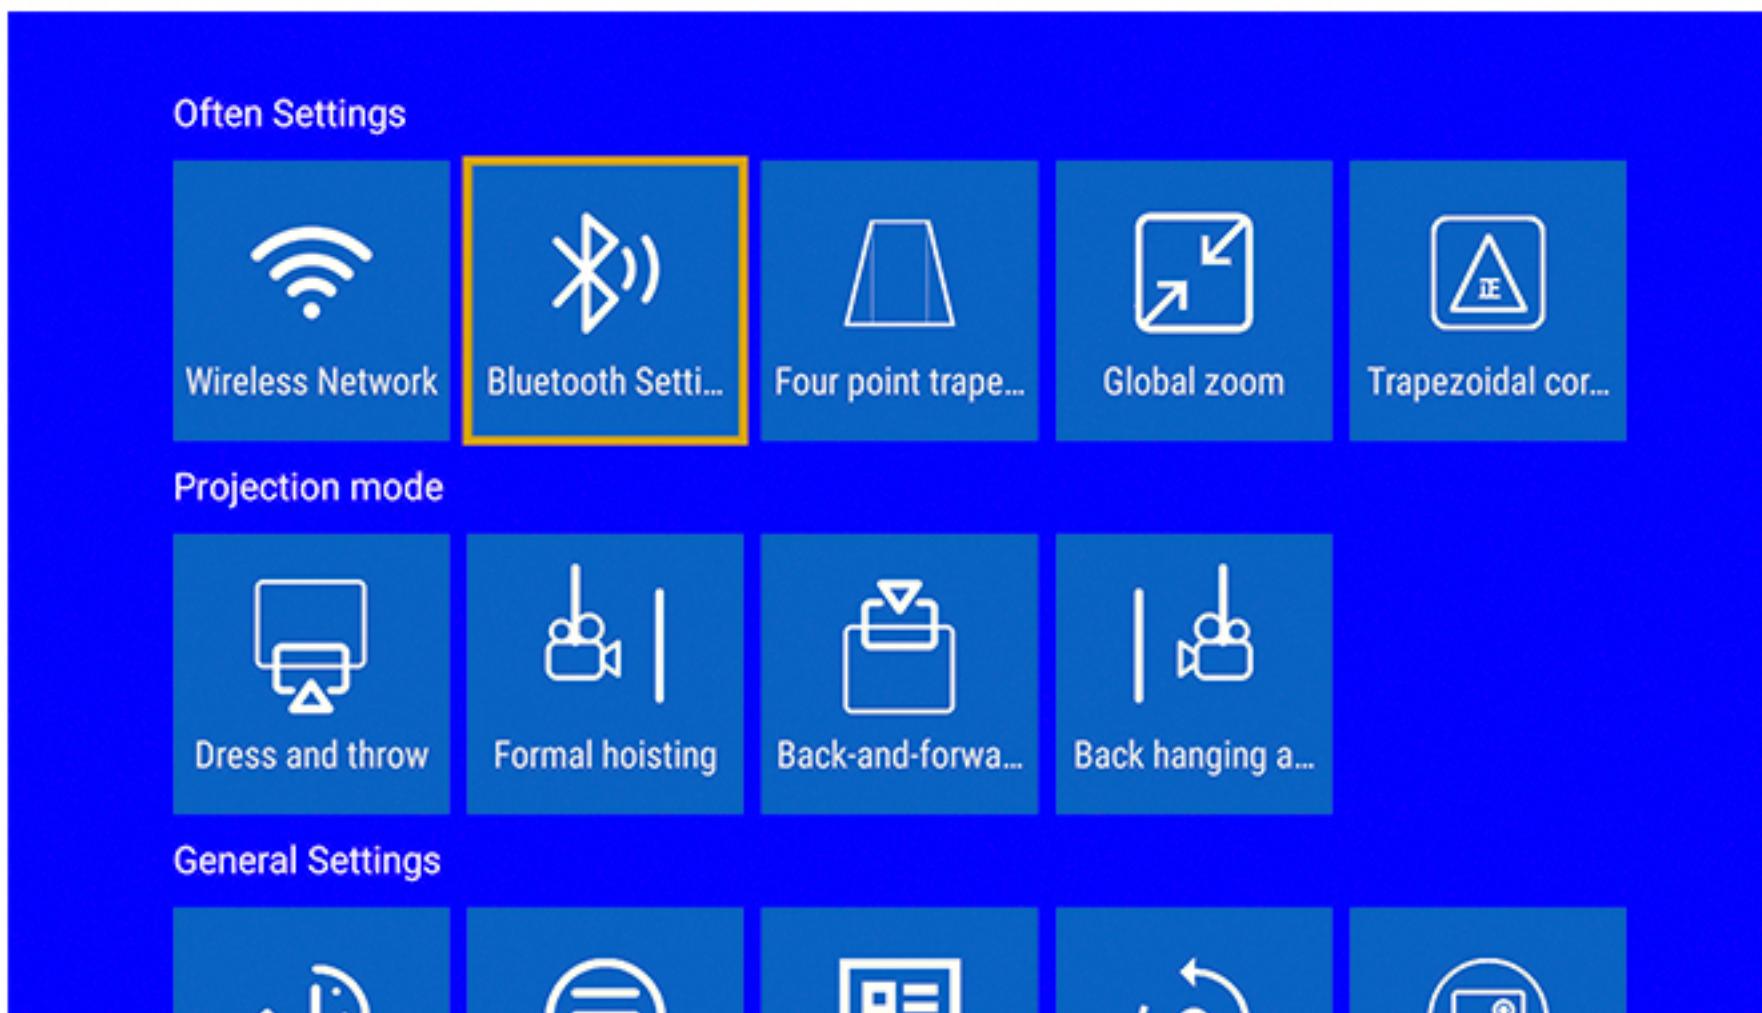


- In the Bluetooth settings interface, turn on the "Bluetooth switch", after searching for devices, select the Bluetooth device that needs to be connected.

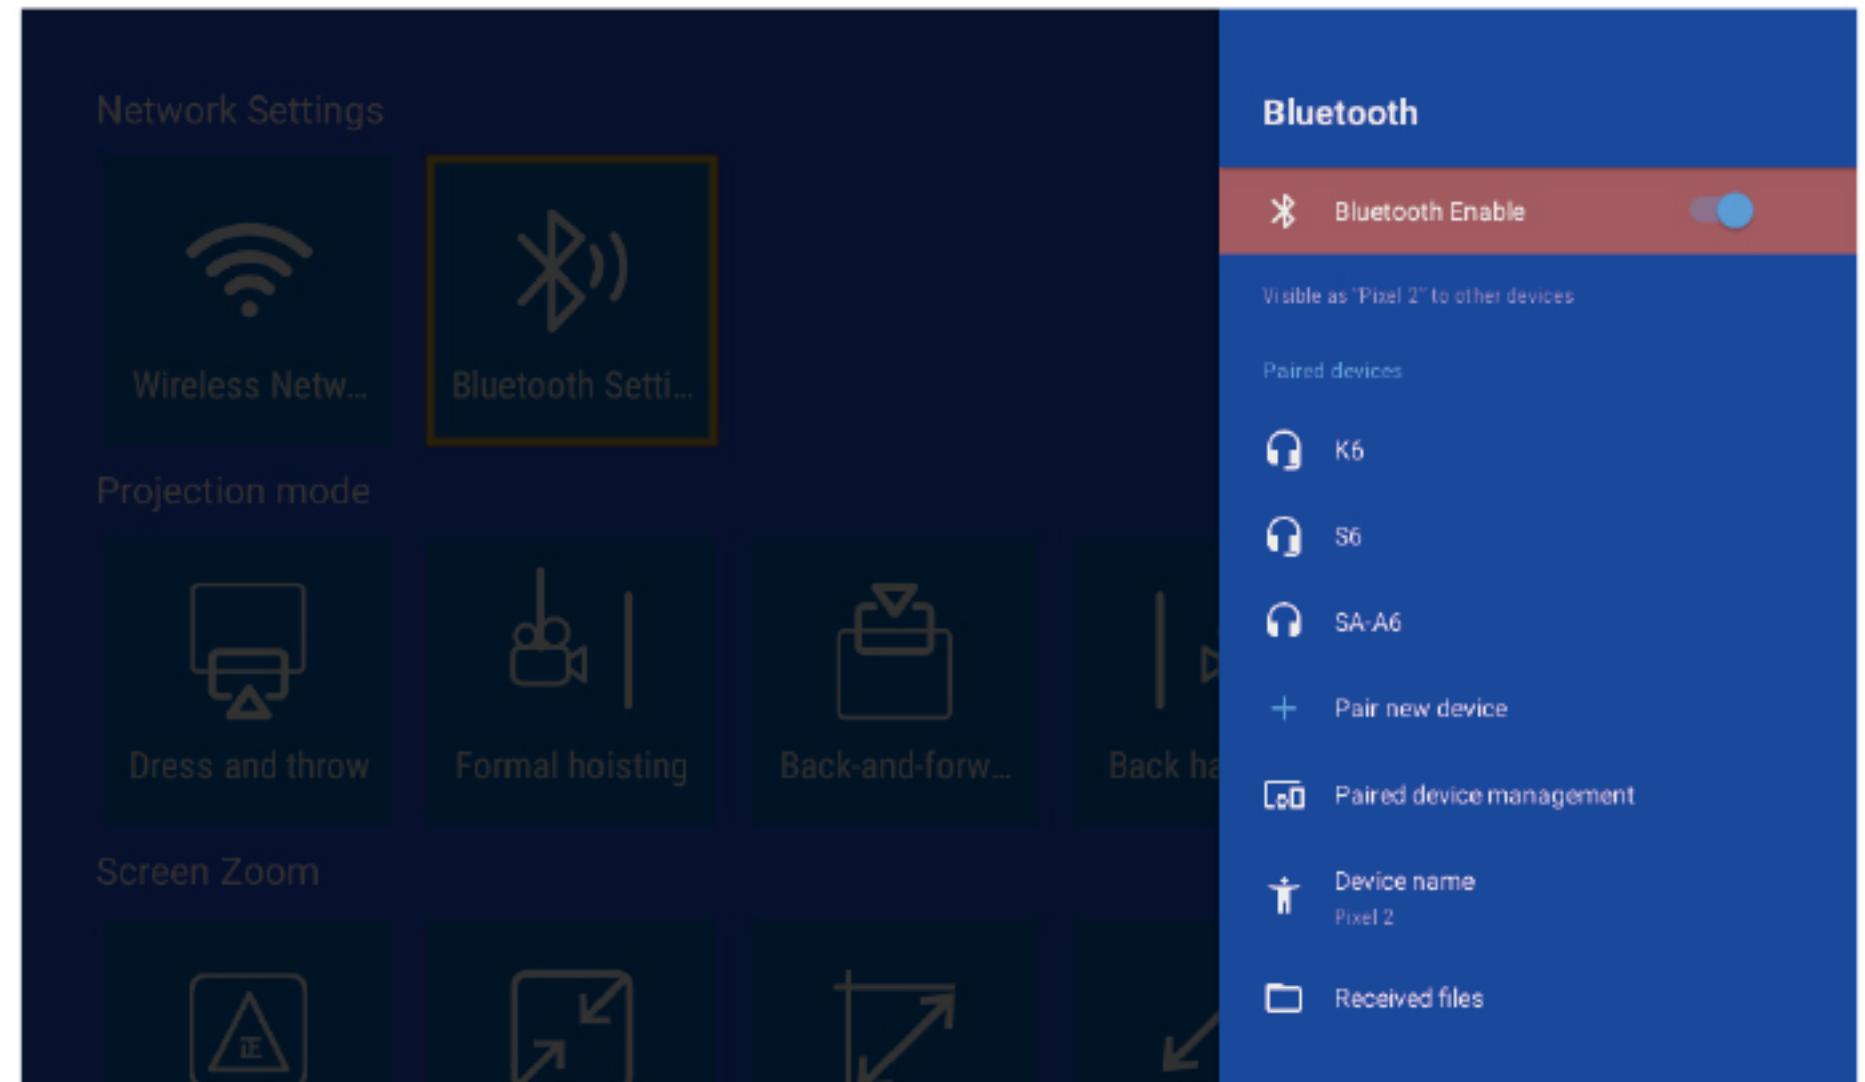


application market

- On the main page, use the arrow keys to select "App Store"

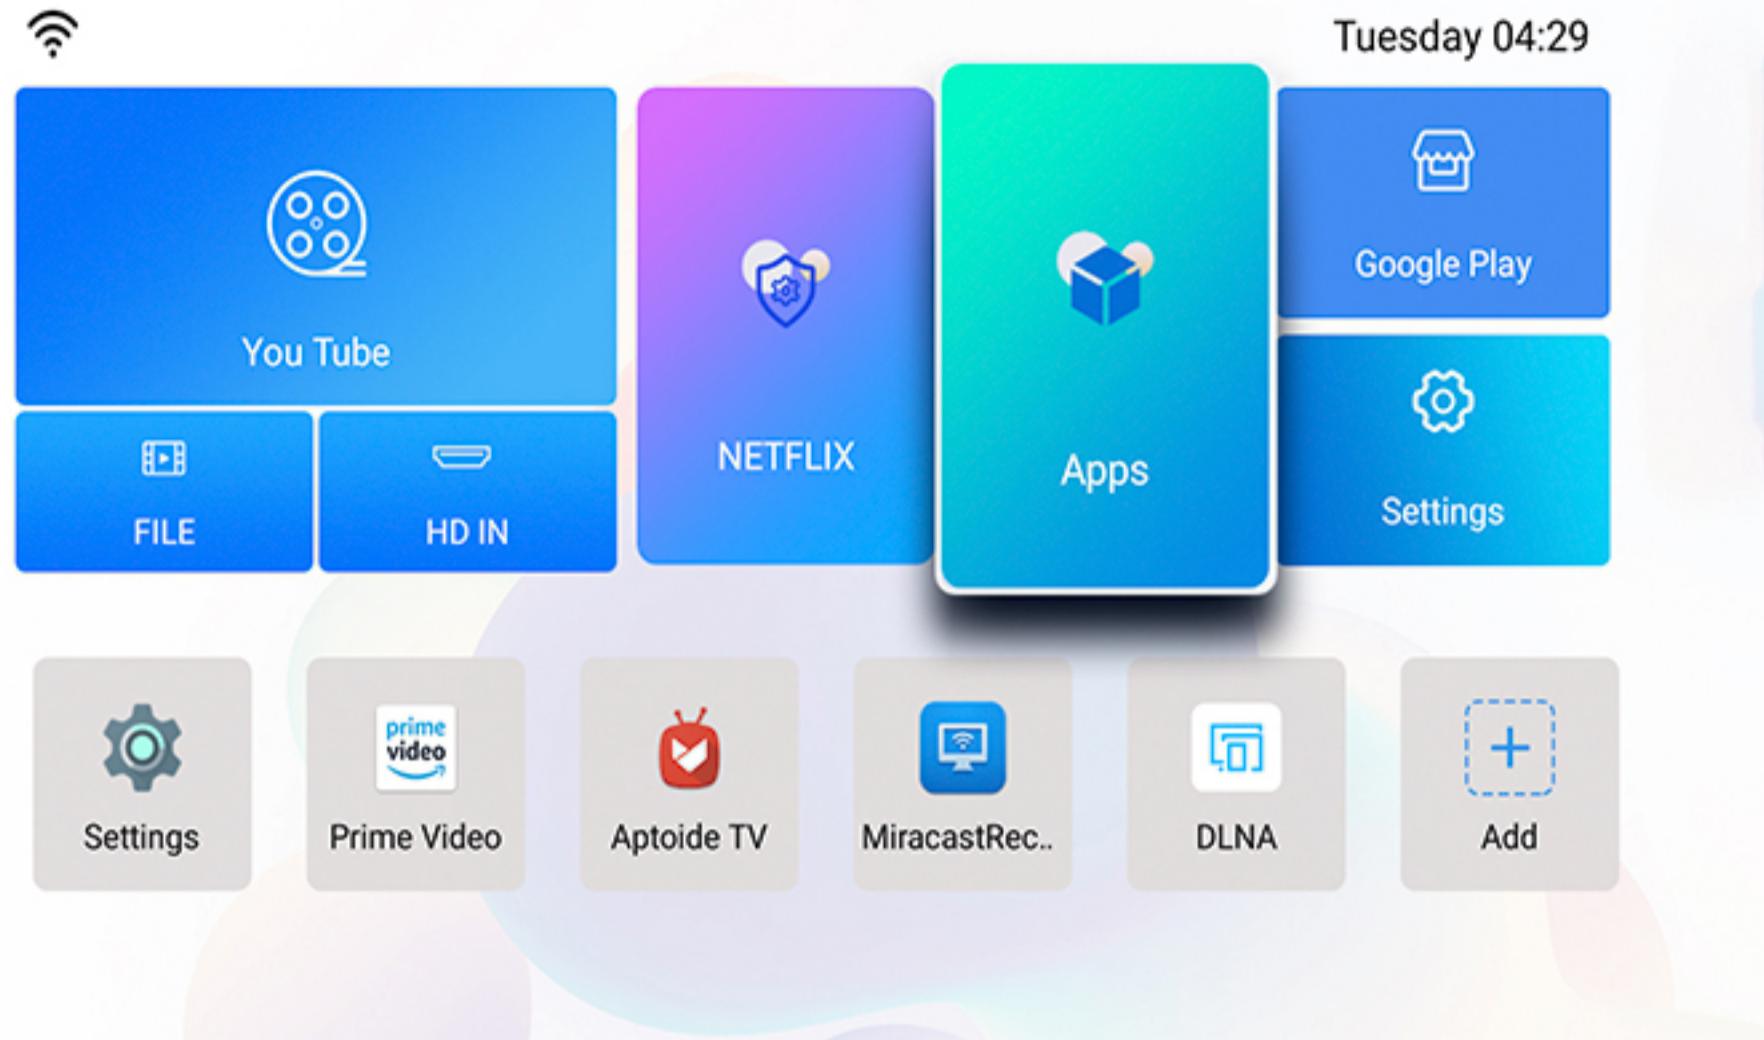


- Search to find the application you want to install, select the corresponding icon to download and install.

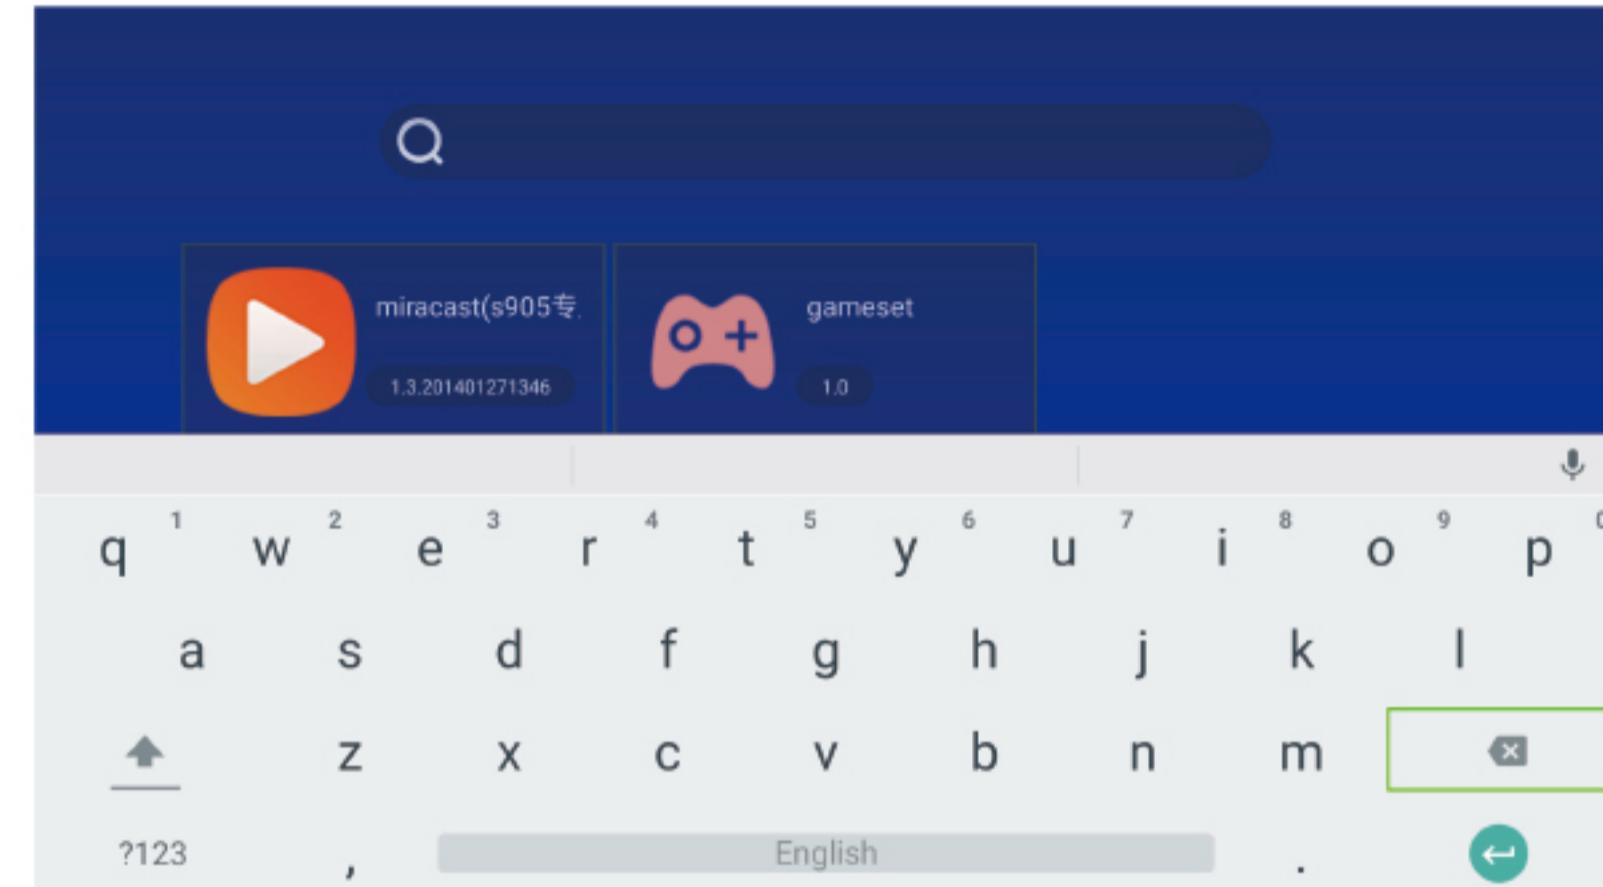

Wireless projection ➤

- On the main page, use the arrow keys to select "My Apps"

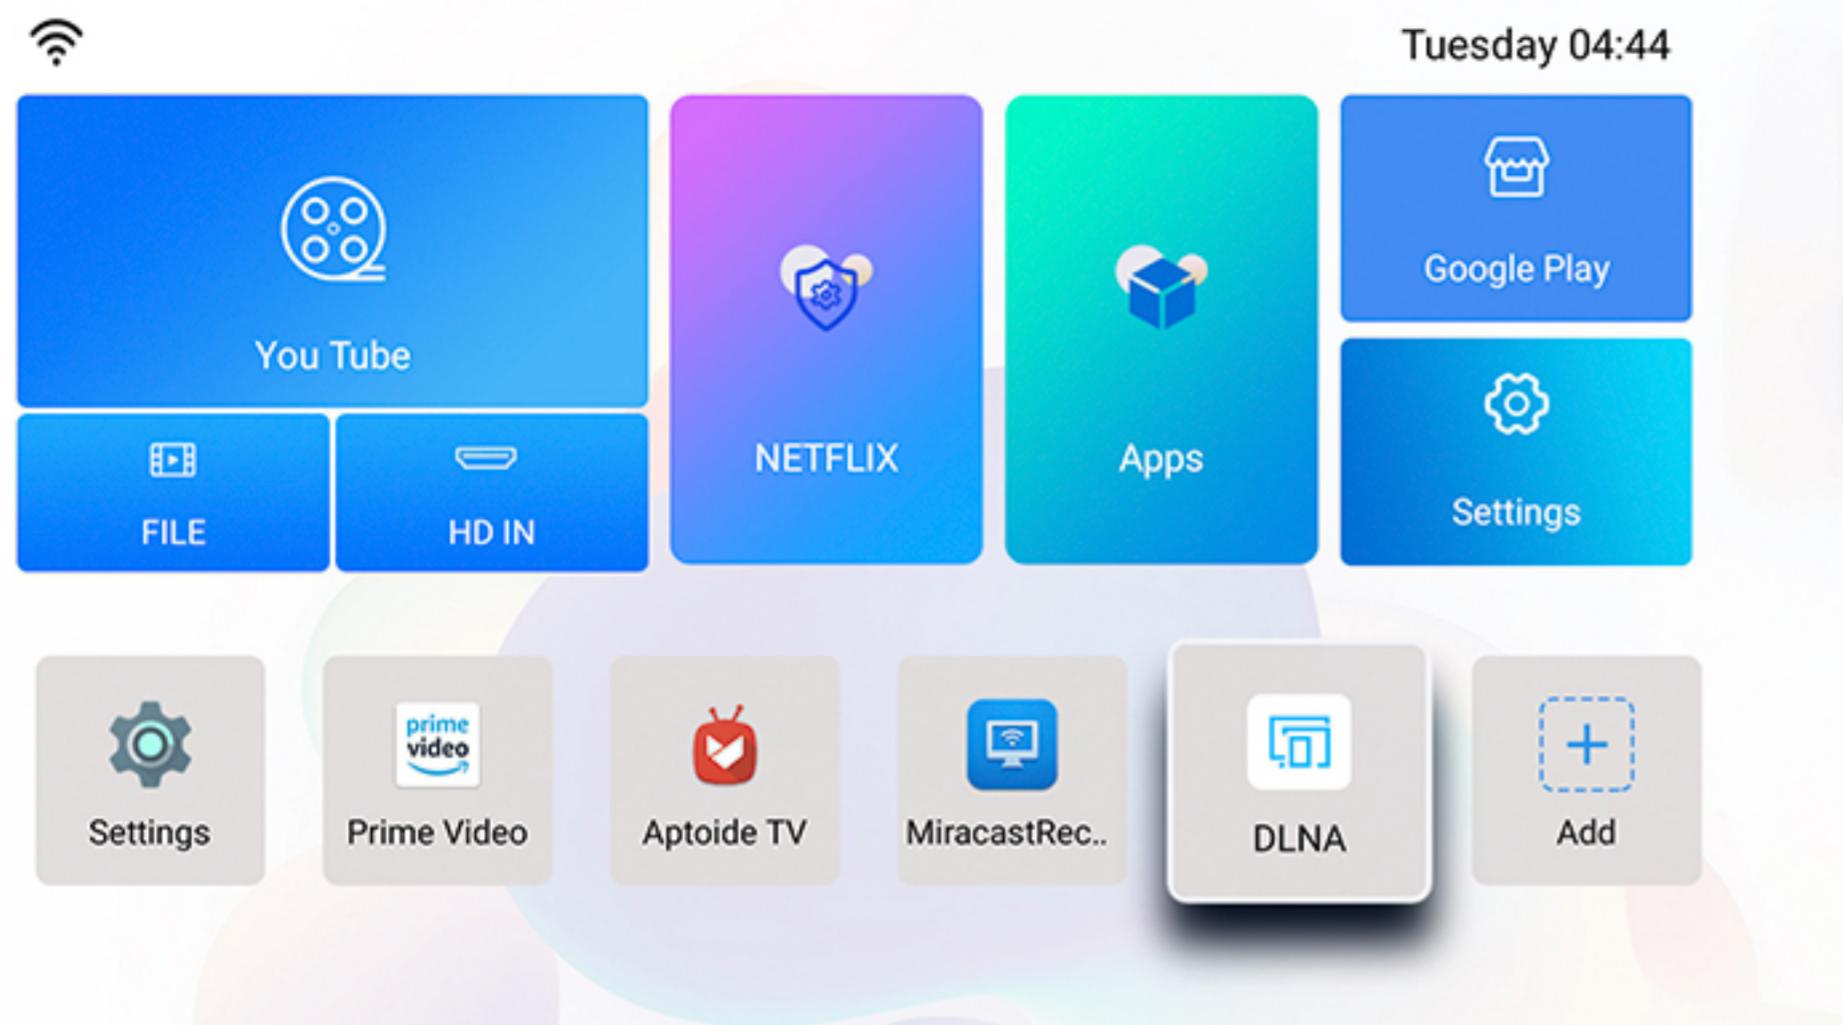

- Open the mobile video software, find the "Tv" icon in the upper right corner of the playback interface;
- Click the "TV" icon, search for your device, and click the device to cast the screen.

Note: The device name can be customized;

DLNA



Device Name:Projector

SETTING

Cast Screen Guide:

1. Make sure your device and box are on the same LAN.
2. Choose whatever video you like on apps with cast screen capability.
3. Click TV Button on your device, select this box for screencasting.

Warranty Card

1. This projector supports Three Guarantees Service. Warranty for 1 year from the date of purchase.(non-artificial damage).
2. Within warranty, we support warranty service for any failures caused by product technology.
3. The following situations are not covered by the warranty:
 - Accessories except the projector.
 - Products that have been disassembled and repaired without permission.
 - Damage caused by external force and other natural disasters.
4. When the product fails, please contact the dealer or supplier in time to arrange for repair with this warranty card.
5. This warranty liability is limited to product failure repairs within the warranty period.

Warranty Card

Client Name: _____

Client ID: _____

Purchase shop: _____

Client Phone Number: _____

Return Address: _____

Fault description: _____

(For quick repair, please describe in detail):_____

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure com