



61295 Window Box  
12" L x 5.75" D x 5" H

**VEHICLE**

**WHEEL ALIGNMENT**

1. Turn the power switch to the OFF position.  
2. Use a Phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.  
3. Open the battery compartment door.  
4. Remove old batteries and replace with 4 new 1.5V "AA" batteries.  
5. Close the battery compartment door and tighten the screw.

**TRANSMITTER**

1. Use a Phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.  
2. Open the battery compartment door.  
3. Remove old batteries and replace with 2 new 1.5V "AA" batteries.  
4. Close the battery compartment door and tighten the screw.

**HOW TO OPERATE:**

Turn the vehicle switch "ON".

- Push speed control stick forward (upwards) to drive forward.
- Push speed control stick backward (downwards) to drive in reverse.
- Release speed control stick to neutral position to stop the vehicle.

**WHEEL ALIGNMENT:**

Adjust the lever under the chassis when the steering is not properly aligned.

**BATTERY REPLACEMENT:**

**VEHICLE:**

1. Turn the power switch to the OFF position.
2. Use a Phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.
3. Open the battery compartment door.
4. Remove old batteries and replace with 4 new 1.5V "AA" batteries.
5. Close the battery compartment door and tighten the screw.

**TRANSMITTER:**

1. Use a Phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.
2. Open the battery compartment door.
3. Remove old batteries and replace with 2 new 1.5V "AA" batteries.
4. Close the battery compartment door and tighten the screw.

**HOW TO OPERATE:**

Turn the vehicle switch "ON".

- Push speed control stick forward (upwards) to drive forward.
- Push speed control stick backward (downwards) to drive in reverse.
- Release speed control stick to neutral position to stop the vehicle.

**WHEEL ALIGNMENT:**

Adjust the lever under the chassis when the steering is not properly aligned.

**BATTERY CAUTION:**

1. Rechargeable batteries are not recommended.
2. Alkaline batteries are recommended.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are to be removed from the toy before being charged.
5. Rechargeable batteries are only to be charged under adult supervision.
6. Do not mix alkaline (standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries).
7. Do not mix old and new batteries.
8. Only batteries of the same or equivalent types as recommended are to be used.
9. Batteries are to be inserted with the correct polarity.
10. The supply terminals are not to be short-circuited.
11. Batteries are loose, bend out the contacts for a tight fit.
12. Exhausted batteries must be removed from the toy and be disposed of immediately. Do not put the batteries in a fire.
13. If storing product for long periods of time, make sure to remove batteries.
14. Check the product periodically for signs of damage to electrical parts; do not play with product until damage has been properly assessed.

**WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.**

**27MHz**

**5+**

**INSTALLING THE ANTENNA**

Don't put in trash. Recycle or dispose as hazardous waste.

**Alkaline batteries are recommended. Batteries should be installed by adults only.**

**TRANSMITTER**

2 x 1.5V "AA" (NOT INCLUDED)

**FORWARD / BACKWARD**

**LEFT / RIGHT**

**CE**

Grandtack Int'l Development, Ltd.  
3/F East Ocean Ctr, Granville Rd.,  
TST, Hong Kong

**NO. 61295**  
**MADE IN CHINA**

8 83788 61295 1

All rubber bands, plastic and wire ties, as well as tags, are not part of this toy and should be discarded for your child's safety. Remove wire ties before giving toy to child. Please keep this packaging for future reference. Colors, design & contents may vary.

NO. 61295

NO. 61295

NO. 61295