


PRODUCT MANUAL



TOY LI
STORY

ENGLISH

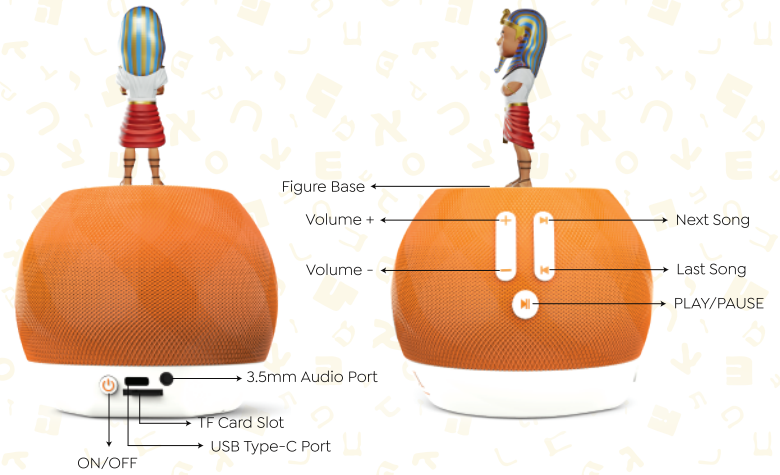

ON/OFF

Long Press to turn on and off.

MODE SELECTION

- The default setting is in Figurine mode.
- Press the POWER button to switch between Bluetooth and Figurine mode.

IN FIGURINE MODE

- Put a fig on the top of the speaker to play the audio accordingly. Each fig has customized recordings inside.
- Put it on to play and take it off to stop.
- LEDS flash slowly in orange color when no fig on the top.

IN BLUETOOTH MODE

- Press the power button to Bluetooth mode.
- Pair the speaker with a corresponding device within bluetooth range.
- LEDS flash rapidly in orange color when no device paired.

PAUSE/PLAY BUTTON

- Press PAUSE/PLAY button to stop the play
- Press again to resume the play

FORWARD / BACKWARD BUTTON

Press FORWARD button or BACKWARD button to skip to the next.

RECHARGEABLE BATTERY

When the device remained 15% battery power, it will play a voice message to remind you to charge the speaker, it will play once again in 10mins and again in 5 mins until it will turn off automatically.

INDICATIONS

LED Lighting will be off when the speaker in PAUSE or IDLE status to save battery power.

ADDITIONALS

- Battery Capacity : 2,500mAh
- 3.5mm Audio Port
- USB Type-C Port
- TF Card Slot
- Power Input: 5V DC/1A

COMPLIANCE

CE, UKCA, FCC, RoHS, CPSIA, GCC



0-3

TOY LI
STORY



Subscribe quickly!
WWW.TOY-LI.COM

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception which can be determined by turning the device off and on the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

