

QS-MS03 迪士尼系列无线鼠标
使用说明书

包装清单



▶ 无线鼠标x1



▶ 接收器x1



▶ AA碱性电池x1

 
 


▶ 说明书&保修卡x1

温馨提示

1. 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
2. 请勿将产品放入水或其他任何液体中, 此产品非防水设计。
3. 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
4. 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。
5. 请勿将此产品放置于热源附近或直接暴露于火源附近。
6. 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

产品示意图

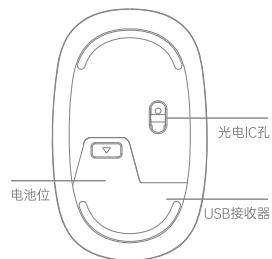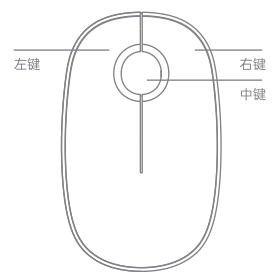


产品规格

产品尺寸: 97.49x60.02x29.69mm
 产品重量: 42.0±5.0g
 传输距离: 15m
 鼠标按键寿命: 300万次
 鼠标分辨率: 1600DPI
 鼠标回报率: 125Hz

系统支持

IBM或兼容计算机
 Windows:WinXP/Win7/8/10/11
 Mac OS X10.5或以上更高版本
 兼容USB1.1/2.0/3.0接口

 使用方法

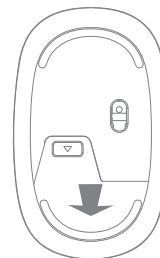


1 打开电池盖

使用方法




 2 装入电池 (正负极正确)
 注意: 使用前请先撕掉电池的绝缘保护膜

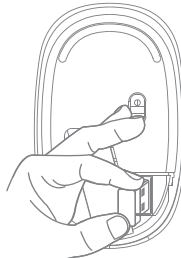

3 取出接收器

 使用方法

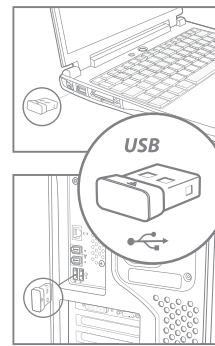

4 插入电脑USB接口

产品中有有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制
 ○表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下;
 X表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。
 家标标之“X”的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。

本表格依据SJ/T11364的规定编制
 印刷电路组件*包括印刷电路板及其零部件,电子元器件等。
 根据产品型号不同,您所购买的产品可能不会含有以上所有部件

10 在中华人民共和国境内销售的电子电气产品必须标识此标志,标志内的数字代表在正常的使用状态下的产品的环保使用期限。



保修声明

免责声明
 本使用手册没有任何形式的担保、立场表达或其他暗示。本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。

 
保修声明
 自本文件附随的产品做如下保证: 如产品在您购买日起十二(12)个月(“保修期”)内, 在正常使用情况下因质量问题发生损坏, 可免费修理、免费更换; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(最短不少于30天)内继续享有保修。购买自以销售发展日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三(13)个月计算。

- 如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况:
1. 超过三年有效期的;
 2. 涂改保修卡、产品编号与产品本体不符;
 3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
 4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
 5. 因火灾、雷击或电压过大而损坏;
 6. 因超载过重造成的脱线或断裂;
 7. 任何因安装不当造成的损坏;
 8. 有损坏或不兼容的产品;
 9. 因擅自拆卸造成的损坏;
 10. 产品在正常使用过程中发生的老化、褪色、磨损、破裂和其他损耗。

11. 如产品原有标识标签被更改或损坏, 本保证将失效。
 产品及维修物料的准备和外购均好不属于保证范围, 您应在接收产品时当场检验并针对任何不符提出异议。

以上保证是我们对产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律法规定不能排除或限制的消费者权益。

服务热线: 400-885-8808

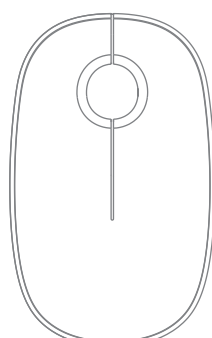

QS-MS03 Disney Series
Wireless Mouse
Operation Instructions

Packing list



▶ Mouse X 1



▶ Receiver X 1



▶ Alkaline Battery X 1

 
 


▶ Instructions & Warranty Card X1

Tips

1. Do not attempt to disassemble or replace any parts inside the product, except for the operation methods specified in the manual.
2. Do not put the product into water or any other liquid, as this product is not designed to be waterproof.
3. If any liquid accidentally enters the product, please immediately disconnect and remove the product.
4. To avoid electric shock, please ensure that your hands are not wet when installing or uninstalling the product.
5. Please do not place this product near a heat source or directly expose it to a fire source.
6. Do not place this product in an environment with strong electromagnetic force, otherwise it may cause product malfunction.

Product diagram

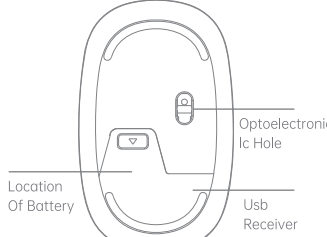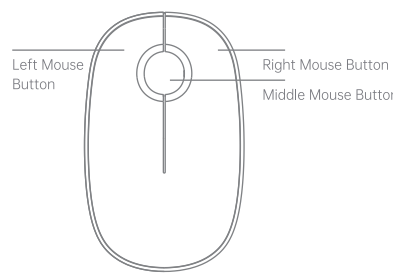


Product specifications

Product size: 97.49x60.02x29.69mm
 Product weight: 42.0 ± 5.0g
 Transmission distance: 15m
 Mouse button lifespan: 3 million times
 Mouse resolution: 1600DPI
 Mouse return rate: 125Hz

System support

IBM or compatible computer
 Windows:WinXP/Win7/8/10/11
 Mac OS X10.5 or higher
 Compatible with USB 1.1/2.0/3.0 ports

 Usage

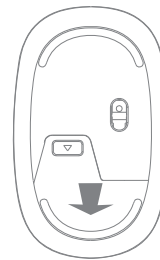


1 Open battery cover

Usage




 2 Put in the battery
 Note: Please tear off the insulating protective film of the battery before use.

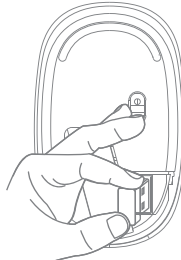

3 Take out the receiver

 Usage

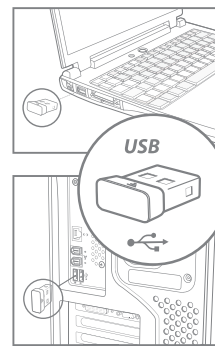

4 Plug receiver into USB interface

The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.
 ○ Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.
 X Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.

The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.
 Printed circuit board components:
 Including printed circuit boards and their parts, electronic components, etc. and depending on the product model, the earbuds you purchased may not contain all the above components.

Electronic and electrical products sold in the People's Republic of China must mark the LOGO, the number in the logo represents the product under normal use Environmental protection use period.



Warranty Statement

Disclaimer
 This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:
 The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period") under normal conditions of use due to quality defects damaged, can be repaired, free repair; free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sole the ticket date shall prevail; the purchase date cannot be determined, the warranty period shall be 13 (13) months.
 If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

- The above guarantee does not apply to the following situations:
1. Exceeding the validity period of the three packs;
 2. Altering the warranty card and product code does not match the product body;
 3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage; obstacles or damage;
 4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident loss;
 5. The zipper and lower buckle are damaged due to excessive force;
 6. Disconnection or tearing caused by excessive load;
 7. Any damage caused by sharp objects;
 8. Products with signs of burning or flooding;
 9. Damage caused by unauthorized disassembly;
 10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product;
 11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

E-mail: service@keesion.com

