 



QS-30 说明书成品尺寸：73X93mm 80g 铜版纸 钢琴折

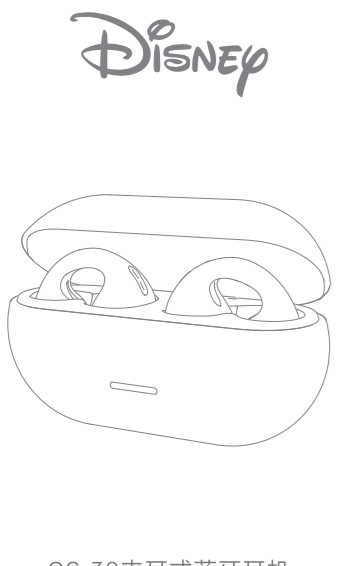

QS-30夹耳式蓝牙耳机
使用说明书

包装清单



耳机X2 充电仓X1 Type-C充电线X1 说明书&保修卡X1

产品结构



①指示灯 ②Type-C充电孔 ③出音孔 ④功能键 ⑤充电触点

温馨提示

- 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他任何液体中, 此产品非防水设计。
- 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
- 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。
- 请勿将此产品放置于热源附近或直接暴露于火源附近。
- 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

产品参数

耳机参数:
蓝牙版本: V5.3
传输距离: >10米
音乐时间: 约4小时
待机时间: 约40小时
充电时间: 约1小时
电池容量: 30mAh/5.7V
喇叭尺寸: 10mm
额定输入: 5V 30mA

充电盒参数:
电池容量: 250mAh/3.7V
充电时间: 约1小时
额定输入: 5V 230mA
(所有技术信息以实际性能为准)

给充电仓充电用Type-C充电线连接充电仓到5V电源适配器。
耳机充电不亮灯, 充电仓充电红灯慢闪, 满电仓灯亮, 充电仓给耳机充电, 充电仓亮白灯, 耳机满电灯灭
(温馨提示: 低电提示, 电压低于3.2V (每隔60秒提示一次), 提示音 (叮咚))

产品操作说明

①开机
长按功能键3秒开机
(语音提示: “嘟”)

②关机
长按功能键6秒关机
(语音提示: “嘟”)

③蓝牙配对
开机后设置自动进入左右单边耳机配对状态, 左右耳会自动连接, 连接成功后, 主耳进入配对状态, 副耳进入待机状态。设备名: QS-30; (语音提示: “嘟”)
步骤二: 打开智能设备的蓝牙列表, 搜索“QS-30”并连接

连接设备成功:
语音提示: “嘟”


使用方法

- 用一只手按住耳朵, 像戴耳环一样夹在耳朵上。
- 首先夹在耳朵上方, 上下移动调整到最佳听声音的位置。
- 注意珠子小的在前, 大的在后, 请不要戴错前后。



 
功能键操作

■ 常规模式



功能键的位置和按下方法
BUTTON(按压式)
功能键按钮在左右各自的右侧, 通过按钮的点击可以进行基本的操作。
注意: 不是触摸操作, 需要轻轻按下按钮。

■ 语音助手/模式切换

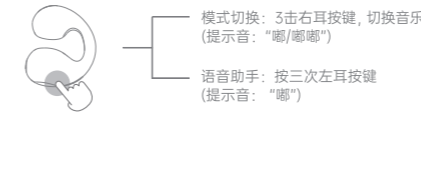


模式切换: 5击右耳按键, 切换音乐/游戏模式 (提示音: “嘟/嘟嘟”)
语音助手: 按三次左耳按键 (提示音: “嘟”)

清除配对

4击耳机关键, 清除配对。清除配对, 是指清除耳机上的配对连接。


功能键操作

 ■ 通话模式



接听来电: 单击任意耳机关键
结束通话: 单击任意耳机关键
拒接电话: 长按2秒任意耳机关键

 ■ 语音助手/模式切换

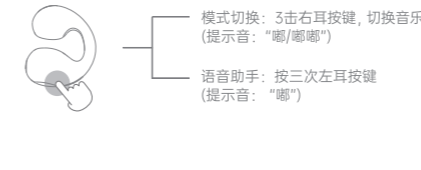

模式切换: 5击右耳按键, 切换音乐/游戏模式 (提示音: “嘟/嘟嘟”)
语音助手: 按三次左耳按键 (提示音: “嘟”)

清除配对

4击耳机关键, 清除配对。清除配对, 是指清除耳机上的配对连接。

产品中有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T11564的规定编制
O:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。
X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。
注:本表格中“X”的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。

本表格依据SJ/T11564的规定编制
印刷电路板组件*包括印刷电路板及其零部件, 电子元器件等, 根据产品类型不同, 您所购买的产品可能不会含有以上所有部件

10
在中华人民共和国境内销售的电子电气产品必须标识此标志, 标志内的数字代表在正常的使用状态下的产品的环保使用期限。

合格证

产品编号: _____
生产日期: _____
销售员: _____

保修声明


免责声明
本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。

保修声明:
就本文件附随的产品做如下保证: 如产品在您购买日起十二(12)个月(“保修期”)内, 在正常使用情况下因质量问题发生损坏, 能修理的, 免费修理, 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(不少于30天)内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三(13)个月计算。

如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整且清晰填写的有效销售发票, 以上保证不适用于下列情况:
1. 超过三包有效期的;
2. 涂改保修卡、产品编码与产品本体不符;
3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
5. 因人为原因导致的故障或损坏;
6. 因超载过重造成的脱线或断裂;
7. 任何因尖锐物体造成的损坏;
8. 有涂鸦或水浸迹象的产品;
9. 因擅自拆改导致的损坏;
10. 产品在正常使用过程中发生的老化、褪色、磨损、破裂和其他损耗。
11. 如产品原有标识标签被更改或脱落, 本保证将失效。
产品及随附物料的齐备和外观完好不属于保证范围, 您应在接收产品时当场检验并对任何不符提出异议。


以上保证是我们就产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

服务监督热线: 400-885-8808



 
QS-30 clip-on Bluetooth headset
an instruction manual

Packing list



Earphone X2 Charging box X1 Type-C Charging Cable X1 Instructions & Warranty card X1

Product structure

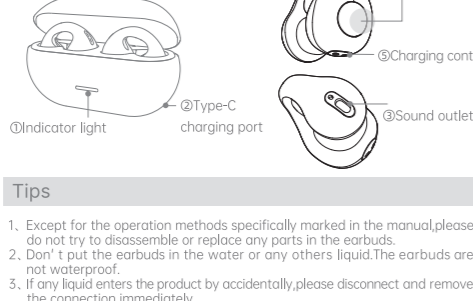

①Indicator light ②Type-C charging port ③Function key ④Charging contact ⑤Sound outlet hole

Tips

- Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- Don't put the earbuds in the water or any others liquid. The earbuds are not waterproof.
- If any liquid enters the product by accidentally, please disconnect and remove the connection immediately.
- Please make sure that there is no water on your hands when installing or uninstalling the product to avoid electric shock.
- Do not put the product near by the heat source or expose it to the fire source directly.
- Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Product parameter

 
Headset parameters:
Bluetooth version: V5.3
Transmission distance: >10 M
Music time: About 4 hours
Standby time: About 40 hours
Charging time: About 1 hours
Battery capacity: 30mAh/5.7V
Horn size: 10mm
Rated input: 5V 30mA

Charging box parameters:
Battery capacity: 250mAh/3.7V
Charging time: About 1 hours
Rated input: 5V 230mA
(All technical information is subject to actual performance)

Charge the charging box Connect the charging box to the 5V power adapter with a Type-C charging cable.
The headphone does not turn on the light when charging, the red light in the charging bin flashes slowly, and the red light keeps on long after a full charge;
The charging compartment charges the earphone. The charging compartment lights up white, and the earphone is full
(Warm warning: low voltage warning, voltage below 3.2V (once every 60 seconds) warning sound (ding dang))

Usage method

- Press one hand over your ear and clip it like an earring.
- First clip it above the ear and move it up and down to the best listening position.
- Pay attention to the small beads in the front, the big beads in the back, please do not mistake before and after.

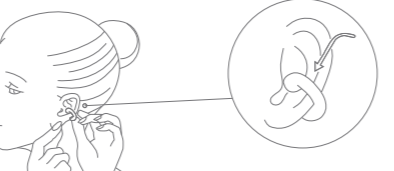

Product Operation Instructions

① Power on
Long press the function button for 3 seconds to power on
(Voice prompt: "beep")

② Shutdown
Long press the function button for 6 seconds to power off
(Voice prompt: "beep beep")

③ Bluetooth pairing
Step 1: After turning on and off, set to automatically enter the pairing state of left and right unilateral earphones, and the left and right ears will be automatically connected. After successful connection, the main ear will enter the pairing state, and the secondary ear will enter the online state. Device name: QS-30; (Voice prompt: "beep")
Step 2: Open the Bluetooth list of smart devices, search for "QS-30" and connect

Successfully connecting the device:
The voice message: "beep"

 
Function key operation

Front BACK

Function key location and press method
BUTTON (pressing type)
The function buttons are on the left and right respectively. Basic operations can be performed by clicking buttons.
Note that it is not a touch operation, you need to gently press the button.


Function key operation

■ General mode

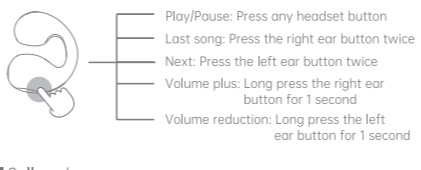


Play/Pause: Press any headset button
Last song: Press the right ear button twice
Next: Press the left ear button twice
Volume plus: Long press the right ear button for 1 second
Volume reduction: Long press the left ear button for 1 second

 ■ Call mode

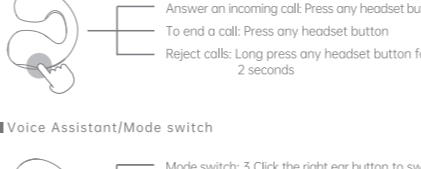

Answer an incoming call: Press any headset button
To end a call: Press any headset button
Reject calls: Long press any headset button for 2 seconds

 ■ Voice Assistant/Mode switch

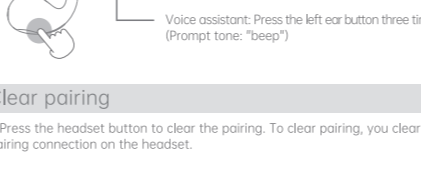

Mode switch: 5 Click the right ear button to switch the music/game mode (Prompt tone: "beep/beep")
Voice assistant: Press the left ear button three times (Prompt tone: "beep")

Clear pairing

4 Press the headset button to clear the pairing. To clear pairing, you clear the pairing connection on the headset.

The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11564.
O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.
X: Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.
The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.
Printed circuit board components:
Including printed circuit boards and their parts, electronic components, etc. and depending on the product model, the earbuds you purchased may not contain all the above components.

10
Electronic and electrical products sold in the People's Republic of China must mark this LOGO, the number in the logo represents the product under normal use Environmental protection use period.

Certificate of Approval

Product No.: _____

Production Time: _____

QC: _____

Warranty statement

Disclaimer
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged can be repaired. Free repair, free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sole the ticket date shall prevail if the purchase date cannot be determined, the warranty period shall be 15 (15) months.
If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:
1. Exceeding the validity period of the three packs;
2. Altering the warranty card and product code does not match the product body;
3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage obstacles or damage;
4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident body;
5. The zipper and tower buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or flooding;
9. Damage caused by unauthorized disassembly;
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

Service supervision hotline: 400-885-8808

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
FCC ID: 2BAQF-QSD0001