

TF-T02

说明书成品尺寸：73X93mm128铜版纸覆哑膜钢琴折

包装清单

- 耳机X2
- 充电仓X1
- 说明书&保修卡
- Type-C充电线X1

产品示意图

- 指示灯和触摸区域
- 麦克风
- 充电触点
- LED指示灯
- Type-C充电口

温馨提示

- 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他任何液体中, 此产品非防水设计。
- 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
- 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。
- 请勿将此产品放置于热源附近或直接暴露在火源附近。
- 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

产品规格

蓝牙版本: V5.3
传输距离: 10米
音乐时间: 约5小时
通话时间: 约3.5小时
待机时间: 约90小时
喇叭尺寸: ϕ 15mm
充电时间: 1.5小时
电池容量: 33mAh
额定输入: 5V \Rightarrow 30mA

充电仓规格

电池容量: 300mAh
充电时间: 1.5小时
额定输入: 5V \Rightarrow 300mA
可供耳机充电次数: 约3次
(所有技术信息以实际性能为准)

给充电仓充电
Type-C充电线连接充电仓到5V电源适配器。
(温馨提示: 耳机电量低于3.3V 开始播报低电量提醒(声音提示: battery low), 红灯闪烁, 每1分钟提醒一次请及时给耳机充电)

额定输入: 5V \Rightarrow 30mA (耳机) 额定输入: 5V \Rightarrow 300mA (充电仓)

LED指示状态

开机	红灯灯交替闪
关机	红灯闪3下
配对状态	红灯灯交替闪
耳机充电	红灯常亮
给耳机充电充电盒状态	蓝灯常亮
充电仓低电量	蓝灯闪烁
给充电仓充电	红灯闪烁
充电仓充满电量	红灯常亮
恢复出厂设置	红灯快闪3次

产品操作说明

①开机
方法一: 从充电仓取出耳机, 耳机开机
方法二: 长按左/右耳机触摸区域3秒, 耳机开机
(开机提示音: "power on")

②关机
方法一: 放回充电仓, 耳机自动关机
方法二: 耳机在3分钟内没有连接设备自动关机
(关机提示音: "power off")

③配对
步骤一: 开机后, 左右耳机自动互连后进入与手机配对状态(提示音: "pairing")
步骤二: 打开手机蓝牙列表, 搜索"TF-T02"并连接
温馨提示: 左右耳机出现不配对时, 请恢复出厂设置, 放回充电仓再打开自动配对

连接设备成功:
语音提示: "connected"

触摸操作

■ 常规模式

- 语音助手: 长按左耳机2秒启动/关闭("滴"声释放)
- 音量加: 单击右耳机
- 音量减: 单击左耳机

■ 音乐播放模式

- 播放/暂停: 双击任意耳机触摸键
- 上一曲: 三击左耳机
- 下一曲: 三击右耳机

■ 通话模式

- 接听来电: 双击任意耳机触摸键
- 结束通话: 双击任意耳机触摸键
- 拒接电话: 长按任意耳机触摸键2秒

■ 游戏/音乐模式切换

- 音乐模式: 长按右耳机触摸键2秒(提示音: "music mode")
- 游戏模式: 长按右耳机触摸键2秒(提示音: "game mode")

恢复出厂设置

左右耳机开机组队未与设备连接状态下, L/R连击5下, 耳机红灯快闪3下关机, 恢复出厂设置成功。

产品中有毒物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路板组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制
O表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。
X表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。
表中标记"X"的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。

本表格依据SJ/T11364的规定编制
印刷电路板组件*包括印刷电路板及其零部件, 电子元器件等。
根据产品型号不同, 您所购买的产品可能不会含有以上所有部件

在中华人民共和国境内销售的电子电气产品必须标识此标志, 标志内的数字代表在正常的使用状态下的产品的环保使用期限。

保修声明

免责声明
本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。

保修声明
就本文件附随的产品做如下保证: 如产品在购买之日起十二(12)个月("保修期")内, 在正常使用情况下因质量问题而发生损坏, 能修理的, 免费修理; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(最短不少于30天)内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三(13)个月计算。
如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况:
1. 超过三包有效期的;
2. 涂改保修卡、产品编码与产品本体不符;
3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
5. 拉扯、塔扣因受力过大而损坏;
6. 因承载过重造成的脱线或撕裂;
7. 任何因尖锐物体造成的损坏;
8. 有脱落或水浸迹象的产品;
9. 因自行改装导致的损坏;
10. 产品正常使用过程中发生的老化、褪色、磨损、破裂和其他损坏。
11. 如产品原有标识标签被更改或损毁, 本保证将失效。
产品及随附物料的齐备和外观完好不属于保证范围, 您应在接收产品时当场检验并对任何不符提出异议。
以上保证是我们就产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律法规规定不能排除或限制的消费者权利。
服务监督热线: 400-885-8808

虚线做易撕线

保修卡正面

Packing list

- headset X2
- Charging Case X1
- Instructions
- Warranty card
- Type-C Charging Cable X1

Product diagram

- Indicator light and touch area
- Microphone
- Charging contacts
- LED
- Type-C charging port

Tips

- Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- Don't put the earbuds in the water or any others liquid. The earbuds are not waterproof.
- If any liquid enters the product by accidentally, please disconnect and remove the connection immediately.
- Please make sure that there is no water on your hands when installing or uninstalling the product to avoid electric shock.
- Do not put the product near by the heat source or expose it to the fire source directly.
- Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Product specifications

Bluetooth version: V5.3
Transmission distance: 10M
Music time: About 5 hours
Talk time: About 3.5 hours
Standby time: About 90 hours
Horn size: ϕ 15mm
Charging time: 1.5 hours
Battery capacity: 33mAh
Rated input: 5V \Rightarrow 30mA

Charging case specifications

Battery capacity: 300mAh
Charging time: 1.5 hours
Rated input: 5V \Rightarrow 300mA
Headset charging times: About 3 times
(All technical information is subject to actual performance)

To charge the charging box
The Type-C charging cable connects the charging bay to the 5V power adapter. (Warm tip: When the headset battery is less than 3.3V, it will broadcast a reminder of low battery (voice prompt: battery low). The red light flashes slowly, reminding once every minute. Please charge the earphone in time.

Rated input: 5V \Rightarrow 30mA (headset) Rated input: 5V \Rightarrow 300mA (charging case)

LED Indicator Status

Power On	The red and blue lights flash alternately
Power Off	The red light flashed three times
Pairing status	The red and blue lights flash alternately
Earphone charging	The red light is on
Charging the earphone	Blue light on
The charging bay is low	Blue light flashing
Charge the charging bay	Blinking red lamp
Charge bay is fully charged	The red light is on
factory data reset	The red light blinks three times

Operating instruction

①Power on
Method 1: Remove the earphone from the charging bay and turn on the earphone
Method 2: Long press the left and right earphone touch area for 3 seconds (Startup prompt tone: "power on")

②Shutdown
Method 1: Put it back in the charging bay, and the headset automatically shuts off
Method 2: If the headset is not connected within 3 minutes, the device will automatically shut down
(Shutdown prompt tone: "power off")

③Pairing
Step 1: After the device is started, the left and right earphones are automatically connected and enter the pairing state with mobile phones (prompt tone: "pairing")
Step 2: Open the Bluetooth list of the smart device, search for "TF-T02" and connect
Tips: If the left and right earphones do not match, please restore the factory Settings, put them back in the charging box and turn on the automatic pairing

Connection succeeded:
Voice prompt: "connected"

Touch operation

■ General mode

- Voice assistant: Long press left earphone for 2 seconds to start/close ("drip" sound release)
- Volume Plus: Click the right earphone
- Volume reduction: Click the left earphone

■ Music playback mode

- Play/Pause: Double click any headset touch button
- Last song: Three strikes left earphone
- Next song: Three strikes right earphone

■ Call mode

- Answer: Double click the touch button of any headset
- End Call: Double click the touch button of any headset
- Reject a call: Press and hold any headset for 2 seconds

■ Game/ Music mode switch

- Music mode: Long press the right ear touch button for 2 seconds (Sound: "music mode")
- Game mode: Long press the right ear touch button for 2 seconds (Sound: "game mode")

Restore factory settings

If the left and right earphones are powered on and not connected to the device, press L/R for 5 times, and the earphones turn off with red light flash three times. Factory Settings are restored successfully.

The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.
O indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.
X indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds The limit requirements specified in GB/T 26572.
The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.
Printed circuit board components: Including printed circuit boards and their parts, electronic components, etc. and depending on the product model, the earbuds you purchased may not contain all the above components.

Electronic and electrical products sold in the People's Republic of China must mark this LOGO, the number in the logo represents the product under normal use Environmental protection use period.

Warranty statement

Disclaimer
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only and the content will also be updated on the web at any time without additional separate notice

Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period") under normal conditions of use due to quality defects, damaged can be repaired/Free repair/free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sole the ticket date shall prevail if the purchase date cannot be determined, the warranty period shall be 13 (13) months.
If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.
The above guarantee does not apply to the following situations:
1. Exceeding the validity period of the three packs;
2. Altering the warranty card and product code does not match the product body;
3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage, obstacles or damage;
4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident loss;
5. The zipper and tower buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or flooding;
9. Damage caused by unauthorized disassembly;
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.
The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.
The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.
Service supervision hotline: 400-885-8808

虚线做易撕线

保修卡反面

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.