
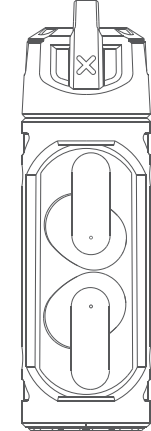


# TF-T11说明书 成品尺寸: 70X100mm 128铜版纸 覆哑膜 钢琴折

虚线做  
易撕线





### TF-T11真无线蓝牙耳机 使用说明书

#### 包装清单

	耳机 *2
	Type-C充电线 *1
	充电仓 *1
	说明书与保修卡 *1


#### 产品规格

蓝牙版本: V5.4  
传输距离: 10m  
扬声器单元:  $\phi 12\text{mm}$  32ohm  
频响范围: 20Hz-20KHz  
喇叭灵敏度: 112.5dB $\pm$ 3dB  
待机时间:  $\approx 90$ 小时  
通话时间:  $\approx 4$ 小时  
音乐播放时间:  $\approx 5.5$ 小时  
充电时间(充电仓):  $\approx 1.5$ 小时  
电池容量(充电仓): 300mAh  
充电时间(耳机):  $\approx 30$ 分钟  
电池容量(耳机): 33mAh

#### 充电仓充电规格

Type-C充电线连接充电仓到5V电源适配器。  
(温馨提示: 耳机电池电量低于3.3V开始播报低电提醒(声音提示: "battery low"), 白灯慢闪, 每1分钟提醒一次请及时给耳机充电)

#### 产品示意图

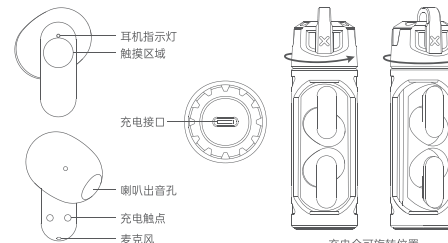

#### 温馨提示

- 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他任何液体中, 此产品非防水设计。
- 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
- 为避免触电, 请在安装或即戴产品时, 确保手上没有沾水。
- 请勿将此产品放置于热源附近或直接暴露在火源附近。
- 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

#### 产品操作说明



进入设备配对状态:  
主耳白灯冰蓝灯交替



#### LED指示灯状态

开机	冰蓝灯长亮1秒
关机	白灯闪烁三下
TWS配对状态	左/右耳机白灯冰蓝灯交替闪烁
进入设备配对状态	主耳白灯冰蓝灯交替闪烁
连接成功	指示灯熄灭
耳机低电量	白灯慢闪(隔5秒闪一下)
耳机充电中	耳机白灯常亮
耳机充满电	耳机白灯灭掉
充电仓充电中	冰蓝色灯慢呼吸
充电仓充满电	冰蓝色灯常亮
恢复出厂设置	白灯快闪5次

#### 触摸操作

- 常规模式**
  - 语音助手: 长按左耳机触摸区域2秒启动/关闭
  - 音量加: 单击右耳机触摸区域
  - 音量减: 单击左耳机触摸区域
- 音乐播放模式**
  - 播放/暂停: 双击任意耳机触摸区域
  - 上一曲: 三击左耳机触摸区域
  - 下一曲: 三击右耳机触摸区域
- 通话模式**
  - 接听/挂断来电: 双击任意耳机触摸区域
  - 拒接来电: 长按任意耳机触摸区域2秒
- 游戏/音乐模式切换**
  - 音乐模式: 长按右耳机触摸区域2秒(语音提示音"music mode")
  - 游戏模式: 长按右耳机触摸区域2秒(语音提示音"game mode")

#### 恢复出厂设置

耳机连接蓝牙设备状态下, 左/右耳机连击5次听到"咚"提示, 3秒内对耳机长按10秒清除耳机连接设备信息并自动关机。(语音提示音:"power off")

#### 产品中有有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路板组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制  
O:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。  
X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。  
本表格中"X"的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。

本表格依据SJ/T11364的规定编制  
印刷电路板组件\* 包括印刷电路板及其零部件,电子元器件等,根据产品类型不同,您所购买的产品可能不会含有以上所有部件

**10** 在中华人民共和国境内销售的电子电气产品必须标识此标志,标志内的数字代表在正常的使用状态下的产品的环保使用期限。

#### 保修声明

免责声明  
本使用手册没有任何形式的担保、立场表达或其他提示。本使用手册所提到的产品、规格及信息仅供参考,内容亦会随时更新于网页,恕不另行通知。

保修声明  
此文件附随的产品做如下保证: 如产品在您购买日起十二(12)个月(“保修期”)内, 在正常使用情况下因质量问题或发生损坏, 能修理的, 免费修理; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(最短不少于30天)内继续享有保修。购买日以销售发票日期为准; 如无确定购买日, 则保修期自产品生产日期起按十三(13)个月计算。

如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况:  
1. 超过三包有效期的;  
2. 涂改保修卡、产品编码与产品本体不符;  
3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;  
4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;  
5. 碰撞、磕和因受外力过大而损坏;  
6. 因承载过重造成的脱线或断裂;  
7. 任何因安装物体造成的损坏;  
8. 有脱落或水迹迹象的产品;  
9. 因擅自修改导致的损坏;  
10. 产品在正常使用过程中发生的老化、变色、磨损、破裂和其他损耗。  
11. 如产品原有标识被篡改或更改, 本保证将失效。  
产品及随附物料的齐备和外观完好不属于保证范围, 您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

服务热线: 400-885-8808

#### 合格证

产品编号: \_\_\_\_\_  
生产日期: \_\_\_\_\_  
电 话 号: \_\_\_\_\_

#### 保修卡

尊敬的用户, 本保修卡是您将来申请保修的凭证, 请您配合销售商填写并妥善保管备用!

#### 用户信息

用户姓名	电子邮箱
联系电话	邮政编码

#### 通讯地址

产品名称	产品型号
产品条码/编号/批号	

#### 销售商信息

名 称	
地 址	
联系电话	邮政编码
销售日期	发票号码
备 注	

#### Warranty Service

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

#### User info

User name	Email
Contact number	Postal code
Mailing address	


#### Product information


Product name	Product number
Product barcode / Serial number / Batch number	

#### Vendor information

Name	
Address	
Contact number	Postal code
Sales date	Invoice number
Remark	

Certificate of Approval  
Product No.: \_\_\_\_\_  
Production Time: \_\_\_\_\_  
QC: \_\_\_\_\_



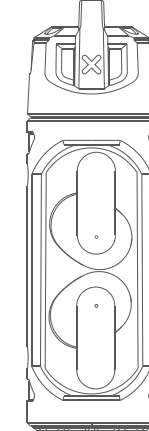


### TF-T11 True wireless BT headset Instruction manual

#### Packing list

	Headphones *2
	Type-C Charging cable *1
	Charging case *1
	Instructions and Warranty card *1

#### Product diagram

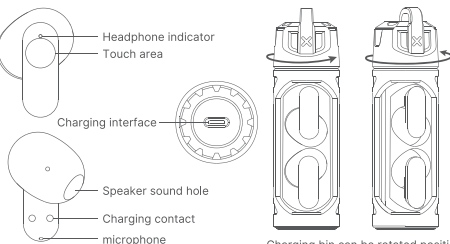

#### Tips

- Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- Don't put the earbuds in the water or any others liquid. The earbuds are not waterproof.
- If any liquid enters the product by accidentally, please disconnect and remove the connection immediately.
- Please make sure that there is no water on your hands when installing

or uninstalling the product to avoid electric shock.  
5. Do not put the product near by the heat source or expose it to the fire source directly.  
6. Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

#### Product specification

BT version: V5.4  
Transmission distance: 10m  
Speaker unit:  $\phi 12\text{mm}$  32ohm  
Frequency response range: 20Hz-20KHz  
Horn sensitivity: 112.5dB $\pm$ 3dB  
Standby time:  $\approx 90$ hours  
Talk time:  $\approx 4$ hours  
Music playing time:  $\approx 5.5$ hours  
Charging time (charging case) :  $\approx 1.5$ hours  
Battery capacity (charging case) : 300mAh  
Charging time (headset):  $\approx 30$ minutes  
Battery capacity(headset): 33mAh

#### Charging bin charging specifications

The Type-C charging cable connects the charging case to the 5V power adapter (Tips: Headset battery less than 3.3V start to broadcast low power reminder(Sound prompt: "battery low"), the white light flashes slowly, reminding once every minute to charge the headset in time)

#### Product operation instructions

① Boot:  
Method 1. Remove the earphones from the charging compartment and turn them on automatically.  
Method 2. Press and hold the left/right touch area for 3 second. The ice blue light is on for 1 second. (Voice prompt tone: "power on")  
② Shutdown:  
Method 1. Put it back in the charging compartment, and the headset will automatically shut down and charge.

#### Product operation instructions

Method 2. The device is disconnected and automatically shuts down after 3 minutes. (Voice prompt tone: "power off")

- Remove the earphones from the charging bay, and the left and right earphones automatically enter the Bluetooth pairing mode, waiting for connection. (Audio notification tone: "pairing")
- Turn on BT on the mobile phone, search the device name "TF-T11", and click to enter the connection. (Voice prompt tone: "connected")

#### LED indicator status

Power on	Keep the ice blue light on for 1 second
Power Off	The white light flashes three times
TWS pairing status	Left/right earphone white light ice blue light alternately flashing
The device pairing status is displayed	Main ear white light ice blue light alternately flashing
Connection successful	Light off
Earphone low battery warning	White light blinking slowly (every 5 seconds)
Earphone charging	The white light of the headset is steady on
Headphones fully charged	The white light of the headset is off
Charging bay charging	Ice blue light slow breathing
The charging bay is fully charged	Ice blue light is on
factory data reset	The white light blinks three times quickly

#### Touch operation

- General mode**
  - Voice Assistant: Press and hold the touch area of the left headset for 2 seconds to start/close
  - Volume Increase: Click on the right earphone touch area
  - Volume Down: Single left earphone touch area
- Music playback mode**
  - Play/Pause: Double click on any earphone touch area
  - Previous: Three hits left earphone touch area
  - Next: Three hits right earphone touch area
- Call mode**
  - Answer/hang up a call: Double click on any earphone touch area
  - Reject incoming calls: Press and hold any earphone touch area for 2 seconds
- Game/Music mode switch**
  - Music Mode: Press and hold the right earphone touch area for 2 seconds (Voice prompt tone "music mode")
  - Game mode: Press and hold the right earphone touch area for 2 seconds (Voice prompt tone "game mode")

#### Restore factory settings

When the headset is connected to the Bluetooth device, tap the left/right headset five times and hear "Dong". Press and hold the headset for 10 seconds within 3 seconds to clear the headset connected device information and automatically shut down. (Voice prompt tone: "power off")

#### The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.  
O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.  
X: Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.  
The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.  
Including printed circuit boards and their parts, electronic components, etc. and depending on the product model, the earbuds you purchased may not contain all the above components.

**10** Electronic and electrical products sold in the People's Republic of China must mark this LOGO, the number in the logo represents the product under normal use Environmental protection use period.

#### Warranty statement

Disclaimer  
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products specifications and information are for reference only, and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:  
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period") under normal conditions of use due to quality defects damaged, can be repaired. Free repair. Free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sale the ticket date shall prevail if the purchase date cannot be determined, the warranty period shall be 15 (15) months.  
If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:  
1. Exceeding the validity period of the three packs;  
2. Altering the warranty card and product code does not match the product body;  
3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage obstacles or damage;  
4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident loss;  
5. The zipper and lower buckle are damaged due to excessive force;  
6. Disconnection or tearing caused by excessive load;  
7. Any damage caused by sharp objects;  
8. Products with signs of burning or flooding;  
9. Damage caused by unauthorized disassembly;  
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.  
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

Service supervision hotline: 400-885-8808

虚线做  
易撕线

虚线做  
易撕线

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.