


TF-T31说明书 成品尺寸: 70X100mm 80g书纸 钢琴折

 
虚线做
易撕线



包装清单

- 耳机*2
- Type-C充电线*1
- 充电仓*1
- 挂绳*1
- 说明书与保修卡*1

产品示意图

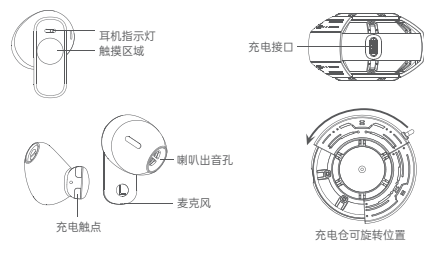

温馨提示

- 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他液体中, 此产品非防水设计。
- 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
- 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。
- 请勿将此产品放置于热源附近或直接暴露在光源附近。
- 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

**TF-T31真无线蓝牙耳机
使用说明书**

产品规格

蓝牙版本: V5.4
传输距离: ≥10m
扬声器单元: Φ13mm 32Ω
频响范围: 20Hz-20KHz
喇叭灵敏度: 109dB±3dB
额定电流(耳机): 30mA
额定电流(充电仓): 300mA
音乐播放时间: ≈5小时
充电时间(充电仓): ≈1.5小时
电池容量(充电仓): 300mAh
充电时间(耳机): ≈1.5小时
电池容量(耳机): 30mAh

充电仓充电规格

Type-C充电线连接充电仓到5V电源适配器。
(温馨提示: 耳机电量低于3.3V开始播报低电量提醒)
(声音提示: "battery low", 红灯闪烁, 每1分钟提醒一次请及时给耳机充电。)

产品操作说明

① 开机:
方法1: 充电仓上盖打开, 耳机自动开机。
方法2: 长按左/右触摸区域5秒, 白灯长亮1s耳机开机。(语音提示音: "power on")

② 关机:
方法1: 放回充电仓, 合上上盖, 耳机自动关机。
方法2: 与设备无连接, 5分钟后自动关机。(语音提示音: "power off")

③ 蓝牙配对:
1. 从充电仓取出耳机, 左右耳机自动进入蓝牙配对模式, 等待连接。(语音提示音: "pairing")
2. 打开手机上的蓝牙, 搜索设备名"TF-T31", 点击进入连接。(语音提示音: "connected")

产品操作说明



LED指示灯状态

开机	白灯长亮1秒
关机	红灯长亮1秒熄灭
TWS配对状态	左/右耳机红灯白灯交替闪烁
进入设备配对状态	主耳红灯白灯闪烁(副耳灯灭)
连接成功	指示灯熄灭
耳机低电量	耳机红灯闪烁
耳机充电中	耳机红灯常亮
耳机仓充电中	冰蓝灯呼吸
充电仓充满电	指示灯熄灭

触摸操作

■ 常规模式

- 语音助手: 长按左耳机触摸区域2秒启动
- 音量加: 单击右耳机触摸区域
- 音量减: 单击左耳机触摸区域

■ 音乐播放模式

- 播放/暂停: 双击任意耳机触摸区域
- 上一曲: 三击左耳机触摸区域
- 下一曲: 三击右耳机触摸区域

■ 通话模式

- 接听/挂断来电: 双击任意耳机触摸区域
- 拒接来电: 长按任意耳机触摸区域2秒

■ 游戏/音乐模式切换

- 音乐模式: 长按右耳机触摸区域2秒(语音提示音"music mode")
- 游戏模式: 长按右耳机触摸区域2秒(语音提示音"game mode")

恢复出厂设置


- 在未连接设备时, 连击左/右耳机5次后, 左/右耳机关机。
- 在连接设备时, 左/右耳机连击5次后, 3S内再长按10S, 左右耳机关机。(语音提示音: "power off")


产品中有有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制
O:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。
X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。
未标注"X"的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。

 本表格依据SJ/T11364的规定编制
印刷电路组件* 包括印刷电路板及其零部件, 电子元器件等。
根据产品类型不同, 您所购买的产品可能不会含有以上所有部件

 指不含有6种有毒有害物质或含有但小于限量值。
字母 "e" 代表英文字母电子(electronic); 电子(electrical)和环境(environment)的首字母, 环境的曲线箭头表示可回收利用。



保修声明

免责声明
本使用手册没有任何形式的担保、立场表达或其他提示。本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。

保修声明
就本文所附的产品做如下保证: 如产品在您购买日起十二(12)个月(“保修期”)内, 在正常使用情况下因质量问题或发生损坏, 能修理的, 免费修理; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(最短不少于30天)内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产之日起按十三(13)个月计算。
如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况:
1. 超过三包有效期的;
2. 涂改保修卡、产品编码与产品本体不符;
3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
5. 拉扯、扭扭和因受外力过大而损坏;
6. 因超载过重造成的脱线或断线;
7. 任何因安装物体造成的损坏;
8. 有烧损或水渍迹象的产品;
9. 因擅自拆卸导致的损坏;
10. 产品在正常使用过程中发生的老化、变色、磨损、破裂和其他损耗。
11. 如产品原有标识被篡改或更改或修改, 本保证将失效。
产品及随附物料的齐备和外观完好不属于保证范围, 您在接收产品时当场检验并对任何不符提出异议。
以上保证是我们就产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。
服务热线: 400-885-8808



保修卡

尊敬的用户, 本保修卡是您将来申请保修的凭证, 请您配合销售商填写并妥善保管!

用户信息

用户姓名	电子邮箱
联系电话	邮政编码

通讯地址

产品名称	产品型号
产品条码/编号/批号	

销售商信息

名称	
地址	
联系电话	邮政编码
销售日期	发票号码
备注	

合格证

产品编号: _____
生产日期: _____
检验员: _____

Warranty Service

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

User info

User name	Email
Contact number	Postal code
Mailing address	

Product information


Product name	Product number
Product barcode / Serial number / Batch number	


Vendor information

Name	
Address	
Contact number	Postal code
Sales date	Invoice number
Remark	

Certificate of Approval

 Product No.: _____
Production Time: _____
QC: _____



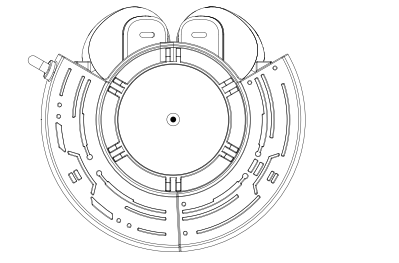


**TF-T31 True wireless BT headset
Instruction manual**

Packing list

- Earphones *2
- Type-C Charging cable *1
- Charging case *1
- lanyard *1
- Instructions and Warranty card *1

 Product diagram

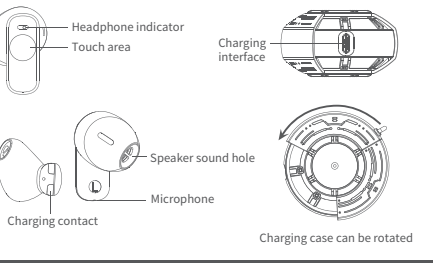

Tips

- Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- Don't put the earbuds in the water or any others liquid. The earbuds are not waterproof.
- If any liquid enters the product by accidentally, please disconnect and remove the product immediately.
- Please make sure that there is no water on your hands when installing or uninstalling the product to avoid electric shock.


5. Do not put the product near by the heat source or expose it to the fire source directly.
6. Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Product specification

BT version: V5.4
Transmission distance: ≥10m
Speaker unit: Φ13mm 32Ω
Frequency response: 20Hz-20KHz
Sensitivity: 109dB±3dB
Rated current(headset): 30mA
Rated current(Charging case): 300mA
Music playing time: ≈5hours
Charging time (charging case): ≈1.5hours
Battery capacity (charging case): 300mAh
Charging time (headset): ≈1.5hours
Battery capacity(headset): 30mAh

Charging case charging specifications

The Type-C charging cable connects the charging case to the 5V power adapter. (Gentle reminder: headset battery power below 3.3V to start broadcasting low battery reminder)(Voice prompt: "battery low", red light blinking, every 1 minute to remind you to charge the headset in time)



 
Product operation instructions

① Power on:
Method 1. The top cover of the charging case opens and the headset turns on automatically.
Method 2. Long press the left/right touch area for 3 seconds, the white light will be on for 1S and the headset will turn on. (Voice prompt: "power on").

② Power off:
Method 1. Put back the charging case, close the top cover, the headset turns off automatically.
Method 2. No connection with the device, power off automatically after 3 minutes. (Voice prompt: "power off").

Product operation instructions

③ BT pairing:
1. Remove the earphones from the charging case, and the left and right earphones automatically enter the Bluetooth pairing mode, waiting for connection. (Voice prompt tone: "pairing")
2. Turn on BT on the mobile phone, search the device name "TF-T31", and click to enter the connection. (Voice prompt tone: "connected")



LED indicator status

Power on	White light is on for 1S
Power off	Red light is on for 1S and off
TWS pairing status	Left/right earphone will flashes red light and white light alternately
The device pairing status is displayed	Red and white lights flashing in the primary ear (light off in the secondary ear)
Connection successful	Light off
Headset low battery warning	Red light flashes
Headset charging	Red light of the headset is steady on
Headphones fully charged	Red light off
Charging case charging	Ice blue light is breathing
The charging case is fully charged	Light off

Touch operation

■ General mode

- Voice Assistant: Press and hold the touch area of the left earphone for 2 seconds to start
- Volume Increase: Click on the right earphone touch area
- Volume Down: Click on the left earphone touch area
- Next: Three hits right earphone touch area

■ Music playback mode

- Play/Pause: Double click on any earphone touch area
- Previous: Three hits left earphone touch area
- Next: Three hits right earphone touch area

■ Call mode

- Answer/hang up a call: Double click on any earphone touch area
- Reject incoming calls: Press and hold any earphone touch area for 2 seconds

■ Game/ Music mode switch

- Music Mode: Press and hold the right earphone touch area for 2 seconds (Voice prompt "music mode")
- Game Mode: Press and hold the right earphone touch area for 2 seconds (Voice prompt "game mode")


Restore factory settings


- When no device is connected, the left/right headphones are switched off after 5 consecutive taps on the left/right headpieces.
- When connecting the device, after 5 consecutive clicks on the left/right headset, long press again for 10S within 3S, the left/right headset turns off. (Voice prompt: "power off")

The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

 This form is compiled in accordance with SJ/T 11364.
O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.
X: Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.
The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.
Printed circuit board components:
Including printed circuit boards and their parts, electronic components, etc. and depending on the product model, the earbuds you purchased may not contain all the above components.

 Does not contain 6 kinds of toxic and harmful substances or contains but is less than the limit value, the letter "e" stands for the English letter electronic. The initials of electrical and environment. The curved arrows around it indicate recyclability.



Warranty statement

Disclaimer
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the web at any time without additional separate notice.


Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period") under normal conditions of use due to quality defects, damaged, can be repaired. Free repair, free replacement if the manufacturer confirms that it cannot be repaired, repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sale the ticket date shall prevail. If the purchase date cannot be determined, the warranty period shall be 15 (15) months.
If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:
1. Exceeding the validity period of the three packs;
2. Altering the warranty card and product code does not match the product body;
3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage obstacles or damage;
4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident loss;
5. The zipper and lower buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or flooding;
9. Damage caused by unauthorized disassembly;
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

Service supervision hotline: 400-885-8808



虚线做
易撕线

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.