TF-Y07Pro说明书 成品尺寸73X93mm 128克铜版纸 覆哑膜 双面印刷 钢琴折





正面

.....


TF-Y07Pro穿戴式蓝牙音箱

使用说明书

Warranty card

TRANSFORMERS



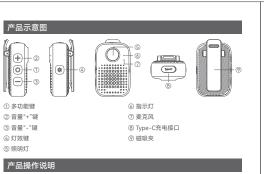

低电报警及自动关机功能: 当电池电压低于3.4V时, 音箱会发出提示音, 此时应该及时

音箱开机后,打开智能设备蓝牙设置,搜索蓝牙名称"TF-Y07Pro"并点击连接,连接成

任意两台同款音箱开机状态下,三击其中一台音箱的多功能键即可进入TWS配对,15秒

内建立TWS连接,连接成功后提示音会响起。三击其中一台音箱的多功能键即可断开

功后提示音会响起。音箱无连接或断开连接超过3分钟,音箱将会自动关机。

调高音量: 单击音量"+"键, 最大音量时有提示音。 开/关照明灯:长按2秒灯效键。 切換灯效(100%高度-50%高度-快闪): 单击灯效键。 配对状态:配对时白灯慢闪,连接时白灯长亮,播放音乐时白灯熄灭。 开机:长按2秒多功能键。白灯长高1秒后熄灭。

常见问题及解决方	案			
问题	解决方案			
无法开机	检查音箱内置电池是否有电			
多次连接配对不成功	关闭音箱重新开机,或清除配对记录			
音乐播放出现断音	连接距离是否超出范围,或音箱与手机之间是否有障碍物			
播放无声	检查音箱是否处于最低音量			
指示灯不亮	检查充电接口是否插好			

 Indicator light ⑦ Microphone

Magnetic clip

® Type-C charging interface

播放/暂停音乐: 单击多功能键。音箱无播放超过30分钟。音箱将会自动关机。

接听来电:来电时,单击多功能键

挂断来电:通话时,单击多功能键。

拒接来电:来电时,双击多功能键。

回拨电话:双击多功能键。

上一曲:长按1秒音量"-"键。

下一曲:长按1秒音量"+"键。

调低音量: 单击音量"-"键。

Multi-function key

3 Volume "-" key

automatically power off

4 Light effect key

充电状态: 充电时红灯长高 充满电红灯熄灭。



本表格依据SJ/T 11364的规定编制。

- 以上保证不适用于下列情况。):表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以
- < : 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量
- (1) 表中标记"×"的部件,皆因全球技术发展水平限制而无法实现有害物质的替代; (2) 印刷电路板组件:包括印刷电路板及其零部件、电子元器件等;
- (3) 根据产品型号不同。您所购买的产品可能不会含有以上所有部件。



在中华人民共和国境内销售的电子电气产品必须标识此标志, 标志内的数字代表在正常使用状态下的产品的环保使用期限。



TRANSFORMERS



生产日期: 位 設 員:



TRANSFORMERS



TF-Y07Pro wearable BT speaker Instruction manual



关机:长按4秒多功能键,白灯长亮1秒后熄灭。

TWS配对。

4. 清除配对

给音箱充电。当电池电压低于3.2V时, 音箱将会自动关机。

开机状态下,同时长按2秒音量"-"键和音量"+"键,白灯慢闪。

Lighting time: ≈4 hours (100% brightness)

Transmission distance: ≥10m

Speaker power: 3W Frequency response: 80Hz-18KHz Battery capacity: 3.7V / 600mAh Rated input: 5V--450mA

Charging time: ≈2 hours Play music time: ≈5 hours

- 1. Except for the operation methods specifically marked in the manual, do not try to disassemble or replace any parts in the product.
- 2. If any liquid accidentally enters the product, please disconnect and remove the
- 3. To avoid electric shock, please make sure that there is no water on your hands when installing or uninstalling the product.
- 4. Do not put the product near a heat source or directly expose it to a fire source. 5. Do not put the product in an environment with strong electromagnetic force,
- of one of the speakers to enter TWS pairing, and establish a TWS connection within 15 seconds, the prompt sound will sound after the connection is successful. Triple-click the multi-function key of one of the speakers to disconnect the TWS pairing. In the power-on state, long press the volume "-" key and the volume "+" key for 2 seconds at

Power on: Long press the multi-function key for 2 seconds, the white light is on for 1 second

and then goes out.

Power off: Press the multi-function key for 4 seconds, the white light is on for 1 second and

ow power alarm and automatic shutdown function: When the battery voltage is lower than

After the speaker is power on, open the BT settings of the smart device, search for the BT name "TF-Y07Pro" and click connect, the prompt sound will sound after the connection is successful.

If the speaker is not connected or disconnected for more than 3 minutes, the speaker will

3.4V, the speaker will make a prompt sound, and the speaker should be charged in the battery voltage is lower than 3.2V, the speaker will automatically power off.

Call back: Double-click the multi-function key. Play / pause music: Click the multi-function key. If the speaker does not play for more than 30

Previous song: Long press the volume "-" key for 1 second. Next song: Long press the volume "+" key for 1 second.

Turn up the volume: Click the volume "+" key and there will be a prompt sound at the maximum

Charging status: The red light stays on when charging, and the red light goes out when fully

Turn on / off the light: Long press the light effect key for 2 seconds.

Switch the light effect (100% brightness-50% brightness-flash): Click the light effect key. P. Indicator light status
Pairing status: The white light flashes slowly when pairing, the white light stays on when

non problems and solutions

Problems	Solutions				
Unable to power on	Check whether the built-in battery of the speaker is charge				
Connection pairing failed many times	Power off the speaker and restart it, or clear the pairing record				
The music plays staccato	Whether the connection distance is out of range, or whethe there is an obstacle between the speaker and the phone				
Play without sound	Check whether the speaker is at its lowest volume				
The indicator light is not on	Check whether the charging interface is plugged in				

The name and content of harmful substances in the product

本使用手册没有任何形式的担保、立场表达或其他暗示。本使用手册所提到的产品、规格

就本文件附随的产品做如下保证: 如产品在您购买日起十二(12)个月("保修期")内,

在正常使用情况下因质量瑕疵发生损坏,能修理的,免费修理;经厂家确认无法修理的,

免费更施·修理或更换后的产品 在剩余保修期(最短不小干30干) 内继续宣右保修 助

买日以销售发票日期为准,如无法确定购买日,则保修期自产品生产日期起按十三(13)

个月计算。如申请保修,请先致电产品服务热线,并按我们指示的方式执行。申请保修

产品及随附物料的齐备和外观完好不属于保证范围。您应在接收产品时当场检验并对任何

以上保证是我们就产品做出的全部保证。且仅在中国大陆地区境内适用。本文件的任何内

及信息仅供参考,内容亦会随时更新于网页,恕不另行通知。

时,您需要提供准确、完整和清晰填写的有效销售发票。

3 因误用 滥用或不活当的运输 使用 维护或保管而导致的故障或损坏

4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏:

10. 产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗;

11. 如产品原有标识标签被更改或损毁, 本保证将失效。

2. 涂改保修卡,产品编码与产品本体不符;

6. 因承载过重造成的脱线或撕裂

7 任何因尘纷物体造成的塌体:

8. 有烧损或水浸迹象的产品:

9. 因擅自拆改导致的损坏

Part name	Harmful substances						
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE	
Printed circuit board components	0	0	0	0	0	0	
Small structural parts such as shell	0	0	0	0	0	0	

- his form is compiled in accordance with the provisions of SJ/T 11364. 2: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572. : Indicates that the content of the hazardous substance in at least one
- (1) The parts marked with "×" on the table are unable to achieve the replacement
- of harmful substances due to limitations in global technological development; 2) Printed circuit board components: including printed circuit boards and their parts, electronic components, etc. 3) Depending on the product model, the product you purchased may not contain





and the content will also be updated on the web at any time without additional separate notice

The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Pertod"), under normal conditions of use due to quality defects damaged, can be repaired, free replace, free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product, continue to enjoy the warranty during the remaining warranty period; the shortest not less than 30 days). The date of purchase is subject to the date of the sales invoice, if the date of purchase cannot be determined, the warranty period shall be thirteen (13) months from the date of production. If you apply for a warranty, please call the product service holdine first and execute it in the mamer instructed by an applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

- storage;

 4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accidents;

 5. Zipper and tower buckle are damaged due to excessive force;

 6. Disconnection or tearing caused by excessive load;

 7. Any damage caused by sharp objects;

 8. Products with signs of burning or flooding;

 9. Damage caused by unauthorized disassembly;
- 10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of he product; 1. If the original identification label of the product is changed or damaged, this guarantee will

scope of the guarantee. You should inspect the product on the spot when you receive it and raise objections to any discrepancies.



Republic of China must mark this logo, the number in the logo represent the environmental protection period of the product under normal use.

Service supervision hotline: 400-885-8808

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.