



WiFi SMART TWEEZERS



USER MANUAL

ver1.0

Install APP

- 1 Download "MUBY" App from App store (IOS) or Google Play Store (Android).

Optional:

Scan QR code below to download App.

 


- 2 Press and hold the power key for more than 2 seconds to turn on.




Connect WiFi

- 1 Open "Muby" App, click "Go to connect" icon.

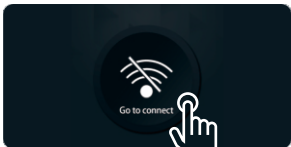

 - 2 Find "Muby-XXXX" from WiFi list and connect.

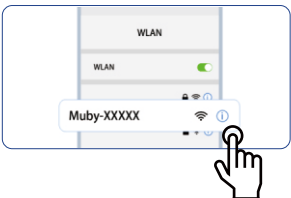


- ✕ Make sure to choose "CONNECT" if there is warning message "**This WLAN network has no internet access. Connect anyway?**" from phone.

- 3 Go back to App interface and click home icon to enter live image.




 App Briefing

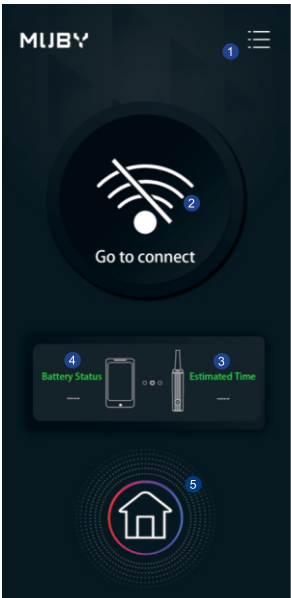

- 1 About APP
- 2 WiFi status
- 3 Time remain
- 4 Battery status
- 5 Connect/Live image

 App Briefing

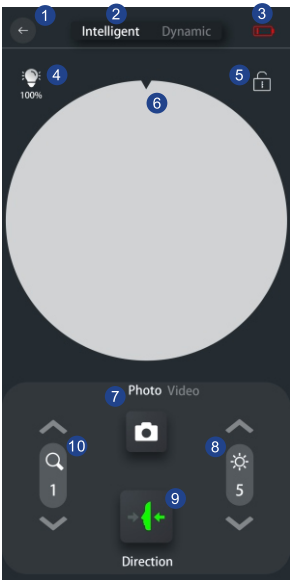

- 1 Back
- 2 Mode switch
- 3 Battery status
- 4 LED adjustment
- 5 Lock on/off
- 6 Camera vertical indicator
- 7 Photo/Video
- 8 Brightness
- 9 Direction switch (Left / Right)
- 10 Zoom

FAQ

Problem	Solution
Blur image	Clean lens with cotton swab soaked by water or alcohol
Unable to start	Fully charge device
APP flashback	Free up phone storage or restart phone
No led light	Check LED switch on APP or restart device
No live image after connect successfully	Restart device and re-connect WiFi, or restart phone
Unstable WiFi connection	Restart device and re-connect WiFi
Significant image delay	Fully charge device and restart
Tweezers moves towards wrong direction	Click "DIRECTION" icon in APP to switch direction
*Contact customer service if you can't solve the problem	

 
NOTICE

- 1 Temperature of device will rise a bit(lower than 45°C) during use, it's normal.
- 2 Not for children less than 3 years old.
- 3 Only the tweezers and lens can be soaked by water, not whole device.
- 4 Charge battery at least once a month.


Tutorial



- 1 Hold the tweezers like picture shown above.

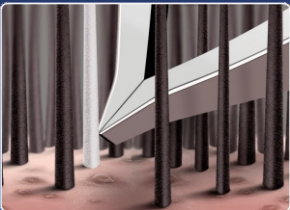

 - 2 Keep tweezers closed and move towards target hair to avoid interference.

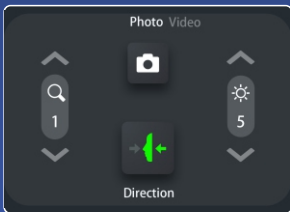

- 3 Click "Direction" icon in APP if tweezers move to oppsite direction you wish.

THANKS

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device

must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.