



Innovating the Art of Listening



SVANAR WIRELESS

Owner's Guide

Accessories



1	Touch Pad
2	Microphone
3	Charging Case
4	Indicator Light inside Charging Case
5	Indicator Light outside Charging Case
6	Hard Key

Power On/Off

The earbuds will instantly power on when removed from the charging case.
The earbuds will automatically start recharging when returned to the charging case, and turn off when fully charged.

FCC ID : 2BAQY-T050TA201



217-230897

1

Pairing

Use Both Earbuds

1. To pair with a source device, remove the earbuds from the charging case, at which point the earbuds will enter pairing mode.
2. Open the Bluetooth function menu on your device and select HIFIMAN SVANAR WIRELESS. Once paired, you will hear "Connected."

Important:

You have 3 minutes to connect the earbuds to your device, otherwise the earbuds will exit and automatically power off .

Use Left Earbud Only

Leave the right earbud in the charging case while removing the left earbud, at which point it will automatically enter single-sided mode. The left one taken out from the charging case will enter one-sided mode automatically. To return to stereo, simply remove the right earbud from the charging case.

Use Right Earbud Only

Leave the left earbud in the charging case while removing the right earbud, at which point it will automatically enter single-sided mode. The right one taken out from the charging case will enter one-sided mode automatically. To return to stereo, simply remove the left earbud from the charging case.

2

Pairing

Forced Reconnection

When wearing both earbuds, press and hold both earbuds for 3 seconds at the same time to forcibly cancel the last connected device. After canceling the connection, the headset will enter pairing mode with a voice prompt: "Pairing."
Return the earbuds to the charging case, press and hold the hard key of the charging case for 3 seconds while the cover is open. The red and green lights on the charging case will flash and enter the forced pairing mode.
The mobile phone will find and connect with SVANAR WIRELESS. After the pairing is completed, the green light in the charging case flashes once, for one second, and turns off.

Delete Pairings and Restore Factory Settings

Return the earbuds are placed in the charging case, then re-open the charging case and press and hold the hard key for 10 seconds. When the reset is completed, the green light in the charging box will flash.

Note: When using a single earbud, the current mode remains unchanged, and does not support mode switching between Noise Cancellation /High Fidelity /Transparency. When in Noise Cancellation mode, the microphone is no longer active for noise cancellation. When both earbuds are worn, SVANAR Wireless will automatically restore the connection and mode-switching function.

3

Calls & Music

Calls & Music

Answer call
Double-click either earbud twice to answer the call

End call
While in a call, double -click either earbud twice to end the call

Reject call
Press and hold either earbud for ~3 seconds to reject the call

Long press the right earbud (R) for ~3 seconds to turn on the voice assistant (Note: the device needs to support the Voice Assistant function.)

Music

To Play/Pause
Touch the right/left earbud to pause the track, and touch it again to continue playing the file or stream.
Playing is paused when the earbud leaves the ear, and resumes when the earbud is put back on.

To Skip to the Next Track
With earbuds in operation, double-click the right earbud/left earbud.

To rewind to the previous track
With earbuds in operation, triple-click the right earbud/left earbud.

4

Mode Switch

Noise Cancellation/HIFI Mode/ Transparency Mode

Only when wearing both earbuds:

The initial mode is High Fidelity when SVANAR Wireless is turned on for the first time

Press and hold the left earbud for 3 seconds to switch to Noise Cancellation mode, which is accompanied by a voice prompt: "ANC ON."

Press the left earbud for 3 seconds to switch to the Transparency mode, which is accompanied by a voice prompt: "Transparency."

Press the left earbud for 3 seconds to switch to High Fidelity mode, accompanied by a voice prompt: "High Fidelity."

Note: When using a single earbud, the current mode remains unchanged, and does not support mode switching between Noise Cancellation /High Fidelity /Transparency. When in Noise Cancellation mode, the microphone is no longer picking up for noise cancellation effect. When both earbuds are worn, SVANAR Wireless will automatically restore the connection and mode-switching function.

5

Charging

Charge the Earbuds

Low Battery Alert
When the battery falls below 10% power, you will hear the "Low battery, please charge" prompt every 2 minutes.

Return the earbuds to the charging case . The headset will automatically shut down after it is fully charged.

Indicator Light Inside the Charging Case for Earbuds Battery Status	
Fully charged	Green Light on for 10 seconds
Not fully charged	Red Light on for 10 seconds
The charging case battery is too low to charge the earbuds	Red Light flashes for 10 seconds

When the charging case is opened, there are no earbuds in the case and the inner light is not on.

Indicator Light Outside the Charging Case for Charging Case Battery Status	
Battery > 80%	Green Light
Battery 20-80%	Yellow Light
Battery < 20%	Red Light
Battery =100%	Light off

When charging, the Indicator Light on the charging box remains illuminated, indicating the battery status of the charging case.

6

Charging

Charge the Charging Case

Plug the charging cable into the charger port or place the SVANAR Wireless on a wireless charging plate to charge the charging case and earbuds.

When charging, the Indicator Light on the charging box remains illuminated, indicating the battery status of the charging case.

Indicator Light Inside the Charging Case for Earbuds Battery Status	
Fully charged	Green Light on for 10 seconds
Not fully charged	Red Light on for 10 seconds
The charging case battery is too low to charge the earbuds	Red Light flashes for 10 seconds

Indicator Light Outside the Charging Case for Charging Case Battery Status	
Battery > 80%	Green Light
Battery 20-80%	Yellow Light
Battery < 20%	Red Light
Battery =100%	Light off

When charging, the Indicator Light on the charging box remains illuminated, indicating the battery status of the charging case.

7

Specifications

Earphone Specifications

Size	32.2x20.4x29.1mm
Single Head Weight	8.0g
Earbud Charging Time	2hrs
Work voltage	3.1-4.2V
Earphone Input	5 V= 85mA MAX
Standby Time	ANC OFF: 8 hrs; ANC ON: 12hrs
Music Play Time (ANC off)	4-5hrs
Talk Time	4hrs
Total Battery Life	20hrs (for both earphones and charging case)
Bluetooth version	Bluetooth 5.2
Bluetooth Profile:	A2DP1.32/AVRCP1.6.2/HFP1.8/HSP1.2
Audio Codec	AAC,SBC, LDAC
Transmission Power	Class 2(-6dbm +- 4dbm)
Transmission Frequency	2.402-2.480GHz
Wireless Range	15m(barrier free transmission)

Indicator Light Inside the Charging Case for Earbuds Battery Status	
Fully charged	Green Light on for 10 seconds
Not fully charged	Red Light on for 10 seconds
The charging case battery is too low to charge the earbuds	Red Light flashes for 10 seconds

Indicator Light Outside the Charging Case for Charging Case Battery Status	
Battery > 80%	Green Light
Battery 20-80%	Yellow Light
Battery < 20%	Red Light
Battery =100%	Light off

When charging, the Indicator Light on the charging box remains illuminated, indicating the battery status of the charging case.

8

Charging

Charge the Charging Case

Plug the charging cable into the charger port or place the SVANAR Wireless on a wireless charging plate to charge the charging case and earbuds.

When charging, the Indicator Light on the charging box remains illuminated, indicating the battery status of the charging case.

Indicator Light Inside the Charging Case for Earbuds Battery Status	
Fully charged	Green Light on for 10 seconds
Not fully charged	Red Light on for 10 seconds
The charging case battery is too low to charge the earbuds	Red Light flashes for 10 seconds

Indicator Light Outside the Charging Case for Charging Case Battery Status	
Battery > 80%	Green Light
Battery 20-80%	Yellow Light
Battery < 20%	Red Light
Battery =100%	Light off

When charging, the Indicator Light on the charging box remains illuminated, indicating the battery status of the charging case.

9

Specifications

Earphone Specifications

Size	32.2x20.4x29.1mm
Single Head Weight	8.0g
Earbud Charging Time	2hrs
Work voltage	3.1-4.2V
Earphone Input	5 V= 85mA MAX
Standby Time	ANC OFF: 8 hrs; ANC ON: 12hrs
Music Play Time (ANC off)	4-5hrs
Talk Time	4hrs
Total Battery Life	20hrs (for both earphones and charging case)
Bluetooth version	Bluetooth 5.2
Bluetooth Profile:	A2DP1.32/AVRCP1.6.2/HFP1.8/HSP1.2
Audio Codec	AAC,SBC, LDAC
Transmission Power	Class 2(-6dbm +- 4dbm)
Transmission Frequency	2.402-2.480GHz
Wireless Range	15m(barrier free transmission)

Indicator Light Inside the Charging Case for Earbuds Battery Status	
Fully charged	Green Light on for 10 seconds
Not fully charged	Red Light on for 10 seconds
The charging case battery is too low to charge the earbuds	Red Light flashes for 10 seconds

Indicator Light Outside the Charging Case for Charging Case Battery Status	
Battery > 80%	Green Light
Battery 20-80%	Yellow Light
Battery < 20%	Red Light
Battery =100%	Light off

When charging, the Indicator Light on the charging box remains illuminated, indicating the battery status of the charging case.

10

Specifications

Earphone Specifications

Size	32.2x20.4x29.1mm
Single Head Weight	8.0g
Earbud Charging Time	2hrs
Work voltage	3.1-4.2V
Earphone Input	5 V= 85mA MAX
Standby Time	ANC OFF: 8 hrs; ANC ON: 12hrs
Music Play Time (ANC off)	4-5hrs
Talk Time	4hrs
Total Battery Life	20hrs (for both earphones and charging case)
Bluetooth version	Bluetooth 5.2
Bluetooth Profile:	A2DP1.32/AVRCP1.6.2/HFP1.8/HSP1.2
Audio Codec	AAC,SBC, LDAC
Transmission Power	Class 2(-6dbm +- 4dbm)
Transmission Frequency	2.402-2.480GHz
Wireless Range	15m(barrier free transmission)

Indicator Light Inside the Charging Case for Earbuds Battery Status	
Fully charged	Green Light on for 10 seconds
Not fully charged	Red Light on for 10 seconds
The charging case battery is too low to charge the earbuds	Red Light flashes for 10 seconds

Indicator Light Outside the Charging Case for Charging Case Battery Status	
Battery > 80%	Green Light
Battery 20-80%	Yellow Light
Battery < 20%	Red Light
Battery =100%	Light off

When charging, the Indicator Light on the charging box remains illuminated, indicating the battery status of the charging case.

11



Innovating the Art of Listening



FACEBOOK
Scan QR Code to join HIFIMAN on facebook



facebook.com/hifimanelectronics



twitter.com/hifimanofficial



www.hifiman.com

HIFIMAN ELECTRONICS CORPORATION

Address: 2602 Beltagh Ave, Bellmore, NY 11710, USA

For any further information or questions, please contact your authorized HIFIMAN dealer. Or email us directly at customerservice@HIFIMAN.com.