



boat

## ROCKERZ 255 MAX

Thank you for choosing boAt Rockerz 255 Max. This manual is meant to guide you through the functionality of the wireless earphone neckband. Knowledge of Bluetooth and device connection is essential for the usage of the headset. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty, so that you can always be easily guided towards the shores of musical bliss.




USER MANUAL

ROCKERZ 255 MAX

### PACKAGE CONTENTS

- 1 1x Rockerz 255 Max
- 2 1x Manual
- 3 1x Warranty Card
- 4 1x USB Type C charging cable
- 5 1x Catalogue
- 6 1x Pairs of additional earmuffs (Small & Large)

### OVERVIEW

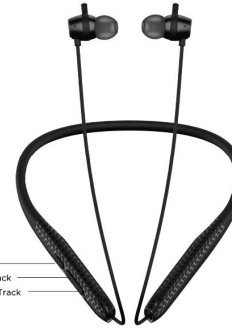

MFB/Triple EQ/Beast mode  
Volume Up / Next Track  
Volume Down / Prev. Track

### TO PAIR WITH BLUETOOTH

- (1) When switched off, separate left and right earbuds to switch on the wireless neckband and put them into pairing mode. The earphones automatically enter pairing mode with white and red LED flashes alternately to indicate the same.
- (2) Open Bluetooth functionality on your media device and search for "Rockerz 255 Max" from the list of available devices.
- (3) Choose "Rockerz 255 Max" from the list and if asked for a passcode, enter the pairing code "0000" to establish Bluetooth connectivity.
- (4) Once successfully connected, the white LED flashes once every 5 seconds to indicate the same

Note: The wireless neckband automatically turns off if there is no pairing established in 5 minutes.

### FUNCTIONALITIES

- (1)Power On: When switched off, separate both the earbuds from each other. White LED flashes to indicate the same.
- (2)Power Off: In powered on state, unite both the earbuds together. Red LED flashes to indicate the same.
- (3)Play/Pause: Short press the MFB (Multi-function Button) to play/pause music at your convenience.
- (4)Volume Up: Short press the Volume Up "+" button in steps to increase the volume. A voice prompt indicates maximum volume.
- (5)Volume Down: Short press the Volume Down "-" button in steps to decrease the volume.

- (6) Answer/End call: Short press the MFB once when answering or ending a call to complete the action.
- (7) Reject call: Press and hold the MFB for 2 seconds during an incoming call to reject the call.
- (8) Previous Track: To go back to the previous track or start the track from beginning, press and hold the Volume Down "-" button for 2 seconds.
- (9) Next Track: To skip to the next track, press and hold the Volume Up "+" button for 2 seconds.
- (10) EQ Modes: Double press the MFB to switch among the EQ modes, viz., Signature Mode (Bass-centric), Pop Mode and Balanced Mode.
- (11) Reset Device (Clear Paired List): Press and hold the Volume Up and Volume Down buttons simultaneously for 5 seconds to clear the list of paired devices. The white LED stays on for 2 seconds to indicate the same.
- (12) Dual Pairing: To connect Rockerz 255 Max to two devices simultaneously, firstly connect the earphones to one of the devices. Then, switch off the device's Bluetooth. Thereafter, connect the earphone to the second device, and again switch on the first device's Bluetooth. The earphone gets connected to both devices. If not, connect the first device manually once again to activate dual pairing.
- (13) BEAST™ Mode: Triple press the MFB to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple press the MFB again to turn it off and return to normal music mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

(14)ENx™ Tech: Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

(15)Voice Assistant: Long press the MFB for 2 seconds to wake up smart voice assistant.

Note: If the voice assistant doesn't get triggered then the functionality has to be first enabled by your media device.

### TO CHARGE

Use the provided USB Type C charging cable to charge the earphones through either laptop / adaptor/ powerbank.

- (1) Low Battery: When the remaining battery is below 10%, there is a "Battery Low" prompt every few minutes and red LED quickly flashes to indicate the same.
- (2) Charging: Solid red LED indicates that the earphone is being charged (please note that the earphone cannot / should not be turned on while charging).
- (3) Fully charged: Solid white LED indicates the same.

### SPECIFICATIONS

Bluetooth Version	V5.3
Operating Range	10m
Frequency	20Hz-20kHz
Driver Size	10mm*2
Battery	260mAh
Talk time	Up to 60 hours
Music time	Up to 60 hours (at 60% vol)
Bluetooth Range	HFP/HSP/A2DP/AVRCP
Charging Time	About 1 hour
Charge Interface	USB Type C
BEAST Mode	Yes
Low Latency	About 60ms
Water Resistance	IPX5
ASAP Charge	Yes

### FCC Warning

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Rockerz 255 Max FCC ID: 2BARQ-R255MAX