

4

3

2

1

02 381.0±2

 
01 197.0±2

# NEBO<sup>®</sup>

## RAMBLER™ 200

### POWER STATION

#### INSIDE THE BOX

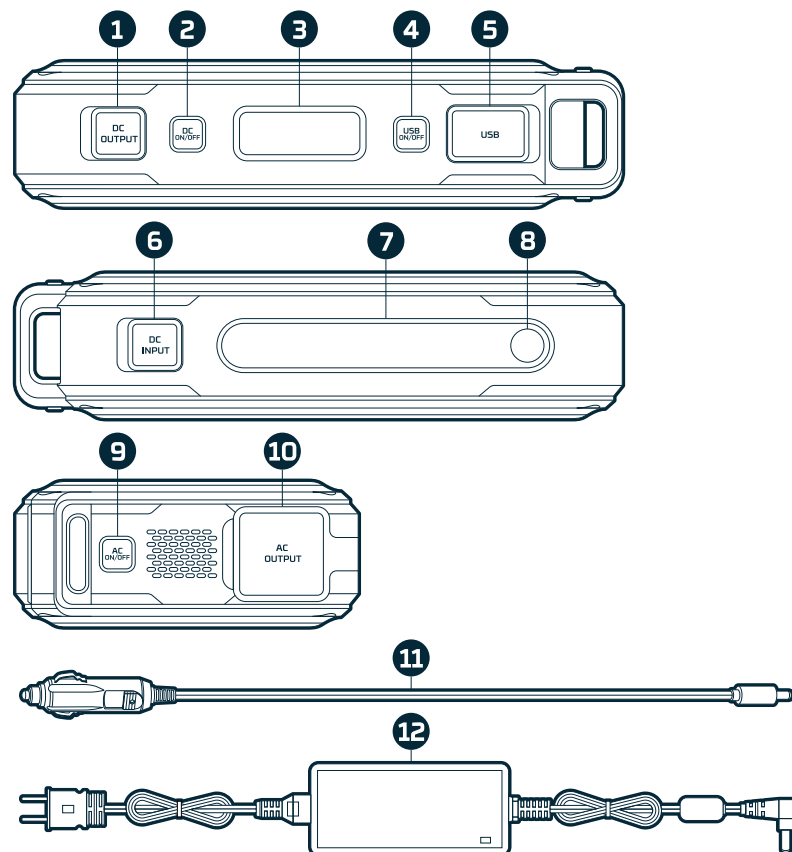

- 1 | DC Output Port
- 2 | DC ON/OFF Button
- 3 | Digital Display
- 4 | USB ON/OFF Button
- 5 | USB Output Ports
- 6 | DC Input Port
- 7 | LED Floodlight
- 8 | Floodlight ON/OFF Button
- 9 | AC ON/OFF Button
- 10 | AC Output Port
- 11 | DC Power Cord
- 12 | AC Charging Adapter

# NEBO<sup>®</sup>

## RAMBLER™ 200

### POWER STATION

#### SPECIFICATIONS

Battery Capacity.....	230.4Wh, 12800mAh (18.0V)
DC 5525 Input.....	12-24V, 120W
DC 5525 Output.....	12V, 10A max
AC Output.....	115V, 200W, 400W surge
AC Output Range.....	100V to 120V
USB-C PD Input/Output.....	45W
USB-A Outputs.....	5V 2.4A, total 4.8A
Wireless Output.....	10W max
Dimensions.....	9.65 x 5.35 x 2.3 inches
Weight.....	5 lbs
Operating Temperature.....	32°F - 113°F (0 - 45°C)
Discharge Temperature.....	14°F - 104°F (-10 - 40°C)

#### ! SAFETY PRECAUTIONS / MOVING AND STORAGE INSTRUCTIONS

- Read all instructions before using the product.
- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your NEBO Rambler 200 may cause electric shock to users and damage equipment.
- Keep your NEBO Rambler 200 dry and away from moisture and corrosive materials. The NEBO Rambler 200 should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose your NEBO Rambler 200 to moisture, water, rain, or snow.
- Keep your NEBO Rambler 200 away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your NEBO Rambler 200 may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict the NEBO Rambler 200 during operation.
- Do not disassemble your NEBO Rambler 200. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your NEBO Rambler 200 if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.
- Only charge your NEBO Rambler 200 by the specified method with the specified charging adapter provided with the unit.
- The NEBO Rambler 200, along with its accessories, are not toys and should be kept away from children.
- Do not insert any foreign object into the ports or openings of your NEBO Rambler 200.
- To clean your NEBO Rambler 200, wipe the case with a soft cloth. Do not use harsh chemicals, soaps, or detergents.
- Make sure the NEBO Rambler 200's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Batteries should be recycled or disposed of as per state and local guidelines.

# NEBO<sup>®</sup>

## RAMBLER™ 200

### POWER STATION

#### QUICK START GUIDE

Scan the QR code below to access the online owners manual.  
For product information and videos, visit [NEBOpower.com](http://NEBOpower.com).



OWNERS MANUAL

**IMPORTANT:** Fully charge your NEBO Rambler™ 200 before using it for the first time.

**ACTIVATE YOUR WARRANTY TODAY:** Your NEBO Rambler 200 has a two-year warranty from the date of purchase. By registering your warranty, you will help protect your investment and save a record of your purchase with our customer service team.



PRODUCT REGISTRATION

材质：157g双铜，双面防刮花过哑膜，  
印刷颜色：CMYK+303C+172C

DIMENSIONS ARE IN MM TOLERANCES		Part No. 物料編號:	401-2000-112		
0-2      ±0.1 2-10     ±0.15 10-50    ±0.25 50-100   ±0.50 100-200  ±0.75 200-∞    ±1.0 ANGLES   ±0.50A		Part Title 物料名稱:	PS20-1280-20-099-001 说明书		
DO NOT SCALE DRAWINGS		Mold No. 模號:	Doc. no. 文件編號:	sheet 1 of 2	A4 THIRD ANGLE PROJECTION
UNIT : mm		Drawn by 更改人:	Date 日期:	2023.05.25	REV.版本: A
		Approved by 批准:	Date 日期:	2023.05.25	 <b>仲康科技</b> Zhong Kang Technology
		Checked by 审核:	Date 日期:		

4

3

 
2

1

## CHARGING YOUR NEBO RAMBLER™ 200


### CHARGING YOUR Rambler 200 AT HOME:

1. Connect the DC cable on the 60W AC Charging Adapter (included) into the Rambler 200 DC Input Port. Plug the AC cable into a AC wall outlet. Charging will begin automatically.
2. When fully charged, the digital screen will indicate 100%. (Full charge could take up to 6 hours.)
3. Disconnect cable and power off your Rambler 200.

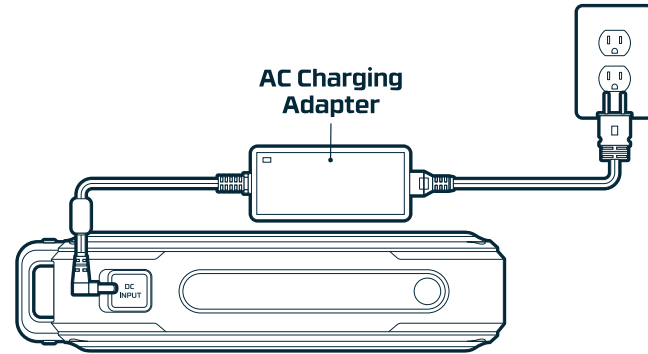

### CHARGING RAMBLER 200 IN YOUR VEHICLE:

 1. Plug the 12V DC Power Cord (included) into the DC Input Port. Plug the other end into the vehicles DC output (cigarette lighter). Charging will begin automatically.
2. When fully charged, the digital screen will indicate 100%.
3. Disconnect cable and power off your Rambler 200.

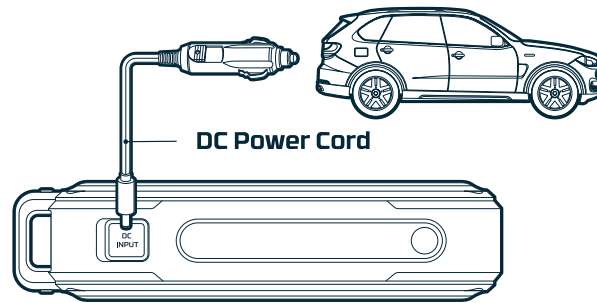


### CHARGING WITH A SOLAR PANEL (Sold Separately):

1. Connect the DC5525 cable that came with your solar panel to the DC Input Port of the Rambler 200. Charging will begin automatically.
2. When fully charged, the digital screen will indicate 100%.
3. Disconnect cable and power off your Rambler 200.

**NOTE:** Charging speed will vary based on a number of factors including weather, obstructions and solar panel angle and positioning.

## CHARGING YOUR ELECTRONIC DEVICES

 1. Connect the USB cable that came with your device.
2. Plug the cable into the appropriate USB Output Port (A or C).
3. Press the USB ON/OFF button to begin charging your device.
4. When charged, disconnect cable and power off your Rambler 200.

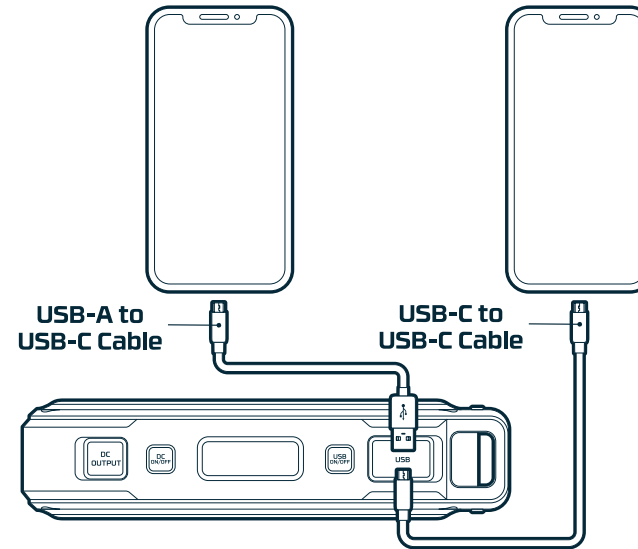


**NOTE:** The NEBO Rambler 200 USB charging feature will automatically power off after 30 minutes of inactivity.

## WIRELESS CHARGING

 
1. Place your wireless compatible device onto the wireless charging pad.
2. Press the USB ON/OFF Button to begin charging.
3. When charged, power off your Rambler 200.

**NOTE:** Make sure the device is aligned in the center of the wireless charging surface and that no gaps or obstructions are in between.

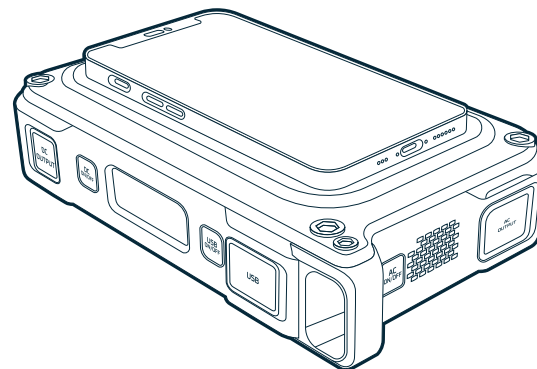

## CHARGING YOUR LAPTOP

 1. Connect the AC power plug from your laptop (or other electronic device\*) into the AC port, as shown below.
  2. Press the AC ON/OFF Power Button to begin charging.
  3. When charged, disconnect cable and power off your Rambler 200.
- NOTE:** Make sure the AC power plug is fully plugged into the AC port before pressing the AC Power ON/OFF Button.

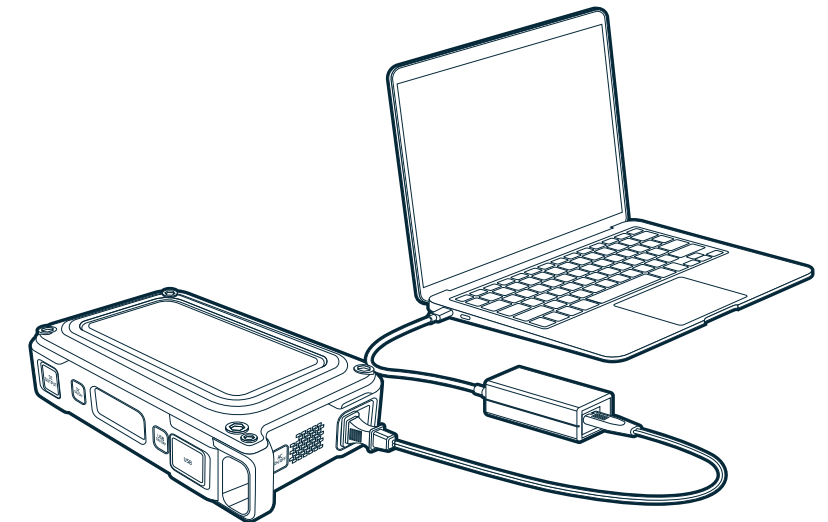

\*Any electronic device can be powered by the AC port, as long as it is rated at 200 watts or less.

### FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and  
 (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
 Increase the separation between the equipment and receiver.  
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

材质：157g双铜，双面防刮花过哑膜，  
 印刷颜色：CMYK+303C+172C

DIMENSIONS ARE IN MM TOLERANCES 0--2      ±0.1 2--10     ±0.15 10--50    ±0.25 50--100   ±0.50 100--200 ±0.75 200----±1.0 ANGLES   ±0.50A DO NOT ACALE DRAWINGS UNIT : mm	Part No. 物料編號: 401-2000-112		Part Title 物料名稱: PS20-1280-20-099-001 说明书	
	Mold No. 模號:	Doc. no. 文件編號:	sheet 2 of 2	A4 THIRD ANGLE PROJECTION
	Drawn by 更改人: Figo	Date 日期: 2023.05.25	REV.版本: A	
	Approved by 批准: Ever	Date 日期: 2023.05.25	仲康科技 Zhong Kang Technology	
	Checked by 審核:	Date 日期:		