


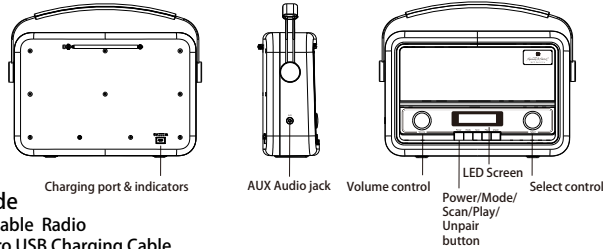

# Portable Radio



## Include

- Portable Radio
- Micro USB Charging Cable
- AUX Cable

## Power on/off

- Long press the "Power" button for 3 seconds to turn the power on/off

## FM Mode

- Press "Mode" button to turn to FM mode
- Press "Scan" button to search broadcasts or turn "Select" button to select broadcasts
- Press "Play" button to mute, press again to unmute

## AM Mode

- Press "Mode" button to turn to AM mode
- Press "Scan" button to search broadcasts or turn "Select" button to select broadcasts
- Press "Play" button to mute, press again to unmute
- Quick press "Scan" button 3 times to switch the regional stepped- frequency, default as US: 520~1720KHz; stepped-frequency of 10KHz. Can switched to EU: 522~1720KHz; stepped-frequency of 9KHz.

## Bluetooth Mode

- Press "Mode" button to turn to BT mode
- Use Bluetooth settings on your device to pair with "Hearth & Hand 05"
- LED will flicker and shows "BT" in Bluetooth mode during pairing and turns solid white when connected successfully
- Turn "Select" button to play the previous/ next song, or press "Scan" to play next song
- Press "Play" button to play/pause
- Press "Unpair" button to disconnect existing device. Press again to re-connect. Press for 5 seconds to reset the Bluetooth settings

## AUX Mode

- In any BT/AM/FM mode, insert AUX cable, the radio will play the input audio

## Charging

- Plug micro USB end of charging cable into charging port

Front

4 in

- Plug USB end of charging cable into a DC 5V 1A power adaptor
- Full charge requires approximately about 3 hours
- Red light is always on when charging, and will turn white when the device is fully charged.

## Troubleshooting and Tips

- If the device is not working correctly, long press "power" button for 8 seconds
- If the device won't power on, recharge the battery and try again
- If the device won't charge, make sure the supply works, is 5V 1A, and not damaged
- If the device makes no sound, adjust the volume
- If the device makes no sound or do not show as an available device, make sure it is not paired to another device. If so, unpair the device and re-pair the desired device
- This device does not have a pairing tone. If prompted for one, make sure you are connecting to the correct device. If not, "forget" the device and re-pair with your desired one

## NOTE:

- Please keep the distance between the connected devices less than 33 feet to ensure working properly

## SPECIFICATIONS:

- Power Input: 5V=1A
- Built-In Battery: 3.7V DC, 2000mAh
- Bluetooth Pairing Name: Hearth & Hand 05

## Need some help?

Can't get it to pair? Not accepting phone calls? Just have a question?



Call us at: 1-833-TGT-Tech

## Safety

- Do not use near any water source
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth



FCC ID: 2BAXW-TFB236 Model: Caribou Input: 5V = Max 1A Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. The device has been evaluated to meet general RF exposure requirement.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Target Corp. Mpls. MN, 55403 Phone: 1-833-TGT-Tech

Back

5.6 in