




Portable Radio

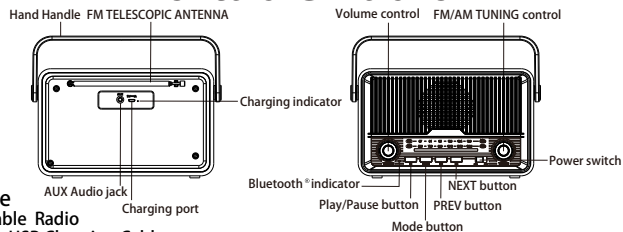

Include

- Portable Radio
- Micro USB Charging Cable
- AUX Cable

Power on/off

- Toggle Power switch to turn the power on/off. Power on with Bluetooth® mode by default, the voice will be heard and the white light will flash.

FM Mode

- Press "Mode" button to turn to FM mode, the voice will be heard.
- Rotate FM/AM tuning control to find your favorite FM radio stations.
- Press "Play/Pause" button to mute, press again to unmute.
- Rotate "Volume" control to adjust the volume, beep sound is heard at maximum volume.

NOTE : To ensure maximum FM tuner reception, fully extend the FM TELESCOPIC ANTENNA and rotate it for the best FM radio reception.

AM Mode

- Press "Mode" button to turn to AM mode, the voice will be heard.
- Rotate FM/AM tuning control to find your favorite AM radio stations.
- Press "Play/Pause" button to mute, press again to unmute.
- Rotate "Volume" control to adjust the volume, beep sound is heard at maximum volume.

NOTE : The AM antenna is located inside the cabinet of the unit. If AM reception is weak, change the position of unit until the internal antenna picks up the strongest signal.

Bluetooth® Mode

- Press "Mode" button to turn to Bluetooth® mode, the voice will be heard.
- Use Bluetooth® settings on your device to pair with "Hearth & Hand 09".
- The white light flashes in Bluetooth® mode during pairing and turns solid white when connected successfully.
- Press "Play/Pause" button to play/pause.
- Press "PREV"/ "NEXT" button to turn previous/next song.
- Rotate "Volume" control to adjust the volume, beep sound is heard at maximum volume.
- Press "Mode" button for 2 seconds to unpair the device and re-pair the desired device.
- After 30 seconds of entering Bluetooth® mode, if there is no operation, the device will turn to hidden mode and the white light turns off, you will need to press Mode button for 2 seconds or power on again for re-entering.
- It will automatically power off within 10 minutes if no operation.
- Within a certain range, Bluetooth® will automatically return to the last connected device.

NOTE : Please keep the distance between the connected Bluetooth® devices less than 33 feet to ensure working properly.

Front

4 in

AUX Mode

- Press "Mode" button to turn to AUX mode and the voice will be heard, insert AUX cable, the radio will play the input audio.
- Press "Play/Pause" button to mute, press again to unmute.
- Rotate "Volume" control to adjust the volume, beep sound is heard at maximum volume.

Charging

- Plug micro USB end of charging cable into charging port
- Plug USB end of charging cable into a DC 5V 1A power adaptor
- Full charge requires approximately 3 hours
- Red light is always on when charging, and will turn off when the device is fully charged.
- Suggest to fully charged for first use

Troubleshooting and Tips

- If the device is not working correctly, toggle Power switch to power on again.
- If the device won't turn on, recharge the battery and try again
- If the device won't charge, make sure the supply works, is 5V 1A, and not damaged
- If the device makes no sound, adjust the volume
- If the device makes no sound or do not show as an available device in Bluetooth® Mode, make sure it is not paired to another device. If so, press Mode button for 2 seconds to unpair the device and re-pair the desired device.
- If Noise or sound distorted on AM or FM broadcast, Retune the AM or FM broadcast station. Or fully extend the FM telescopic antenna. Reposition the unit until the best reception is obtained.

SPECIFICATIONS:

- Power Input: 5V=1A
- Built-In Li-ion Battery: 3.7V DC, 1200 mAh
- Bluetooth® Pairing Name: Hearth & Hand 09

Need some help?

Can't get it to pair? Not accepting phone calls? Just have a question?



Call us at: 1-833-TGT-Tech

Safety

- Do not use near any water source
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth



FCC ID: 2BAXW-TFB152 Model: Henley DPCI: 324-06-9143 Input: 5V= Max 1A Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. The device has been evaluated to meet general RF exposure requirement.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Target Corp. Mpls. MN, 55403 Phone: 1-833-TGT-Tech

5.9 in

Back