

英文



 
3D
Sleep sound

MANUAL

Usage method

1.How to power on/off and activate the Voice Control function?

- Power Button**
Power On:
Long press the button about 3 seconds.
Power Off:
Long press about 3 seconds or use the voice command "Power off".
- Voice-Activate**
Press the power button to activate the voice control function. After 2 beeps, you can start using voice commands. The voice control function is active for 30 seconds.
Please press the power button again to reactivate the voice control function after 30 seconds.
- The device defaults to white noise mode when Power on.
Voice command:
Previous Track/Next Track
Volume up / Volume down



2.How to wear the eye mask correctly?

- Peel off the Velcro isolation paper from both sides on the strap.
- Align the eye mask to the eyes, adjust the Velcro on the back strap to a comfortable position, and then fasten it securely with the Velcro.

Usage method

3.How to adjust the positions of accessories ear and eye cups correctly ?

- Take out the "L" and "R" Ear Cups, make sure the direction is correct according to L and R.
- Attach the "L" and "R" ear cups to the corresponding "L" and "R" positions.
- After the second step you can adjust them to a comfortable position for your ears.

4.How to adjust the earphones position

- Face the front of the product towards yourself, the blue slider is the headphone position.
- Adjust from the left and right sides if earphones don't fit snugly around ears.

Usage method

5.How to connect mask's Bluetooth earphones and play music?

- Voice command:
Bluetooth mode
- Search Bluetooth name:FS201 and click to pair
-

After connected, the eye mask will indicate that the Bluetooth connection is successful, and you can start playing music by your phone.

***If the volume is too low when first connecting to Bluetooth, increase your phone's volume (recommended above 50%). This will be the default volume for future connections.**

6.How to Set a Timer?

- Voice Timer and Cancel Timer
- Quick commands:
Timer 15 minutes
Timer 30 minutes
Timer 45 minutes
Voice commands:
Cancel Timer


Product Advantages

- Built-in 12 types of white noise musics to help users to relax and fall asleep quickly.
- The innovative design of the eye cup can blocks light effectively enhancing sleep comfort.
- The ear cups reducing environmental noise and improving sleep quality.
- Ultra-thin, portable Bluetooth earphones delivering high-quality audio.
- Supports voice commands, users can easily use play, pause, and other functions through voice.
- Made with breathable materials for long-term wear, ensuring comfort for the eyes.
- Unique eye cups contour to facial features for comfortable, pressure-free side sleeping.
- Timer function.
- Bluetooth earphones with adjustable positioning for clearer, balanced sound quality.
- With a full charge, the eye mask can standby for up to 60 hours.

FAQS

- Q:Can it be used in water?**
A:No, it's not waterproof. Please avoid submerging in water to prevent damage to electronics.
- Q:Battery life of the eye mask?**
A:With a full charge, the normal play time is 8-10 hours.
- Q:Can it pair with multiple Bluetooth devices simultaneously?**
A:One Bluetooth device at a time. Disconnect and pair with another device.
- Q:Time of the fully charge?**
A:Takes about 1 hour to fully charge from 0% to 100%.
- Q:How to charge?**
A:Open the charging port, plug in the charging cable.
- Q:How to confirm when the battery is fully charged?**
A:A red light indicates charging, and it turns off when fully charged.
- Q:Can the strap tightness/eye mask and ear cup positions be adjusted?**
A:Yes. The strap, eye mask and ear cups have Velcro for adjustment.
- Q:Can the eye mask wash by machine?**
A:No, machine washing is not recommended. Please use a wet wipe to clean if needed.

Product description

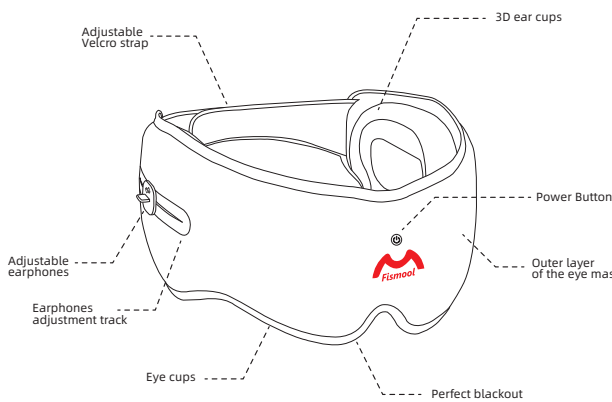

Product Specifications

Product Model	FS201
Product Name	3D SLEEP MASK
Product Power	5V1A
Product Size	43.5cmX9cm
Product Weight	350g
Product Colors	Gray/Orange/Blue/Pink
Battery Capacity	200mAh

Trouble shooting

- Eye mask won't work?**
Maybe the battery is run out. Please charge it and try to turn on again.
- During use, suddenly no sound or sound decreases?**
Due to low battery. Please recharge the eye mask before continuing use.
- During use, voice control responds but doesn't execute commands?**
Due to out of battery. Please charge before continuing.
- No sound after connecting Bluetooth?**
If the volume is too low when first connecting to Bluetooth, increase your phone's volume (recommended above 50%). This will be the default volume for future connections.
- Bluetooth can't connect to other devices?**
Previous device may still be paired. Please disconnect and pair with another device.
- No response to voice commands during use?**
The voice control standby time may have ended. Pressing the power button will allow normal use.

Maintenance and cleaning

Maintenance:

- Please take measures to prevent moisture, rodents, and pollution.
- Please charge regularly once a month if not used long time.
- For malfunctions, please contact technicians for repairs. Do not dismantle the product by yourself.
- After using, please put the product in a safe place. Please don't place heavy objects on it to prevent damage.
- If not used for a long time, please put the product and accessories in the packaging in a dry, ventilated environment to avoid dust. Don't expose them to sunlight to prevent fading or cracking.

Cleaning:

- Please clean and protect the product carefully to avoid damage and pollution.
- Please clean by a soft, damp sponge or cloth. Don't get the product wet.
- During the cleaning process, please prevent water or other liquids from entering the machine to avoid short-circuiting during use.
- Do not use abrasive agents, brushes, gasoline, kerosene, glass/furniture polish, paint thinner, or other corrosive chemical cleaners to clean the product, as these chemicals may cause damage.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.
This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

FCC ID:2BB2B-FS2023

Warranty Card

Please keep this card properly. The company will take this card as the warranty certificate. Thank you for purchasing this product. The warranty period of this product is 12 months from the date of purchase. Please keep it properly and fill in detailed relevant information for warranty use.

Product model: _____ Date of purchase: _____

Dealer name: _____

User name: _____ Contact number: _____

Address: _____

Explain the reason: ☐ Return goods ☐ Exchange goods ☐ Guarantee

Warranty conditions

When warranty service is required, please show this card and fill in the relevant contents in detail. The company provides users with a 12-month warranty period from the date of purchase.

Warranty scope

The quality problem under normal use is not the damage caused by external damage, the company assumes the responsibility for repair. In principle, the users of the product during the warranty period do not need to pay fees. But due to human damage, the cost of testing or spare parts shall be charged as appropriate. Products beyond the warranty period will be charged.
(Fabric is not covered under warranty)

Warranty is not available under the following circumstances

Man-made damage: for example, due to damage caused improper use and incorrect use, abnormal wear and tear of appearance, falling damage, circuit destruction, ear cushion deformation, entry of foreign matters, moisture, alteration or tearing of sealing labels on products, and any other visible man-made damage, and other conditions, such as the user's own reasons (unauthorized disassembly and modification, unaffraid use, improper operation, water ingress, etc.)
Damage caused by force majeure, such as earthquake, flood, fire, typhoon or war.

MADE IN CHINA