

**aiwa**

# Dual 6.5"

 
## Wireless Speaker



# WHAT'S INCLUDED

- AI6014 Dual 6.5" Wireless Speaker
- USB Charging Cable
- Remote Controller
- Wired Microphone
- User's Manual with Warranty Information

## A CLOSER LOOK

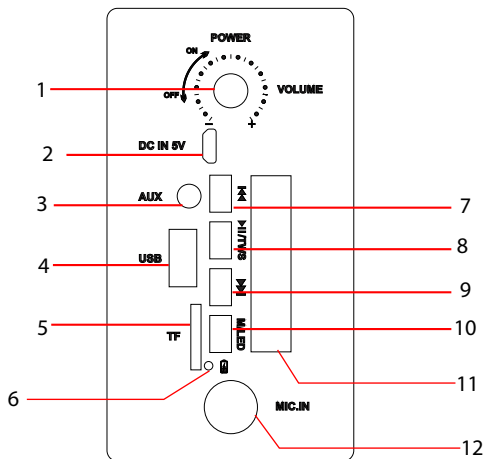


1. Power/Volume Knob
2. DC5V Charging Port
3. AUX in Port
4. USB Port
5. TF Card Slot
6. LED Indicator



7. Previous Button
8. Play / Pause/TWS button
9. Next Button
10. Mode / LED Button
11. LCD Display Screen
12. Microphone Port



# CHARGING

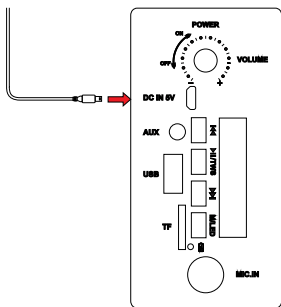   Insert one end of the included Micro-USB charging cable (included) into the DC 5V charging port on your speaker.

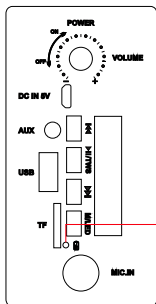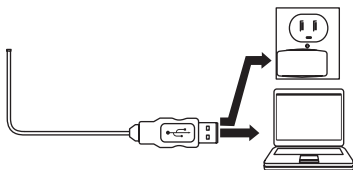


Insert the other end into the USB port of a computer or suitable USB charging adapter.



-  Charging (Indicator is ON)
-  Charging Complete (Indicator Off)


# POWERING ON/OFF

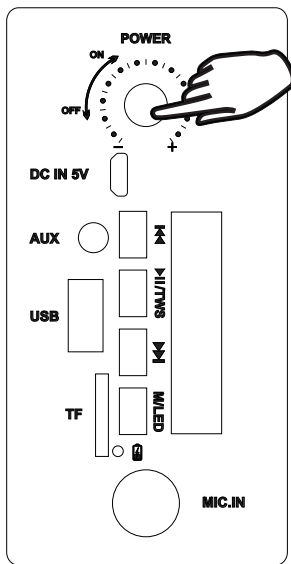 

Twist the power knob clockwise to power your speaker ON.  
After powering ON, the speaker will automatically go into Bluetooth pairing mode.

Twist the power switch counter-clockwise to power your speaker OFF.

# BLUETOOTH PAIRING

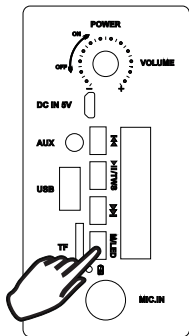 

Power on your speaker. Then press the mode button repeatedly to toggle through your speaker's various modes. Make sure BT (Bluetooth) mode is selected.

NOTE: Your speaker has three modes:

- Select BT mode to pair your speaker to a Bluetooth enabled device.
- Select AUX mode to listen to music from a device connected to your speaker's AUX IN port.
- Select USB mode to listen to music from a connected USB drive.
- Select TF Mode to listen to music from an inserted memory card.

ADDITIONAL NOTE: Press and hold the Mode button to change the speaker's lighting modes.



Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as 'AIWA Dual 6.5 Speaker'.


# LISTENING TO MUSIC

 Press the **⏮** button to go back to the last track in a playlist. Press and hold to decrease the volume.


Press the **⏭** button to go to the next track in a playlist. Press and hold to increase the volume.

Press the **⏸** button to play or pause a track.

Twist the Volume Knob clockwise to increase the volume. Turn counter-clockwise to decrease the volume.

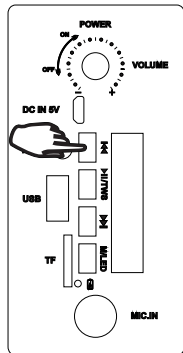


# LIGHT CONTROL

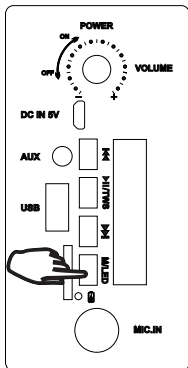 







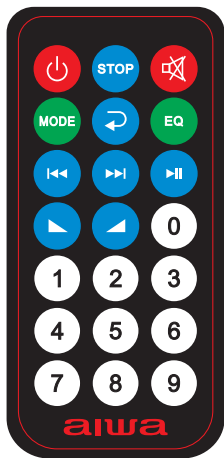 





Press and hold the Light button to switch the light mode.


# REMOTE CONTROL

 Your speaker comes with a remote control. When using the remote, make sure to point it in the direction of the receiver at the back of your speaker.



-  Power
-  Stop
-  Mute
-  Mode/LED
-  Repeat All
-  EQ mode
-  Previous track
-  Next track
-  Play and pause
-  Volume Decrease
-  Volume Increase
-  Select the Track Number

# ADDITIONAL FEATURES

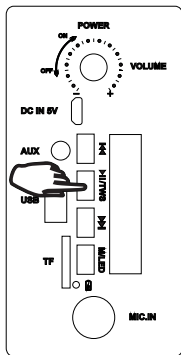

## TWS Function

If you have two AI6014 speakers, enjoy high-quality sound by using the TWS pairing function.

Power ON both speakers and press the TWS button twice on each speaker. The two speakers will pair together.

You can then go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA Dual 6.5 Speaker Speaker."

## USB Port

Insert a USB drive into the USB port on your speaker. On USB mode, the speaker will play any .MP3 files found on the USB drive.

## AUX IN Port

Connect one end of a 3.5mm Aux cable (not included) to the Aux In port on your speaker. Connect the other end to the headphone jack on your audio device in order to listen to music using a wired connection.

## TF Card Port

Insert a memory card into the TF card port on your speaker. On TF mode, the speaker will play any .MP3 files found on the memory card.

## MIC IN Port

Insert the included microphone connector into the MIC IN Port.



# SAFETY PRECAUTIONS

When using your speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge your speaker in water.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

## Maintenance and Care

-Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.

-When your speaker is not in use, it should be stored in a cool, dry place.

-Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.

-Never expose your speaker to high temperatures, extreme cold.

-Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

# FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# SPECIFICATIONS

Bluetooth Version: V5.0

Bluetooth Range: Up to 33 feet (10 meters)

Power Supply: DC 5V/1A (USB)

Battery Type: 3.7V 1800mah Lithium Ion Battery

Play Time (Music Only): 2 hours\*

Light Run Time: Up to 3 hours\*

Music and Light Run Time: 1.5 hours\*

\*Applicable at 50% of maximum volume.  
Results will be lower when volume is higher.

# WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

## To Obtain Warranty Service and Troubleshooting Information:

Call (877) 397-8200 or visit our website at [www.aiwa.co](http://www.aiwa.co).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.



©2023 Sakar International  
195 Carter Drive  
Edison, NJ 08817  
[www.sakar.com](http://www.sakar.com)  
Support: (877)-397-8200  
[support@sakar.com](mailto:support@sakar.com)