 





User Manual

—Product Description—

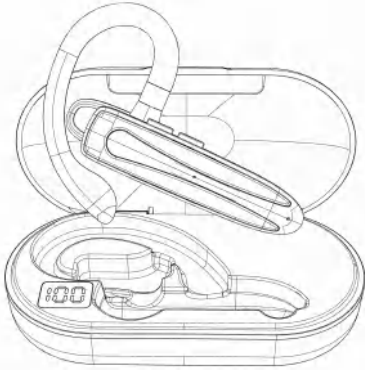


EW Wear 1 Wireless Mono Headset

 
Product Schematic Diagram

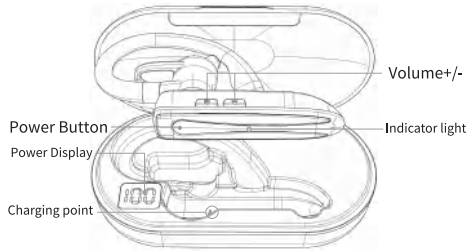


Multi-function Button

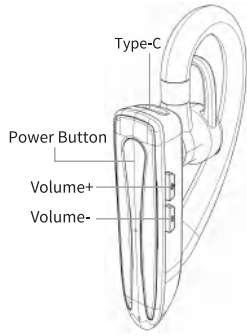 

Pairing Diagram

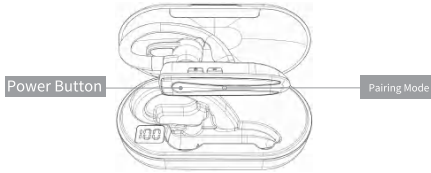 

 Ensure the earphones are off. Press and hold the multifunction button for about 3 seconds until the blue light flashes once, then the red and blue lights will flash alternately (pairing mode). Wait for the connection.

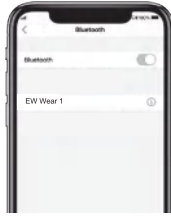

Enable the Bluetooth function on your phone (or other Bluetooth device) and search for nearby devices. Select "EW Wear 1" from the list of found devices and enter the password "0000" (most phones do not require a password). Once paired, the earphone indicator light will turn off, indicating successful pairing. You can now use the earphones for calls and music.

MFB Button

	Refuse to answer Double press the switch
	Cancel call Press the on key (Used during call)
	Third party call handover Press the MFB key
	Pause / play Press on the switch
	Continue the current call and end the three party call MFB double press
	Hang up the current call and switch the three party call MFB key three hit
	Answer Press the on key
	Hang up Press the on key

	Volume + Press the volume+ key
	Next Song Long press on the volume+ button for 1s.
	Volume - Press the volume- key
	Last Song Long press on the volume- button for 1s.
	Video call turn off the microphone Long press the volume '+' for 2 seconds Turn on the microphone for a video call Volume '-' long press for 2 seconds

Packing Contents

1. Earbuds * 1
2. Charging case * 1
3. Type-C charging cable * 1
4. User Manual * 1

Safety Precautions

Why do the earbuds turn off automatically?
Please ensure sufficient battery level. In addition, the earbuds will automatically disconnect Wireless for 10mins. Place the earbuds back to the charging case and they will restart after recollecting.

 
Why cannot I recharge the charging case?
1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2. To ensure proper connection, press the earbuds to fully connect to the charging points of the charging case.
3. The earbud charging points might be stained with dust or sweat. When place them into the charging case for recharging, please clean with alcohol or cloth, and the indicator lights will turn on.
4. Once the prompt tone "Low battery" appears, please recharge the earbuds. When the number displayed by the LED lights on the charging case reaches to "10", please recharge the charging case. Please pay attention to not using up the battery of the earbuds and charging case, as it may shorten the service life of the built-in lithium battery.

Why I cannot detect Wireless ? Why Wireless pairing failed?
1. The wireless signal cannot transmit in water, it is not suitable for swimming or diving.
2. As the Wireless signal cannot transmit in water, high humidity and corrosive environment.
3. Please keep away from high temperature, high humidity and moisture.
4. Please avoid bumping, falling, bending, soaking, and etc.
5. Please do not overcharge for a long time, this will shorten the service life.
6. Please do not disassemble the earbuds or charging case.
7. In the case of feeling any discomfort or pain, please stop using the product.
8. Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities. Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.

Why is there no sound from the earbud, or the music is disconnected?
1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2. To ensure proper connection, "Press the earbuds to fully connect to the charging point of the charging case."
3. The earbud charging points might be stained with dust or sweat. When place them into the charging case for recharging, please clean with alcohol or cloth.
4. Please wipe the sweat from the earbuds before putting into the charging case, and the indicator lights will turn on.
5. Please wipe the sweat from the earbuds before putting into the charging case, and the indicator lights will turn on.

How to recharge the charging case
1. Please use a mobile phone charger to recharge the charging case. You may charge 100% battery level means fully recharged.

Mobile Phone Transmission Distance

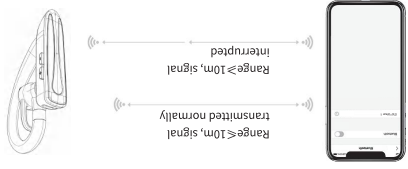

Attention

1. Please avoid disassemble/reassemble the product in case of failure or fire accident.
2. Please keep away from corrosive liquids to prevent the product from damage.
3. Please avoid exposure to extreme temperatures below 10°C, or above 60°C.
4. Please keep beyond the reach of kids or pets.
5. Please avoid use in thundering and raining days to prevent damage or electrical shock.
6. Please avoid use in thundering and raining days to prevent damage or electrical shock.
7. In the case of non-use for above a month, please charge regularly for maintenance.
8. As the Wireless signal cannot transmit in water, it is not suitable for swimming or diving.
9. Please avoid use in thundering and raining days to prevent damage or electrical shock.
10. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
11. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
12. To ensure proper connection, "Press the earbuds to fully connect to the charging point of the charging case."
13. The earbud charging points might be stained with dust or sweat. When place them into the charging case for recharging, please clean with alcohol or cloth.
14. Please wipe the sweat from the earbuds before putting into the charging case, and the indicator lights will turn on.
15. Please wipe the sweat from the earbuds before putting into the charging case, and the indicator lights will turn on.

Waterproof specification

Weight	76g
Charging time of headset	About 1.5h
Charging bin recharging time	About 1.5h
Host battery capacity	800mAh
Earbuds battery capacity	120mAh
Music playing time	10-12h
Call time	10-12h
Standby time	180h
Electrical impedance	130±10%
Frequency band	2.402GHz-2.480GHz
Communication range	≤10m
Wireless support	A2DP,AVRCP,HFP,HSP,EDR
Version	V5.1

Product specification

Version	V5.1
Wireless support	A2DP,AVRCP,HFP,HSP,EDR
Communication range	≤10m
Frequency band	2.402GHz-2.480GHz
Electrical impedance	130±10%
Standby time	180h
Call time	10-12h
Music playing time	10-12h
Earbuds battery capacity	120mAh
Host battery capacity	800mAh
Charging bin recharging time	About 1.5h
Charging time of headset	About 1.5h
Weight	76g

How to recharge the charging case

1. Please use a mobile phone charger to recharge the charging case. You may charge 100% battery level means fully recharged.
2. The digital display of the charging case will indicate the recharging process, and 100% battery level means fully recharged.

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.)
* Note that the Wireless signal of mobile phones can't be transmitted in water.

Waterproof in water
The earbuds are not designed for use in water. Please do not use the earbuds in water. Please do not use the earbuds in water. Please do not use the earbuds in water.

How to pair?

1. Take it out of the charging case and turn it on.
2. The earphones flash red and blue alternately (pairing mode).
3. Open the settings of your phone/tablet--Bluetooth--Turn on Bluetooth--Search--EW Wear 1--Pair/Connect--Play music.
4. Open computer settings - devices - search for Bluetooth devices - EW Wear 1 - add Bluetooth or other devices - search for Bluetooth devices - turn on Bluetooth - pair/connect - play music.
5. Note: If the computer does not have Bluetooth, please insert a Bluetooth adapter and download the Bluetooth driver before using it normally.

When the headset is off, press the on / off key for 8 seconds. Put the headset into the charging compartment, and the headset will automatically turn on and start charging. After taking out the headset, the headset will turn on automatically, and the reset is completed.

Pair with PC/Laptop

1. Put the headset in the charging case, the headset will be automatically turned off and then charge.
2. When the headset is fully charged, the red light of the headset indicator will be off. The display lights up to show the current power of the charging chamber, indicating that the charging chamber is charging the headset.
3. When the headset is fully charged, the red light of the headset indicator will be off.

ON/OFF switch

1. In the first time use, take the earbuds from the charging case and peel off the protective film. Once put into the charging case, the earbuds will turn off and initiate recharging automatically. When taken out from the charging case, the earbuds will turn on automatically.
2. After use, put the earbuds into the charging case, and it will turn off automatically.



Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Electronic World LLC. may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user ' s authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.