




 


# ELECTRO SPLASH



## INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

## OPERATING PANEL

- POWER BUTTON**   
Power ON/OFF - Press for 1.5 seconds to turn it ON or OFF.  
Force Restart - Long press for 3 seconds to force it to restart.  
Mode Switch - Short press BT - AUX - USB.  
Enter/Exit TWS mode - Double press to enter or exit TWS mode.
- MUSIC & VOLUME**   
Volume UP - Short press to increase the volume.  
Next song - Long press 1.5 seconds to move to the next song.
- MUSIC & VOLUME**   
Volume down - Short press to decrease the volume.  
Previous song - Long press 1.5 seconds to move to the previous song.
- PAUSE & PHONE CALL**   
Play/Pause - Short press to pause or play a song.  
Answer/End Phone Call - Short press to answer. During call, short press to end the call.  
Reject a call - Incoming call, long press 1.5 seconds to reject.  
Voice assistant - Under BT mode, long press for 1.5 seconds.  
Redial last number - Under BT mode, press 2 times.  
Clear Bluetooth pairing information - Under BT mode, please disconnect speaker first, then press the button 5 times.  
Disconnect Bluetooth - Under BT mode, press 4 times.
- USB PORT**
- TYPE - C PORT**
- AUX PORT**



Page 2

## HOW TO CHARGE

- Locate the Type-C charging cable:** Find the Type-C charging cable that came with your speaker.
- Connect Type-C cable to the speaker:** Insert the small end of the Type-C charging cable into the charging port located on the side of the speaker.
- Connect the cable to a power source:**  
- If using a computer, insert the larger end of the charging cable into a USB port on your computer.
- Verify the connection:** Ensure that the connections are secure and the charging indicator on the speaker is illuminated, indicating that it is charging.



Page 3

## PRODUCT SPECIFICATIONS

Input: DC 5V 1A  
Output Power: 1\*8W  
Battery Capacity: 2200mAh  
Bluetooth Version: 5.4  
Transmission Distance: 10 meters  
50% Volume Play Time: 4-6 Hours  
Protection Grade: IPX5 Waterproof  
Charging Interface: Type-C

<b>CONTENTS:</b>	1 x AUX Audio Cable
1 x Waterproof Wireless Speaker	1 x Instruction Manual
1 x USB A-C Charging Cable	

Page 4

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.