 


Smart wireless meat thermometer

Thank you for choosing our Wireless Smart Meat Thermometer

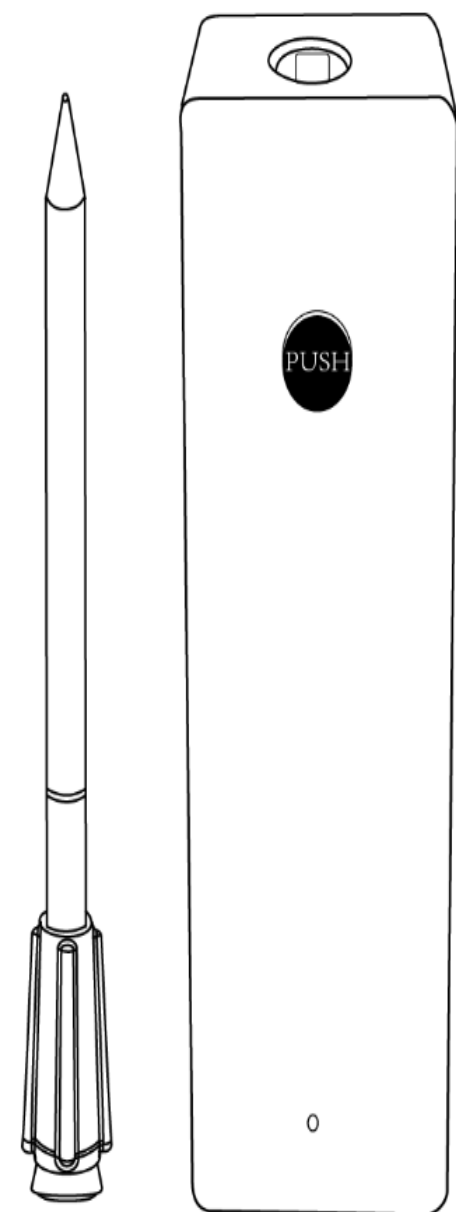

USER MANUAL

 
Model: JX168

Please read this manual carefully before using and keep it properly for future reference (Please follow the important safety information (at the back of this page/ in the PROBER APP) to get the better user experience. For more information, please check "Settings-Help/Support" on the APP)

OPERATING INSTRUCTION

Step 1.

Charge the booster for 10-15 minutes. During charging, the LED light is red, and it will turn Blue when fully charged.

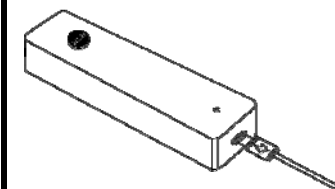

Step 3.

Launch the app



 
Step 5.

Click the "+" sign in the APP to pair the booster for the first time.



PROBE INSERTION

ALWAYS INSERT INTO MEAT PAST THE SAFETY NOTCH TO AVOID DAMAGE

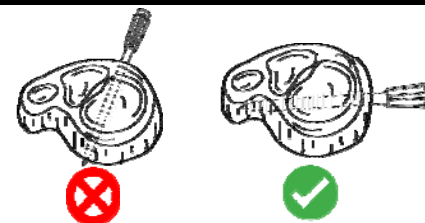

Click to enter the cooking interface, select the food to be cooked, set the target temperature and the preset temperature. Click on the settings in the upper right corner of the APP interface to select functions such as Fahrenheit/Celsius, language, sound, etc. Click to start cooking. When the selected food reaches the target temperature, the APP will issue an alert or vibration to remind you that the food is ready.

 
Step 2.

Scan the QR code on the back of the manual (or search for PROBER in the app store) (iOS/Android).



Step 4.

Press the "push" button on the booster, and take out probe to activate the product.

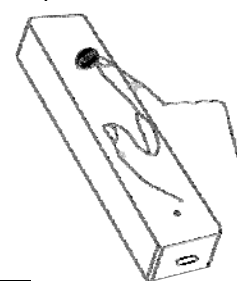

Step 6.

Start making the meat dishes you want.



PRODUCT FEATURES

Premium Food Grade 304 Stainless Steel

Water resistant design, dustproof and easy to clean

Safety Notch

Always insert into meat past the safety notch to avoid damage

 
Internal Temperature Probe
Accurate measures internal temperatures from 32 °F to 212 °F
+/- 1.8°F Accuracy
Fast respond in 2 seconds



Heat-resistant Plastic Handle
Maximum temperature resistance 608°F

CAUTION

Please Place the Booster Close to the Probe

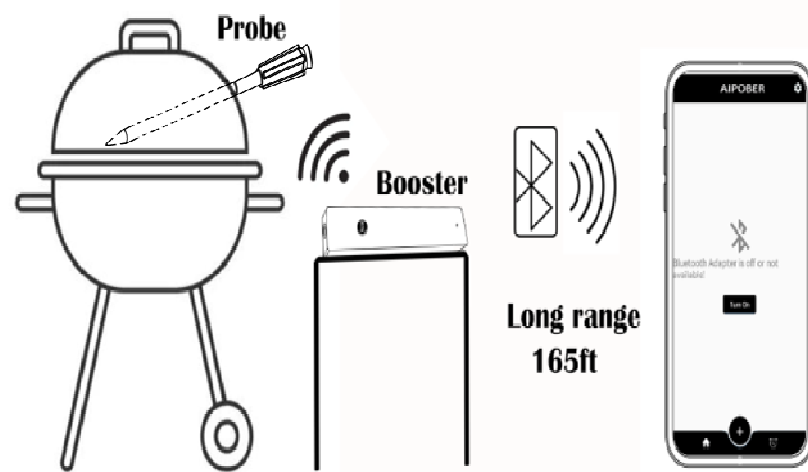

CHARGING: Probe: Charging for 10-15 minutes can be used for 36-48 hours.

App Store



Google play



The APP does not have cloud server and will not automatically collect customer private information

IMPORTANT SAFETY INFORMATION

NOTE: Use this device only for its intended purpose

Warning

- Do not have direct skin contact with the probe during or after cooking to avoid burns
- Close supervision is necessary if this is to be used near children. To prevent them from using this product as a toy.
- Do not immerse the charging base in water or other liquid. The probe is designed to be water resistant, not waterproof, it should not be submerged in water for a long time to avoid product damage.
- The use of accessories not recommended by the device manufacturer may cause danger or injury.
- Do not place this product in a microwave oven, pressure cooker, or deep frying pan to avoid danger.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

FCC WARNIN

If this equipment does cause harmful interference to radio or television reception which can be corrected by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

 
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CARE AND MAINTENANCE

CARE

- Clean before/after use.
- Make sure the probes are completely dry and clean when placed back in the charging dock/booster. When place back the probe, you will hear a ticking sound, and the LED indicator light will flash red three times to indicate that the probe is in place.

When inserting the probe back into the base, please insert it in the correct direction. When not in use, please store the device in a cool, dry place.

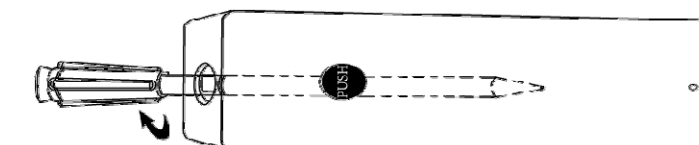

WARRANTY

- Operation must comply with the following two conditions:
- This device must not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the users' authority to operate the equipment. This warranty is VOID if: a) the Product Safety instructions for proper usage of the Products are not followed; b) accidental damage occurred caused by the user or cooking apparatus; c) the prober was used commercially; or d) if prober has been tampered with.

- This device has a 12-month after-sales warranty. We will provide free service for any functional failure confirmed by the service center.
- If you have any questions, please feel free to email us and we will be happy to serve you.

E-mail: XiaYchaugService@outlook.com