

Product Information:

Length: 155mm, Width: 155mm, Height: 50mm.

Battery Information:

Product includes 1 x Li-Po battery. 3.7V -300mAh, installed inside of product, it is replaceable.

Remote Control:

3 x AAA battery required. 1.5V, it is replaceable. Not included.

Parameter Information:

Charging time: About 30 minutes.

Flight Time: About 5-8 minutes.

Control Distance: 50m.

Product List:

Motion Control UFO, Controller, Instruction manual, USB charge cable, Propellers X4, Finger Holders X2.

Important:

Please keep the UFO far away from direct sunlight or heat. The UFO and remote control contain electrical parts. Please keep it far away from water or wet environment. Please use a dry, clean cloth to clean the product if it gets dirty. Do not wash any parts with detergent.

Hereby, Gift Universe Management Ltd, declares this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the original Declaration of Conformity can be obtained at the following address: Gift Universe, The Atrium, Curtis Road, Dorking Surrey RH4 1XA. This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

Manufactured & Imported by

The Source Wholesale
The Atrium, Curtis Road, Dorking,
Surrey RH41XA

The Source Wholesale BV
Joop Geesinkweg 701,
1114 AB Amsterdam-Duivendrecht

The Source Wholesale Inc
2055 Limestone RD, STE 200c
Wilmington, DE 19808 USA

 
Please retain the important information
on this packaging for future reference.

MADE IN CHINA

71518 06/21



EN

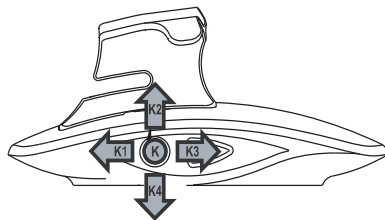


- K - Auto take off/landing (please refer to operation details)
- K1 - Speed adjustment (please refer to operation details)
- K2 - Stunt (please refer to operation details)
- K3 - Turning (please refer to operation details)
- K4 - Height adjustment (please refer to operation details)

3*AAA/1.5V

Battery not included


Battery Charging

 Connect the charging cable to the UFO battery. Then plug into a computers USB port. When charging, the USB's RED indicator light will be ON. When the battery has fully charged, the RED indicator light will switch off. Charge the battery on a non-flammable surface. Never leave the drone / battery unattended while charging.

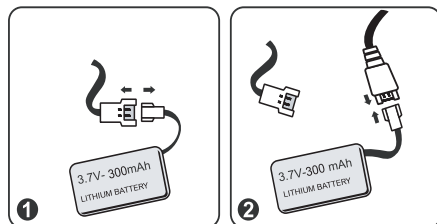


Caution:

 When using the computer for charging, please remember to pull out the charging cable before shutting down the computer. Please remove the battery from the UFO before charging.

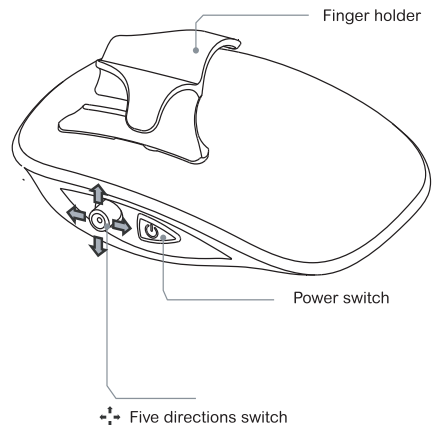


Remote Control Battery Installation:

 1. Unscrew the battery cover and remove. (Refer to picture 3)
2. Install 3 x AAA batteries according to the correct polarities. (Refer to picture 4)
3. Replace the battery cover and screw to secure.

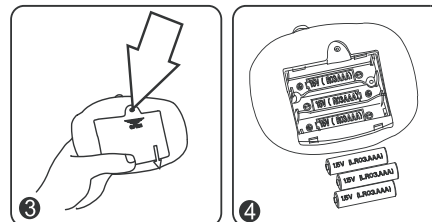

RED5
motion
«CONTROL»
UFO

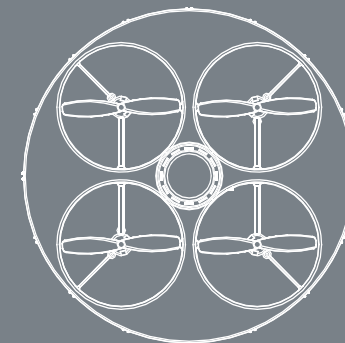 

INSTRUCTION MANUAL

Ages 8+

Trouble Shooting:

1. Problem: LED indicator flashes but, no response.

Reason A: Pairing was not successful.

Trouble Shooting: Re-pair the UFO and the remote control.

Reason B: Remote control or UFO has insufficient power.

Trouble Shooting: Replace the controllers batteries and/or recharge the UFO's battery.

2. Problem: The blades spin but the UFO won't fly.

Reason A: The blade has been damaged.

Trouble Shooting: Replace the damaged blade, with the spares included.

Reason B: UFO battery is not fully charged.

Trouble Shooting: Charge the UFO until the battery is fully charged.

3. Problem: The UFO shakes.

Reason A: The blade has been damaged.

Trouble Shooting: Replace the damaged blade with the spares included.

4. Problem: The UFO flies out of control after crashing.

Reason A: The trim adjustment may have been affected after the crash,

causing the UFO to lose balance.

Trouble Shooting: Re-start the UFO.

IMPORTANT SAFETY PRECAUTIONS

Note:

The UFO contains a Lithium Polymer Battery which is built into the UFO. Do not disassemble the UFO as this may result in permanent damage or hazardous operation.

DO NOT modify this product in any way.

DO NOT launch at people or animals.

DO NOT use near overhead cables, vents, fans or any other obstacles.

Keep propeller away from eyes, face, hands, hair and loose clothing.

Make sure people around you are aware you are using the UFO.

If the UFO gets stuck in high places, ask an adult to retrieve it for you. DO NOT attempt to retrieve it yourself.

Only use the charger provided to charge the UFO.

The charging process should only be completed by adults

ADULT SUPERVISION IS RECOMMENDED AT ALL TIMES!

Note:

 
The battery will become warm during use, before charging the battery please allow the battery to cool down completely before removing from the UFO and before charging.

IMPORTANT BATTERY INFORMATION


- Requires 3 x AAA 4.5V (not included).
- Batteries should only be replaced by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not re-charge non-rechargeable batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged.
- Ensure batteries are inserted with the correct polarity.
- Exhausted batteries should always be removed.
- The terminals should not be short circuited.
- Use a screwdriver to remove the screw from the battery cover.
Replace battery cover and screw before use.

Flight and Preparation

1. Connect the battery to the UFO, the LED indicator will then start to flash. Place the UFO on flat ground, the LED indicator will then change to a slow flash.
2. Make sure the batteries are correctly installed into the remote control.
3. Press the ON/OFF transparent button of the remote control. (Refer to picture 1). The UFO's LED indicator will flash to indicate successful pairing. If there is no indication of pairing, re-press the ON/OFF button until successful.

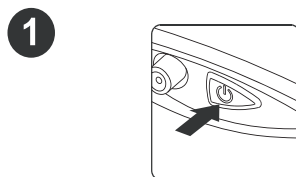


Operation and Control

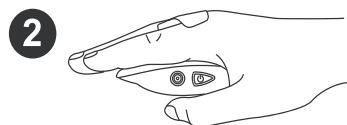 


Hold the remote control horizontally.
(Refer to picture 2).

 
1. Press "K", the UFO will take off automatically and hover at a pre-set height. (Refer to picture 3).

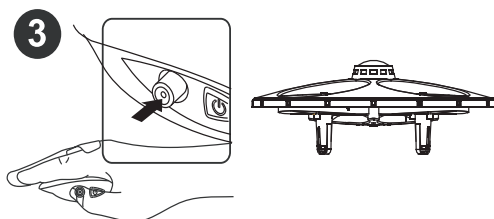

 
2. To control the UFO, gently angle the remote control forward/backward/ left/ right, the UFO will then move accordingly. (Refer to picture 4).

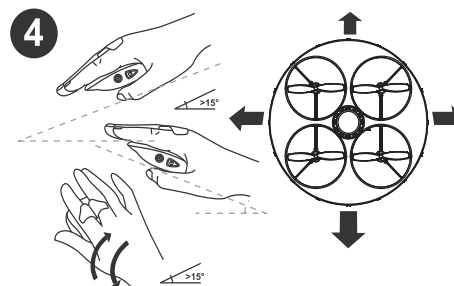

 
3. Push "K" to "K3" position, at the same time move your hand to the left or to the right. The UFO will then turn left or right. (Refer to picture 5)

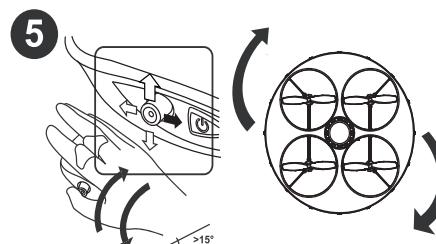

 4. Push "K" to "K1" position, to adjust the speed setting. Push once to increase to a medium speed. Push again for a high speed. Push once again to return to a low speed. (Refer to picture 6).

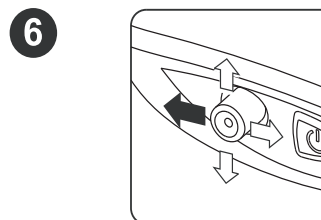

 5. To fly the UFO lower or higher, press "K" to "K4" position. While at the same time gently and slowly moving your wrist up or down. Release from "K4" position and the UFO will hover at current height. (Refer to picture 7)

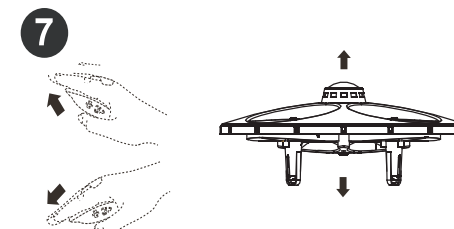


6. Landing - Press "K", the UFO will stop flying and begin to land slowly.

7. In case of an emergency, press the ON/OFF button to turn off the UFO immediately.

3D Eversion

 1. Ensure the UFO is flying a minimum of 2 meters off the ground.
2. Press "K" to "K2" position, lean the remote control to the right/left or forwards/ backwards to perform a 360° stunt. Make sure that when leaning the remote control, your wrist is at an angle over 75°. Please also ensure the UFO is fully charged. (Refer to picture 8).

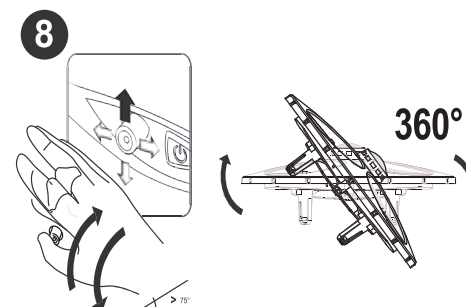

Produktinformationen:

Länge: 155 mm , Breite: 155mm, Höhe: 50 mm.

Batterieinformationen:

Produkt enthält 1 x Li-Po-Batterie, 3.7V -300mAh, im Produkt installiert und austauschbar.

Fernbedienung:

3 x AAA-Batterien erforderlich. 1.5V, sie ist austauschbar. Nicht inbegriffen.

Parameter-Informationen:

Ladezeit: Etwa 30 Minuten.
Flugzeit: Etwa 5 bis 8 Minuten.
Kontrollidistanz: 50 m.

Produktliste:

Motion Control UFO, Controller, Anleitung,
USB-Ladekabel, Propeller X4, Fingerhalter X2.

Wichtig:

Bitte das UFO von direkter Sonneneinstrahlung und Hitze fernhalten. Das UFO und die Fernbedienung enthalten elektrische Teile. Bitte von Wasser oder feuchten Umgebungen fernhalten. Wenn das Produkt schmutzig wird, bitte mit einem trockenen, sauberen Tuch reinigen. Keine der Teile mit Reinigungsmittel säubern.

Hiermit erklärt Gift Universe Management Ltd, dass dieses Produkt den wesentlichen Anforderungen und allen anderen relevanten Vorgaben der Richtlinie 2014/53/EU entspricht. Ein Exemplar der ursprünglichen Konformitätserklärung kann an folgender Adresse angefordert werden: Gift Universe, The Atrium, Curtis Road, Dorking Surrey RH4 1XA, Großbritannien. Dieses Produkt trägt das Entsorgungssymbol für Elektromüll und elektronische Geräte (WEEE). Dies bedeutet, dass dieses Produkt gemäß der europäischen Richtlinie 2012/19/EU wiederverwertet oder zerlegt werden muss, um seine Auswirkung auf die Umwelt zu minimieren. Wende dich für weitere Informationen bitte an deine lokalen oder regionalen Behörden. Elektronische Produkte, die nicht ordnungsgemäß entsorgt werden, können aufgrund von Schadstoffen möglicherweise die Umwelt und die menschliche Gesundheit schädigen.

Hergestellt und importiert von

The Source Wholesale
The Atrium, Curtis Road, Dorking,
Surrey RH41XA, Großbritannien

The Source Wholesale BV
Joop Geesinkweg 701,
1114 AB Amsterdam-Duivendrecht Niederlande

The Source Wholesale Inc
2055 Limestone RD, STE 200c
Wilmington, DE 19808 USA

 
Bitte bewahre die wichtigen Informationen auf dieser Verpackung zum späteren Nachlesen auf.

HERGESTELLT IN CHINA

71518 06/21



DE

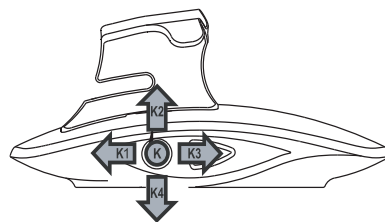


K - Automatisches Starten/Landen (bitte die Bedienungsanleitung herbeiziehen)
K1 - Geschwindigkeitseinstellung (bitte die Bedienungsanleitung herbeiziehen)
K2 - Stunt (bitte die Bedienungsanleitung herbeiziehen)
K3 - Wenden (bitte die Bedienungsanleitung herbeiziehen)
K4 - Höheneinstellung (bitte die Bedienungsanleitung herbeiziehen)

3*AAA/1.5V

Batterien nicht inbegriffen


Akku laden

 Schließen Sie das Ladekabel an die UFO-Batterie an. Schließen Sie es dann an den USB-Anschluss eines Computers an. Während des Ladevorgangs leuchtet die rote USB-Anzeige auf. Wenn die Batterie vollständig aufgeladen ist, erlischt die ROTE Kontrollleuchte. Laden Sie den Akku auf einer nicht brennbaren Oberfläche auf. Lassen Sie die Drohne / den Akku während des Ladens.

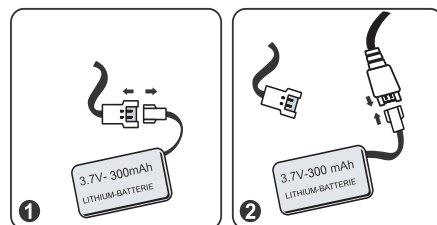



Vorsicht:

 Wenn du mit dem Computer auflädst, denke bitte daran, das Ladekabel herauszuziehen, bevor du den Computer herunterfährst. Bitte trenne den Akku vom UFO, bevor du ihn auflädst.

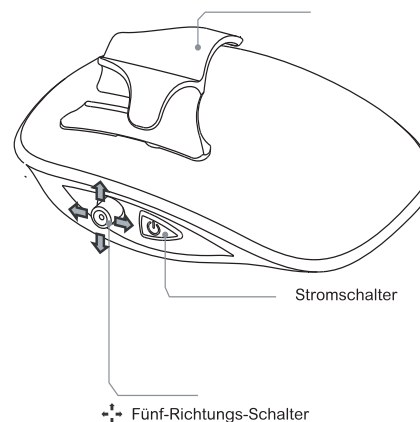

Installation der Batterie in der Fernbedienung:

  1. Schraube die Abdeckung zum Batteriefach ab und entferne sie. (siehe an Abbildung 3)
2. Installiere 3 x AAA-Batterien und achte dabei auf die richtige Polung. (siehe an Abbildung 4)
3. Bringe den Deckel zum Batteriefach wieder an und schraube ihn wieder fest.

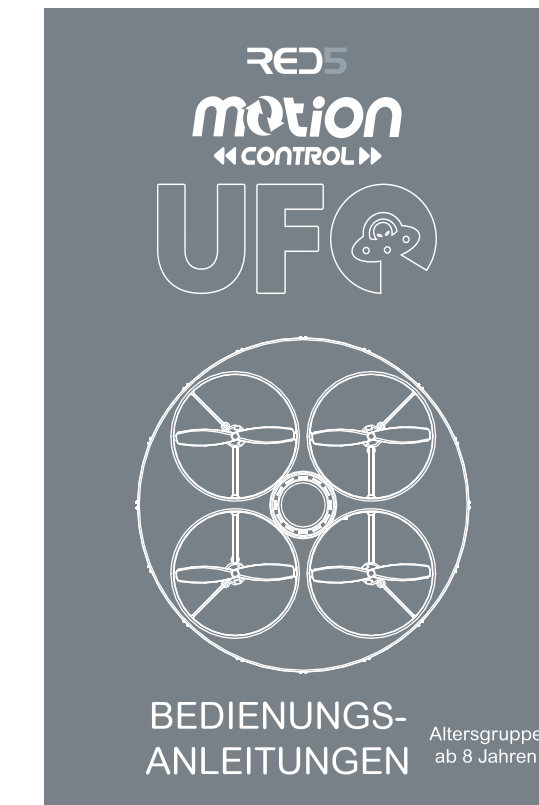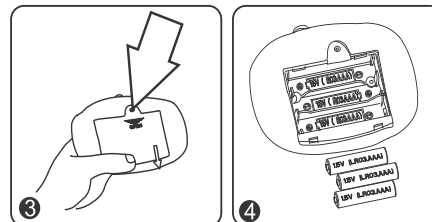

Fehlerbehebung:

1. Problem: Die LED-Anzeige leuchtet auf, aber keine Reaktion.

Grund A: Die Paarung war nicht erfolgreich.
Fehlerbehebung: Paare das UFO noch einmal mit der Fernbedienung.

Grund B: Fernbedienung oder UFO haben nicht mehr genug Strom.
Fehlerbehebung: Tausche die Batterien des Controllers aus und/oder lade die Batterie des UFOs neu.

2. Problem: Die Rotorblätter drehen sich, aber das UFO fliegt nicht.

Grund A: Das Rotorblatt wurde beschädigt.
Fehlerbehebung: Ersetze das beschädigte Blatt mit den mitgelieferten Ersatzblättern.

Grund B: Der Akku des UFOs ist nicht voll aufgeladen.
Fehlerbehebung: Lade das UFO auf, bis der Akku voll aufgeladen ist.

3. Problem: Das UFO rüttelt

Grund A: Das Rotorblatt wurde beschädigt.
Fehlerbehebung: Ersetze das beschädigte Blatt mit den mitgelieferten Ersatzblättern.

4. Problem: Nach einem Absturz fliegt das UFO unkontrolliert,

Grund A: Die Trim-Anpassung könnte nach dem Absturz beeinträchtigt sein, was dazu führt, dass das UFO seine Balance verliert.
Fehlerbehebung: Starte das UFO neu