



USER MANUAL



MPD1241-XB


PROFESSIONAL SPEAKER

PLEASE READ THIS USER MANUAL CAREFULLY BEFORE SYSTEM CONNECTION

FCC ID: 2BBFBMPD1241-XE
MADE IN CHINA

IMPORTANT SAFETY MEASURES

 Before using this machine, please read all the safety and operating instructions, meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.



1. Protection of electrifier/power supply line: Be aware that the electric power supply line is not trapped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. **DO NOT** lengthen the electric shock, **DO NOT** pull or drag or the power supply line.
2. Ventilation: This must be kept clear and not placed on the floor. Do not put on it or cover it with it. The distance away from the wall should not be less than 10 centimeters. Do not put set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
3. Casing Dismantling: **DO NOT** dismantle the casing. If one touches the inner components, he will probably get serious electric shock.
4. Power supply: Do not use power supply with unusual small and smoke, cut power supplies immediately and pulls out the plug from the outlet on the wall. Contact the sell shop or nearest repairing center.

Attention: This set applies to AC 110V / 50Hz~60Hz power supply. Use standard power supply.
Please be sure for te correct power supply before use it.

PRODUCT FEATURES

- Wireless
- Plays songs stored in external audio device.
- Guitar input ●Microphone inputs
- Wireless microphone included ●With remote control
- Built-in rechargeable battery ●Super dynamic sound speaker
- X-Bass is powerful

REMOTE CONTROL



- 1 Standby
- 2 LINE (Audio input)
- 3 Prev/FM CH-
- 4 Play/pause/FM tu
- 5 Next/FM CH+
- 6 Repeat
- 7 Stop
- 8 Volume up
- 9 Volume down
- 0 Mute
- EQ Equalizer
- NUM Number

CONNECTING

1. This set applies to AC 110V, 50/60Hz
2. AC power: battery can be charged when connected to AC power. Red light on battery is charging, it will change to green once battery complete charge.
3. Internal battery will be charged even device switch off when plugged in to AC power
4. Speaker battery can be charged using 12V external car battery as well(connect cable not included) by "DC 12V input". Please make sure "+" and "-" in right connection.
5. Adjust function keys to your personal audio preference.

 
BATTERY & CHARGING

1. The unit takes approximately 8 hours to fully charge. It will automatically begin charging once the power cord is connected.
2. If the battery power is low may caused sound distortion or stop play, please charging the battery on time.
3. To maximize the battery's lifespan, please charging the battery immediately. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 30days.
4. To saving battery, please power off once stop using.

HOW TO CONNECT TO BT:

When you turn on the speaker, the display will read OPEN that means your speaker is ready to connect. Go to your smart device and search for your BT device. You will see the device name MPD1241-XB and please select that. Please select MPD1241-XB and you will be connected.

For the TWS CONNECTION -HOW TO PAIR TWO SPEAKERS


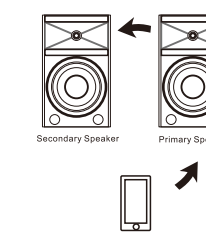


First bring two speakers next to each other, turn on both the speakers. Both the speakers display should read open. The first speaker/primary speaker, please press and hold the TWS button for 3 seconds. The primary speaker will sound an alarm and the display will show "BTST" and the second speaker automatically connect to the primary speaker. The display of secondary speaker will say BT.

Now you may connect to BT from your smart device and listen to music from both your speaker.

PANEL FUNCTION INSTRUCTION

  - ① **POWER** ON/OFF SWITCH/RESET
- ② **X.BASS**/V. X-BASS ADJUST
- ③ **VOLUME**/MASTER VOLUME ADJUST
- ④ **CARD** INPUT
- ⑤ **AUDIO** INPUT
- ⑥ **DC 12V INPUT**: DC 12V CHARGING INPUT
- ⑦ **DELAY**: CHARGE TIME BETWEEN THE SOURCE AND SPEAKER
- ⑧ **ECHO**: CHARGE TIME
- ⑨ **GT.VOL**: GUITAR VOICE ADJUST
- ⑩ **MIC. VOL**: MICROPHONE GAIN ADJUST
- ⑪ **M.HIM**: MID/HIGH MICROPHONE ADJUST
- ⑫ **MIC. MID**: MICROPHONE INPUT JACK 1
- ⑬ **GT.VOL**: GUITAR INPUT JACK
- ⑭ **M.PRI**: MICROPHONE POSITION ON/OFF SWITCH
- ⑮ **MODE**: MODE SELECT
- ⑯ **REPEAT**
- ⑰ **REC**: RECORDING: INSERT CARD PRESS THIS BUTTON FOR RECORDING, PRESS AGAIN TO STOP AND PLAY RECORDING SOUND
- ⑱ **LED**: MODE LED MODE SELECT
- ⑲ **PREV**: PREVIOUS SONG
- ⑳ **SCAN**: TWS/ FM-PLAY: PAUSE-TWS/FM STATION AUTOMATIC SEARCH

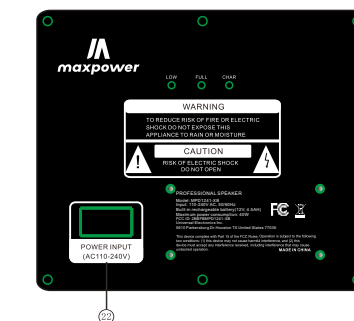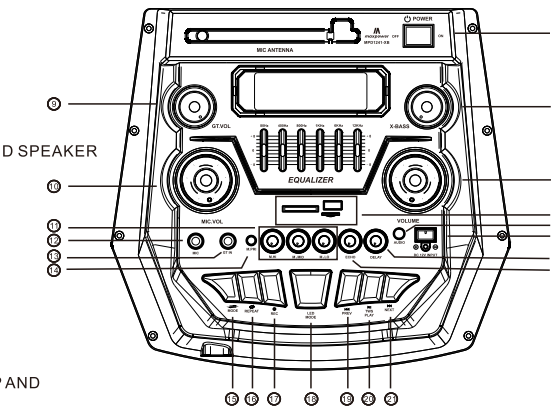

②② **POWER INPUT:** 110-240V,50/60Hz

1

2

3

4

5