

Long press the " O " key to power on the device when the device is powered off. The LCD is on and an announcement is heard. (2)Turn off the machine Long press the " O " button to turn off the machinein any mode

(3) Video recording In recording mode, press " 💿 " to start recording. In recording mode, press" stop recording.

# (4) Motion detection

ong press " o" in the recording mode to enter the motion letection mode. If motions are detected, the recording will start. motion is detected, the recording will stop automatically. Press " to exit motion detection recording. (Video recording for 1 minute object movement is detected, and continuous object movement video recording for 3 minutes is saved in segments.)

(5) Take a photo In the photo mode, press " utton to take a photo.

n recording mode, press" 🚇 " to start recording. In recording mode, press" **Q** " to stop recording.

(7) Image flip The default orientation of the image is back clip. If you need to

rotate the lens for shooting, press " 🔘 " to adjust the image.

turn off the screen, Short press any button and the display lights

(8) Screensavers In any mode when the machine is turned on, short press " 👔 "

(9) Fill-in light

In any mode when the machine is turned on, Long press " 🕥 " to turn on LED, and long press" 🕥 " again to turn off LED.

### (10) Phase album

Tap " to enter the album. In the album, tap " to bro up and down the pictures and videos And i to play the video and recording.Press and hold the "ok" key in

In recording mode, press "" to enter setting. In the setting menu, press" "". Key up or down, press "" to modify the parameters. Tap in photo mode" " key can enter the picture

settings, for the photo parameters and exposure settings. (12) Time setting

setting. In the setting menu, select "date/time" to set the time.

machine. After resetting, it can be used normally.

In the mode of video standby, long press " or " to enter time

(13) Reset hole The machine crashes and the buttons are invalid, making it unabl to use properly. Press and hold the power button for 10 seconds use a pointed object to insert the "RST" reset hole to reset the

### APP download and installation

Scan the OR code below to download and install "Sports Camera" or search "Sports Camera" in Google play or App store to





## Hot spot WiFi L. WiFi switch

Search for the connection name "network beginning with CS\_such

## 2. WiFi connection

as CS06\_CE88" in WiFi settings of mobile phone or tablet computer. enter the main interface and click " " to enter the real-time preview interface. Select video you encounter other problems during operation, please click help

Help: open the instructions

# Connect to a computer

nnected to the computer can be used as a U disk, you can freel copy, cut and paste files, delete, format.

### Charging instructions

For battery indicator, please refer to the following figure:



parging this device is equipped with a built-in rechargeable um battery. When using this device for the first time, please arge it first. The indicator light remains on during charging, bu ns off when fully charged. You can charge it through the

onnect the computer to charge, and use USB to connect to the

Use a computer adapter or a portable power source to charge. • After each use of the battery, it should be charged for about 3 hour (the charging time depends on the adapter). After full, it should

### Suggestion: Try not to use the function while charging, it may cause battery and TF card damage!

### Usage

Please strictly abide by the relevant laws of the country where the (2) this device must accept any interference received, including interference product is used, and do not use this product for any illegal purposes use or suffer the consequences.

Please use in natural temperature, do not use in the human body

Any changes or modifications not expressly approved by the party responsible Operating temperature for compliance could void the user's authority to operate the equipment.

### can not adapt to the temperature. Working humidity

camera effect.

residential installation. This equip generates, uses and can radiate radio Please use the product in the suitable environment humidity. De not place the product in the humid working environment. This product does not have waterproof function, avoid drenching or exposure to rain.

not point the camera directly at strong light sources such as the sun


### Cleaning requirements

Shooting requirements

To maintain compliance with FCC's RF Exposure guidelines, This equipment Do not use in an environment with too high dust density to avoid contamination of lens and other components dust, affect the radiator and your body: Use only the supplied antenna.

or a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits

are designed to provide reasonable protection against harmful interference

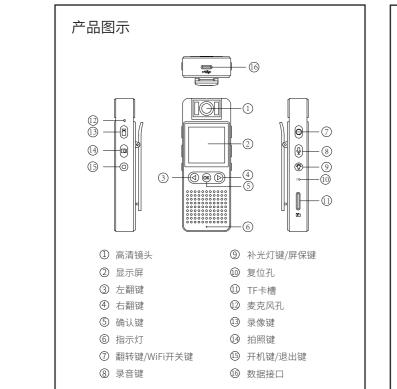



**9 9** 



安装TF卡





在关机状态下长按" 〇 "键开机,显示屏亮并听见提示音。 (2) 关机

在开机任何模式下长按" 🔘 "键关机,显示屏熄灭。 (3) 录像 在录像模式短按"❹"键开始录像,录像状态下短按"④"键停止录像。

# 在录像模式长按"②"键进入移动侦测模式,有侦测到物体移动开始 (侦测到物体移动一次录像1分钟,有连续物体移动录像3分钟一段分段保存) (5)拍照 (6)录音

图像默认背夹方向,需要旋转镜头拍摄请短按" 🎯 "键调整图像。 (8)屏保模式 开机任何模式下,短按" 🕤 "关闭屏幕,短按任何按键显示屏亮起。 (9)补光开关

# (10)相册

# (11)设置

在拍照模式短按" 📵 "键拍照一张。

# 在录音模式短按" ② "键开始录音,录音状态下短按" ② "键停止录音。

机器出现死机,按键无效,无法正常使用,长按开机键10秒或用尖状物 对"RST"复位孔插入点按使机器进行复位,复位后可以正常使用。

(13)复位

开机任何模式下,长按" "键开启LED灯,再次长按" "键关闭

短按"♂"进入相册,在相册短按"◆◆"键上下浏览图片以及视频和录 音文件,短按"弧"播放视频以及录音,在相册长按"弧"键进入删除侧 除当前或全部删除)或保护文件。

在录像待机模式短按"◎ "键进入设置,在设置菜单可通过短按" ● " 赴上下选择,短按"OK"可进行各项参数设置修改。在拍照模式短按 "创"键可进入图片设置,针对照片参数及曝光等设置。

### (12)时间设置 在录像待机模式长按" 🐠 "键进入设置,在设置菜单里面选择一项

\_CE88)",连接成功后打开Sports Camera App进入主界面点" 🔘 "过 实时预览界面,在预览界面选择录像/拍照。操作时如有遇到其他问题,请 点击主界面帮助查看。

《日期/时间》进入后进行时间设置。

## APP下载安装 扫描下方二维码来下载安装 "Sports Camera", 或在 Google play、

App Store 搜索 "Sports Camera"下载安装。







# 热点WiFi



# 2. WiFi连接

手机或者平板电脑的WiFi设置搜索连接名称为"CS开头的网络例如CS

## 连接电脑 在任何模式下,均可直接连接电脑,连接电脑后可以作为U盘使用,

可以自由进行文件的复制,剪贴,删除,格式化。

# 充电说明

电池电量指示,请参考下图指示:

_				
已量充足	电量稍低	电量低	电量不足	

充电, 本机内置可充电锂电池, 初次使用本机时, 请先进行充电, 充电时指示灯常亮, 充满熄灭, 可以通过以下方式充电: • 连接电脑充电,使用USB与电脑连接。

### ● 使用电脑适配器或移动电源充电 ● 每次使用完电池后再充电,大约要充3小时左右充满(充电时间根据适配

相关参数

器而决定),充满后尽可能再充20分钟,保证电池充满使用。 建议:尽量不要在充电时使用功能,可能会导致电池以及TF卡损坏

				l .
	视频分辨率	1920*1080P		工作湿度
视频	视频格式	MOV		请在人类适宜环境湿度下使用,勿将产品置于潮湿的工作环境,本产品不具备防水功能,
17629块	视频帧率	25fps		避免淋水或暴露在雨中。
	影像比例	16:9		拍摄要求
音频	录音格式	WAV		请在充足光源的环境下使用,勿将摄像头直接对准太阳等强光光源,以免器件受损。
四上	照片分辨率	4608*3456P		保洁要求
图片	照片格式	JPG	1	请勿在粉尘密度过大的环境下使用,以免镜头以及其他部件沾染粉尘,影响摄像效果。
电池	电池类型	内置型高容量聚合锂电池		
电池 :	电池容量	1400mAh		
				V4.4

其他	工作时间	可持续录像290分钟左右	
	充电电压	DC-5V	
	存储支持	最高可支持256G Micro SD卡	
	接口类型	Type-C	
	支持系统	Windows;Mac Os;Linux	
	播放软件	系统自带或主流影音播放软件	

Correlation parameter

Picture Photo format

Battery

 Video
 Video resolution
 1920\*1080P

 Video
 Video format
 MOV

 Video frame rate
 25fps

 Image ratio
 16:9

Battery type

Storage support

polymerized lithiun

Working time Sustainable video a

Interface type Type-C

Support system Windows;Mac Os;Lin

Playback software | audio and video player |

software

请严格遵守使用所在国家相关法律,不得将此产品用于任何非法用途,否则后果自负。 工作温度

### 请在自然温度下使用,请勿在人体不能适应的温度下使用。 工作湿度 请在人类适宜环境湿度下使用,勿将产品置于潮湿的工作环境,本产品不具备防水功能,

避免淋水或暴露在雨中。

# 请在充足光源的环境下使用,勿将摄像头直接对准太阳等强光光源,以免器件受损。

requency energy and, if not installed and used in accordance with the nstructions, may cause harmful interference to radio comm. However, there o guarantee that interference will not occur in a particular installation. If thi quipment does cause harmful interference to radio or television reception, hich can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the followin Use the camera in an environment with sufficient light sources. Do Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING

L) this device may not cause harmful interference.