

 <b>Manual de Usuario</b> <b>KSW 80</b> Reloj Inteligente para Niños (Impermeable)  <a href="http://www.esenses.co">www.esenses.co</a>	<b>Contenido del empaque y especificaciones</b> <b>Contenido del empaque</b> <table border="1"> <tr><td>Reloj</td><td>1</td></tr> <tr><td>Cable USB</td><td>1</td></tr> <tr><td>Manual</td><td>1</td></tr> <tr><td>Equipo SIM</td><td>1</td></tr> </table> <b>Especificaciones:</b> - Producto: Reloj inteligente para niños - Voltaje de carga: 5V - Temperatura de trabajo: -20°C~60°C - Soporte de red: 2G GSM, 3G WCDMA y 4G TDD/FDD-LTE	Reloj	1	Cable USB	1	Manual	1	Equipo SIM	1	<b>Operación manual</b> <b>1. Obtenga una tarjeta Nano SIM</b> 1) En primer lugar, prepare para una tarjeta Nano SIM y el paquete de tarjeta SIM. El teléfono debe incluir el Relyo de Internet y la llamada de voz. Puede consultar a los operadores de telecomunicaciones locales. Consulta el servicio de atención al cliente de preventa si tiene alguna pregunta. 2) La tarjeta SIM debe ser compatible con la red 4G con transmisión de datos y tiempo de transmisión	<b>Operación manual</b> <b>2. ¿Cómo instalar la tarjeta SIM?</b> 1) Saque la bandeja de la tarjeta SIM, luego el lado del chipset hacia arriba y colóquelo en el rayo.	<b>Operación manual</b> <b>3. Descarga la APLICACIÓN</b> 1) Abra su WhatsApp y escanee el código QR a continuación, descárguelo e instálelo.	<b>Operación manual</b> <b>4. Registrarse</b> Cuando se complete la instalación, comience a registrar su cuenta personal.	<b>Operación manual</b> <b>5. Iniciar sesión</b> Después del registro, intente iniciar sesión.	<b>Operación manual</b> <b>6. Agregar dispositivo</b> Vaya a encontrar la lista de dispositivos y escanee el código Reg (en el menú del reloj) o en la parte posterior del reloj para agregar el reloj.	<b>Operación manual</b> <b>7. Verifique la combinación exitosa con el reloj</b> Vaya a Buscar reloj para verificar bien la combinación del reloj. Lo que significa que la conexión del reloj y la aplicación se realizó correctamente.	<b>Operación manual</b> <b>8. Configuración</b> Inicie sesión y luego la configuración, haga clic en la guía telefónica o en los contactos y guarde los números que necesita. Lo mismo ocurre con las demás funciones.
Reloj	1																
Cable USB	1																
Manual	1																
Equipo SIM	1																

<b>Operación manual</b> <b>9. Llamando</b> 1) Llamar desde el reloj: 1.1) Use su dedo para deslizar la pantalla desde el lado izquierdo o derecho para encontrar la interfaz de la guía telefónica, haga clic en el icono de APLICACIÓN, y luego elija el número al que necesita llamar. 2) Mantenga presionado el botón 1, automáticamente llamará a su hijo para realizar la llamada, si no, llamará a la segunda ronda. 3) Presione el botón 1 para cancelar la llamada. <b>Recordar:</b> La ubicación del GPS para exteriores depende de los modelos, no es una característica obligatoria para todos los modelos, por favor verifique con su centro de ventas o servicio al cliente.	<b>Operación manual</b> <b>10. Ubicación</b> 1) Encienda el reloj y asegúrese de que haya recibido señal. 2)abra el mapa en la aplicación, haga clic en la ubicación y luego mostrará la posición de su hijo en tiempo real.	<b>Operación manual</b> <b>11. Juego</b> Ocho juegos están instalados en el reloj. <b>◆ Ninja corriendo</b> Cómo jugar: Deben recoger tantas monedas como sea posible y saltar sobre las plataformas. INO te caigas ni golpees los columpios, o se acabó el juego! Presiona una vez para saltar, presiona dos veces para un gran salto.	<b>Operación manual</b> <b>12. Mono valiente</b> Cómo jugar: haz clic en el lado izquierdo o derecho del mono de modo que el mono salte hacia la izquierda o la derecha para saltar las ramas del árbol, el mono no puede tocar las ramas, de lo contrario, se acabó el juego.	<b>Operación manual</b> <b>13. Bloquear</b> Cómo jugar: Destruye todos los ladrillos para pasar al siguiente nivel. Los ladrillos blancos dan una bonificación especial de 3 bloques. <b>◆ Auto</b> Cómo jugar: Mantenga presionado el automóvil para moverse y cambiar de carril. El automóvil de adelante puede dejar caer monedas de oro y plata. Para evitar un choque solo tienes una oportunidad. Puedes encender o apagar la música y ver las puntuaciones.	<b>Operación manual</b> <b>14. Juego de matemáticas</b> Cómo jugar: haga clic en Inicio y mostrará la pregunta del jueg de matemáticas, debe elegir "SI" o "NO" antes de que el tiempo se acabe. Los ladrillos azules deben golpearse de color superior, solo tiene una oportunidad. Puede configurar los modos "Fácil", "Normal" y "Difícil" para encender o apagar la música y ver las puntuaciones.	<b>Centro de preguntas frecuentes</b> <b>Es necesario confirmar algunos puntos sobre la tarjeta SIM</b> 1: Tiene red GPRS 2: Tiene transmisión de datos 4G 3: Puede mostrar el identificador de llamadas <b>PREGUNTAS MÁS FRECUENTES:</b>	<b>Centro de preguntas frecuentes</b> <b>4. La hora no puede actualizarse automáticamente.</b> Cuando logra insertar la tarjeta (debe tener datos), el reloj actualizará la hora automáticamente, lo que puede demorar unos minutos. De lo contrario, envíe pw,123456, # a través de su teléfono al reloj, envíe un mensaje y la cubierta posterior del reloj a su distribuidor local, resolverán este problema lo antes posible.	<b>Centro de preguntas frecuentes</b> <b>5. La función de posicionamiento no funciona.</b> 1) Sal y vuelve a intentarlo (Isolo para verificar la ubicación del GPS). 2) Una vez que el reloj pasa al MODO DE SUSPENSIÓN, cambiará al MODO DE AHORRO DE ENERGÍA, lo que significa que la función de carga de datos está APAGADA, en este momento, puede activar el posicionamiento y girar el reloj para despertarlo.	<b>Centro de preguntas frecuentes</b> <b>6. El reloj no puede recibir cualquier llamada.</b> Solicite a su operador local una función para mostrar el identificador de llamadas.
--	---	---	--	--	--	--	---	---	--

 <b>User Manual</b> <b>KSW 80</b> Kids Smart Watch (Waterproof)  <a href="http://www.esenses.co">www.esenses.co</a>	<b>Items of insert in package and specifications</b> <b>Items of insert in package:</b> <table border="1"> <tr><td>Watch</td><td>1</td></tr> <tr><td>USB Cable</td><td>1</td></tr> <tr><td>Instruction</td><td>1</td></tr> <tr><td>SIM Kits</td><td>1</td></tr> </table> <b>Specifications:</b> - Product: Kids Smart Watch - Charging Volt: 5V - Working Temperature: -20°C~60°C - Networks supported: 2G GSM, 3G WCDMA and 4G TDD/FDD-LTE	Watch	1	USB Cable	1	Instruction	1	SIM Kits	1	<b>Operation manual</b> <b>1. Get a Nano SIM card</b> 1) Prepare for a Nano SIM card firstly and the phone card package should include internet flux and voice call. You can buy it from local telecom operators. Please inquiry pre-sale customer service if you have any questions.	<b>Operation manual</b> <b>2. How to install SIM card?</b> 1) Draw out SIM card tray , then chipset side face up and put into the tray.	<b>Operation manual</b> <b>3. Download the APP</b> 1) Open your Wechat and scan the QR code below, download and install it.	<b>Operation manual</b> <b>4. Register</b> When the installation is completed, start to register your personal account.	<b>Operation manual</b> <b>5. Log in</b> After registration, try to log in.	<b>Operation manual</b> <b>6. Add device</b> Pls go to Me to find device list, and scan Reg code (in watch menu or stick on watch backside ) to add your watch.	<b>Operation manual</b> <b>7. Verify successful bundling with watch</b> Pls go to Find Watch to verify watch bundling well, it means watch and APP connection successfully.	<b>Operation manual</b> <b>8. Setting</b> Log in and find the setting, click the phone book or contacts and save the numbers you need. The same goes for the other functions.
Watch	1																
USB Cable	1																
Instruction	1																
SIM Kits	1																

**Operation manual**  **9. Calling**  A. Call from watch:  1) use your finger slide the screen from left or right side to find phone book and then it will show phone numbers saved by App, and then choose the number you need to call.  2) Long press button 1, it will automatically call 3 SOS numbers one by one until get answer, if not then will call second round, 3) short press button 1 to cancel the call.  B. Phone call the watch: dial your phone number to make calling, press button 2 to receive call and press button 1 to cancel.	**Operation manual**  **10. Location**  1) Turn on the watch and make sure that it got signal.  2) Open map on APP, click the location then it will show your child's real-time position.	**Operation manual**  **11. Game**  Eight games are installed in the watch.  **◆ NinjaRunning**  How to play: You need to collect as many coins as possible and jump over platforms, Don't fall or hit the columns, or game over! Press once to jump twice for a big jump.	**Operation manual**  **12. Brave Monkey**  How to play: Click the left or right side of the screen to make the monkey jump to the left or right to avoid the branches on the tree, the monkey cannot touch the branches, otherwise game over.	**Operation manual**  **13. Block**  How to play: Destroy all blocks to progress to the next level. White blocks give a special 3-ball bonus. Blue blocks need to be hit 2 times. Score as many points as you can	**FAQ Center**  Few points need to be confirmed about the SIM card  1: Has GPRS Network  2: Has 4G data streaming  3: Can show callers ID	**FAQ Center**  FAQ:  **1. Even if you inserted the SIM card, it still got no signal**  1) Check the card's type and size to see if it's right, also check if the card has network.  2) Check the card to see if it's inserted properly. First shut down the watch, second, insert the card, then reboot.	**FAQ Center**  **4. The time can not update automatically.**  When you change inserting the card or have data package, the watch will update the time automatically, which might take few minutes. If not, please send pw,123456, # to 121.43.19.219.8099 # via your phone to the watch, once your phone got answer, reboot the watch.	**FAQ Center**  **5. The positioning function is not working.**  1) Go outside

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Specific Absorption Rate (SAR) information:

This Device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.