

风琴折

135mm*65mm

正面

反面

快速使用指南 Quick Use Guide

List of items

Product introduction

Power on pairing

Open the cover of the charging compartment and take out the headset. When the LED light flashes, the headset will enter automatic pairing mode.

Bluetooth pairing

Open the charging compartment and take out the headset.

When the headset is turned on.

Mobile Bluetooth is turned on, and the device name is searched for JM11 for pairing.

Pairing succeeded.

The charging chamber automatically charges the headset, and the headset is turned off.

Search Connections

Close the lid.

Note: the first time will not automatically connect, you need to open the phone interface to manually search for the pairing name, take out the headset click JM11 for pairing connection.

Operation

Binaural mode

One touch: play/pause
Incoming call: Click Answer, then hang up

Binaural mode

Double click(L): play the previous song
Double click(R): play the next song

Binaural mode

Three clicks(R): volume increases
Three clicks(L): volume decreases

Music Mode/Game Mode

Toggle: Quick 4 Strike

Put into the charging compartment need to adjust the lig to the original angle.

Headset wearing

▲ 无线电发射设备型号核准代码印刷在产品外壳机身的铭牌上, 拆开包装在样机表面可查看。

物品清单

产品介绍

开机配对

打开充电仓的盖子, 把耳机取出, 当LED灯闪烁时, 耳机将进入自动配对模式。

蓝牙配对

打开充电仓盖子, 把耳机取出。

在耳机开机状态下。

搜索连接

配对成功。

充电仓自动为耳机充电, 耳机进入关机状态。

注: 首次不会自动连接, 需打开手机蓝牙手动搜索配对名, 取出耳机点击 JM11 进行配对连接。

使用操作

对耳模式

单触: 播放/暂停
来电: 单击接听, 再单击挂断

对耳模式

左右长按: 播放上一曲
左右双击: 播放下一曲

音乐模式/游戏模式

切换: 快速4击

对耳模式

长按来电: 长触2s
接听: 长触1.5s
手动开机: 长触4s

将耳机130°内任意调整 (1)-(4)
放入充电仓后耳机将自动充电 (5)

耳机佩戴

产品参数

产品名称	JM11	耳机充电时长	1.5H
蓝牙版本	蓝牙5.3	蓝牙连接传输距离	10M
耳机电池	40MAH	待机时间	120H
充电仓电池	300MAH	音乐时间	5H
充电接口	Type-C 接口		

保修说明

尊敬的客户, 您好!

感谢您购买本公司的产品, 为了确保您的利益, 请您在购买本产品后, 仔细阅读说明书以及以下条款。(本产品恕不提供有偿维修服务, 本公司仅提供有偿维修, 敬请谅解)

1. 未按照说明书操作、使用、保管, 导致本产品毁损和损坏。
2. 擅自拆卸、改装、修理、更换产品包装以及配件。
3. 非原厂配件或擅自改装产品。
4. 意外因素或人为导致产品损坏, 如输入不匹配的电压、高温、进水、磁坏、产品正常磨损或老化等。
5. 火灾、地震、洪水、雷电等导致的损坏和损失。

注意事项

- 长时间使用耳机可能会导致听力损害, 请勿长时间使用耳机。
- 请勿使用未经认证的充电器和高压电流充电器。
- 请勿拆卸、改装或修理本产品。
- 请勿自行拆卸、修理或改装本产品。
- 请勿使用化学溶剂擦拭本产品。
- 如故障去充电仓, 耳机没有反应, 请检查充电仓是否有电, 取出耳机放入充电仓充电。
- 耳机对不上充电仓位置, 可能是耳机人为所致, 请手动掰一下充电仓下盖, 请为电话杆扣扣好。

Product Parameters

Product name	JM11	Headphone charging time	1.5H
Bluetooth version	Bluetooth5.3	Bluetooth transmission distance	10M
Headset battery	40MAH	Standby time	120H
Charging chamber battery	300MAH	Music time	5H
Charging interface	Type-C connector		

WARRANTY

Dear customer, hello!

Thank you for patronizing our products. To ensure your interests, please read the instructions carefully after purchasing this product. And the following: (The following situations are not covered by the warranty, and our company can provide paid services, please note)

1. Failure to separate, use, and store the product in accordance with the instructions may result in failure and damage to the product.
2. Unauthorized modification, tearing up product packaging and barcodes.
3. Unauthorized modification of factory settings and disassembly for repair.
4. Accidental factors or man-made damage to the product, such as input of unqualified voltage, high temperature, water impact, damage to the product's casing or internal parts.
5. Failures and damages caused by force majeure, such as earthquakes, fires, floods, lightning strikes, etc.

Matters Needing Attention

- Long time use of earphones may cause hearing damage, please arrange your time reasonably.
- Do not use unqualified chargers and high voltage current charging.
- Do not throw to avoid product damage due to falling.
- Do not disassemble, repair or modify this product by yourself.
- Do not use chemical solvents to wipe this product.
- If you put in the charging compartment, the headset does not respond.
- Check whether the charging compartment has electricity.
- If there is no electricity, you need to charge the charging compartment.
- If the headset is not in the charging position, the headset is artificially bent.
- If the headset is not in the charging position, the headset is artificially bent, so you need to break it manually to restore the original position and fit it with the charging pinhole.



FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.