

快速安装指南
(中继模式)

型号: XL-Z05/07

扩展器插上通电，在手机打开设置页面，WiFi或者（WLAN）选项。
选择Repeater-XXX并点击名称，跳转至连接界面。
步骤1：先切换中文

步骤2：选择中继模式

步骤3：找到自家WiFi名称

步骤4：输入自家WiFi密码后点击下一步

步骤5：点击完成配置即可。

2.4G

5.8G 2.4G

电源指示灯

信号指示灯

扩展指示灯

接口指示灯

WPS指示灯

重置/WPS按钮

连接电源指示灯亮

通电10秒左右，信号指示灯亮，可以开始设置配置

扩展成功，指示灯亮，网络连接正常

接入网络，连接上电源后，指示灯亮

WPS连接指示灯

长按复位按钮7秒，指示灯全灭
和蜂鸣器发出“哔”声
短按复位按钮，WPS指示灯将向上箭头由熄灭状态成功指示灯亮

快速安装指南
(AP模式)

扩展器插上通电，在手机打开设置页面，WiFi或者（WLAN）选项。
选择Repeater-XXX并点击名称，跳转至连接界面。
步骤1：先切换中文

步骤2：选择AP模式

步骤3：创建WiFi名称和密码，点击下一步

步骤4：点击完成配置即可。

2.4G

5.8G 2.4G

电源指示灯

信号指示灯

扩展指示灯

接口指示灯

WPS指示灯

重置/WPS按钮

连接电源指示灯亮

通电10秒左右，信号指示灯亮，可以进行连接设置

扩展成功，指示灯亮，网络连接正常

接入网络，连接上电源后，指示灯亮

WPS连接指示灯

长按复位按钮7秒，指示灯全灭
和蜂鸣器发出“哔”声
短按复位按钮，WPS指示灯将向上箭头由熄灭状态成功指示灯亮

Quick Installation Guide
(Relay Mode)

Model: XL-Z05/07

Plug in the extender to power up.Open the settings page on the phone, select WiFi or(WLAN) option.Select the WiFi name of Repeater-XXXX to jump to the connection interface
Step1: Switch to English first

Step2:Select relay mode

Step3:Find your own WiFi name

Step4:Enter your own WiFi password and click Next

Step5:Click to complete the configuration

2.4G

Single frequency 2.4G

Power LED

Signal LED

Repeater LED

LAN LED

WPS LED

Reset/WPS Button

The power on indicator is on

After power on for about 10 seconds,the signal indicator is on. Connection settings can be made

The expansion is successful,the indicator route,and the indicator light is on

The network port indicator connects to the network cable, connects to the superior route, and the indicator lights up

WPS connection indicator

Press and hold for 7 seconds,if all the indicator lights are off,the machine returns to the factory status. Short press for 1 second,WPS indicator Button after the connection with the superior router is successful, the indicator is on

Quick Installation Guide
(AP MODL)

Plug in the extender to power up.Open the settings page on the phone, select WiFi or(WLAN) option.Select the WiFi name of Repeater-XXXX to jump to the connection interface
Step1: Switch to English first

Step2:Select AP mode

Step3 :After creating a WiFi name and password,click Next

Step4 :Click to complete the configuration

2.4G

Single frequency 2.4G

Power LED

Signal LED

Repeater LED

LAN LED

WPS LED

Reset/WPS Button

The power on indicator is on

After power on for about 10 seconds,the signal indicator is on. Connection settings can be made

The expansion is successful,the indicator route,and the indicator light is on

The network port indicator connects to the network cable, connects to the superior route, and the indicator lights up

WPS connection indicator

Press and hold for 7 seconds,if all the indicator lights are off,the machine returns to the factory status. Short press for 1 second,WPS indicator Button after the connection with the superior router is successful, the indicator is on

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.