


Size: 105.3 x 140.3mm, Insturciton manual will be 80g glossy coated art paper , with CMYK printing

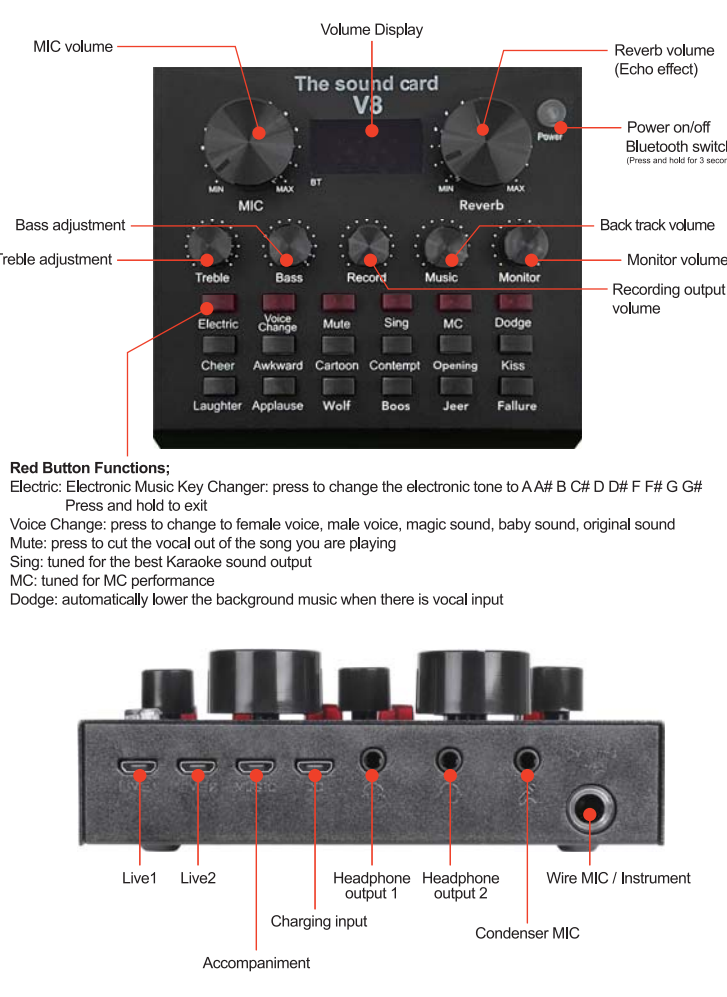

Quick Start Reference/Troubleshooting:

1. Press the power button for 3sec to turn the recording mixer on or off. The button will glow green when power is on and turn red when charging.
2. If red buttons are flashing or you hear a sound, the recording mixer needs to be charged. If not charged immediately, sound quality may suffer. Please note that the recording mixer can be charged while in use however, it may pop up noise from the charging current.
3. Be sure all cables plugged into the recording mixer are properly inserted all the way. Otherwise, your mixer may not output correctly. If you're connecting to a phone, please be sure to remove your phone case first as this may disrupt the cable.
4. Recording volume adjusts the output volume your listeners will hear. Be sure to test the output volume levels using the "Record" knob to the desired output volume.
5. When using a single mobile phone to broadcast, music volume and external backbox volume is adjusted using the phone volume. The recording mixer volume controls the microphone. When listening to the live broadcast, we recommend testing on a separate mobile phone/computer away from the microphone. A feedback loop may occur if the output and input are in the same area.
6. When using a computer to record, test your microphone and sound mixer output before beginning to record. When connecting your sound mixer for the first time, your computer will download the correct device drivers automatically. Your computer may need a restart to complete the installation. If you hear small sounds from your microphone, increase the microphone output on your computer's volume control panel. We do not recommend using speakers while recording, as your microphone may pick up the sound. We recommend headphones or earphones for the best results.
7. Before each broadcast, we recommend you test all the mixer features to ensure they are working. This way your recording can go on without issues.
8. Connect the Bluetooth accompaniment, turn on the Bluetooth of the mobile phone, search the device to find "PY-PODC", and click the connection. After the connection is successful, the power button indicator light of the sound card will be blue, indicating that the Bluetooth is connected.
9. The included LCD display shows your volume and echo effect on a scale of 1-15. When you turn the MC, Microphone volumes will scale. When turn the Reverb, the echo effect scale.



Specifications
 Mixer upper shell material: Metal knob, metal frosted body
 Mixer card lower shell material: ABS plastic
 Mixer card chip: DSP noise reduction chip
 Mixer card dimensions: 4.9 in x 4.1 in x 1.06 in (125x106x27mm)
 Supply voltage: DC 5V
 Power supply mode: built-in 18650/3.7V/1200MAH lithium battery
 Use time: 8 hours with full power
 Bluetooth version: 5.3
 Frequency: 2.412-2.483GHz
 Model #: PY-PODC-BLK
 FCC ID: 2B8PLPHYPODC
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

