



Outdoor Dual-Lens WIFI Camera

Camera introduction



2. Please insert the camera adapter, press and hold the reset button for 5 seconds to reset the camera until you hear "Di-

Power on reset.



continue to wait for "Di-" 2 times, the camera will complete the self-test.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

FCC Statement

1.This device may not cause harmful interference. 2.This device must accept any interference received,including

interference that may cause undesired operation.

Information to User

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installa ion. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio However, there is no guarantee that interference will not occur

in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Consult the dealer or an experienced radio/TV technician for

—Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Download CAM720 APP from APP store or Google play, or by Scanning the QR code above.

Sign up & Login

Register an account: Click "Register" > enter your email address, set your APP passcode, check the verification code, and wait for the verification to be completed and then jump directly to the

Note: if you don't want register an account, it can't remote, but you canuse stand alone mode to view the camera. This mode only support Local view.

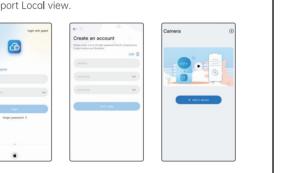


WiFi connection

Please insert the camera adapter, press and hold the reset button for 5 seconds to reset the camera until you hear "Di-" continue to wait for "Di-" 2 times, the camera will complete the




1. In the APP: click "+" > select "WiFi connection". 2. Check "Hear the device announce didi"; Click "Next".

3. Follow the prompts shown in the app (please connect WiFi to JAA-*** and go back to the Cam720 APP).

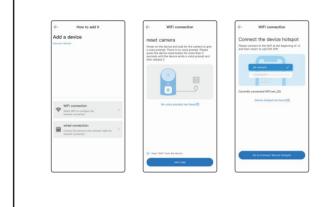

4. Enter the correct password for the WiFi connection of your phone and click "Next".

5. When the device is connected, pls wait patiently until camerais online",then click the video to view.

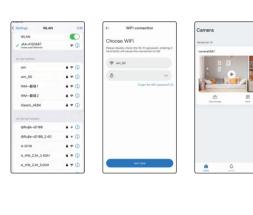

Wired Connection

Plug the power supply and Ethernet cable to the router: Pls plug the adapter for the camera, and connect the camera with the Ethenet cable to the router. Reset the camera: Long-press the reset button about 5-8s until you hearing Prompted, select wired connection to connect it.

NOTE: Pls confirm the cellphone connected the same wifi of the



Quick Start Guide

Return to the device list 2 Share the device 3 More function settings

 Switch image effects Swich into Full-screen image Turn on screen record function

 
Screenshot to save the image Turn on voice intercom Turn on the microphone 10 More functions

10 More functions
11 PTZ rotation control 12 Message List (13) SD card Playback 14 Turn on cloud play

1) Add more cameras 2 Modify the device name 3 Start Live video 4 Subscribe Cloud storage 5 More functions setup

6 Message List 7 User information

5 6 **9** 5 5



5 Detection alarm settings 6 Buy cloud storage

🗇 lmage Flip: upside down ® Choose a call mode

 Enable/Disable Auto tracking 10 Choose night vision mode

11) Set the time zone Switch WFInetwork


Switch WFInetwoi.

3 Camera information

4 Camera

4 Camera (15 Delete the camera

(6) Transfer the camera to another account

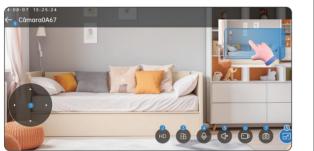

1 PTZ rotation control ② Switch image effects 3 Four screens can be viewed at once 4 Turn on voice interco 5 Turn on the microphone 6 Screen recording feature

TScreenshot to save the image 8 Close the video window 9 Turn off full-screen images

Note: Tap the small screen 3 times in a row to switch the lens screen to each other.

 
Playback

Turn on the playback function and two Record method available: SDcard record(8-256G) and Cloud Record. SD card record supports 3 record modes: 24/7 continuous,motion-triggered, scheduled record.



Bracket mounting

Installation procedure: 1. Keep bracket A in the same direction as the fixed lens, then bring the camera and bracket A together, and then turn



Stuff the rubber stopper into the hole. 4. Select a suitable location and install expansion screws on the wall, for example, if it's a wooden wall, expansion screws are

5. Align the bracket with the hole position and tighten the

Share

Share your camera with your friends and families

1.Your friend should have an account of cam720 APP. 2.in main account, enter the Email of the friend APP account or scanthe QR code of the account to share it.





Detection alarm settings

. Zoned area vigilance detection, the red part represents the planned warning area.

2. Warning information push, alarm information is pushed to the mobile phone in time through the APP background. 3. Sound alarm warns suspicious characters to leave as soon as



3. The camera and the router should be controlled within 10 meters of the partition wall, and the open environment should be kept within 20 meters. 4. When using at night, do not place items in front of the camera lens and do not face the wall, glass window, mirror, etc., so as not to block the reflection of infrared rays and affect the image

How to use it correctly

I. This product is suitable for indoor scenes, "not waterproof"

2. It should be installed in a ventilated environment as much as

possible to avoid unstable factors caused by long-term closed

please avoid outdoor installation.

high temperature replacement.

5. The installation area should be away from high-power equipment to avoid signal interference and affect the use

Q1: What should I do if WiFi configuration failed?

A1: Make sure GPS Location service is on and "Allow" is selected for all app permissions: Check the WiFi password is entered correctly, no more than

31 digits, and letter case; After all steps above completed, check router settings, such as: "blacklist", "firewall", "Device Internet restrictions", etc.

Q2: How to do if the camera is offline always?

A2: Please check conneciton of the camera adapter and socket, or replace the power supply. Check the wifi signal strength, make camera closer to router.

Q3: How could multiple users view at the same time? A3: Please use share funtion to other users.

After-sale Service & Tech Support



Need some help?

E-mail: technicalreply@qacctv.com market@qacctv.com for user guides, FAQs, warranty & more

By scanning the QR code below to access Youtube, Selectthe right operation video for your camera according to APPand Model of the camera Or message seller to get the operation video directly.



FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.