


USER GUIDE

Portable Speaker

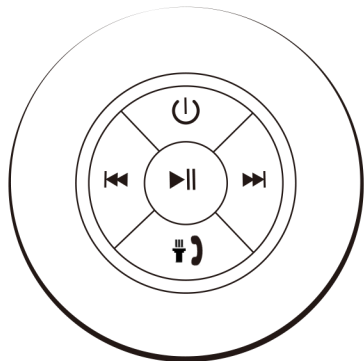

What's Included

- Grip Speaker
- USB Charging Cable
- User Manual

Charging

- Before using your SoundBound Splash Grip Speaker, please charge using the included micro USB cable. Please note: Most USB chargers are compatible with SoundBound Splash Grip Speaker. For optimal AC charging, please use a 1.0A USB Charger.

On/Off

- Splash Grip Speaker can be powered On or Off by a long press on the "Power On/Off" multifunction button of the Splash Grip Speaker.

Please note: (In case the battery voltage is too low, the red light will flicker & the speaker will automatically shut down. If insufficient power is available, the speaker will need to be re-charged prior to powering back on)

Pairing

- After switching the "Power On/Off/M" button, the Splash Grip Speaker will Power On & automatically enter "Bluetooth® Mode" for pairing. A blue light will rapidly blink on the Splash Grip Speaker.
- On your Mobile Device, search for the "Bluetooth® Menu." A list of available devices will show available for pairing. Select " BTS Speaker" & the speaker will automatically pair with your device for use.
- Once paired to your mobile device the Splash Grip Speaker will automatically re-pair if shut down or powered off and back on.

Please note: If the Excursion Rugged Explorer Speaker does not show up in your Bluetooth® menu please turn off Bluetooth® on your mobile device & turn back on. Sometimes, Bluetooth® needs to refresh/reset to recognize available devices for pairing.

Volume/ Audio Track Functions

- Raise Volume by long press multifunction button "Raise Volume/ Switch Tracks" or by pressing volume button on your mobile device
- Lower Volume by long press multifunction button "Lower Volume/ Switch Tracks" or by pressing volume button on your mobile device
- To switch to the next audio track, short press "Raise Volume/ Switch Tracks" multifunction button.

BT Pairing


- After Pairing mobile device, begin playing audio from mobile device to stream audio. Short single press "Play/Pause" function button to play or pause streaming audio.
- To switch to the next audio track, short press "Raise Volume/ Switch Tracks" multifunction button.

Answering/ Ending Calls

- For Incoming Calls short press the "Play/Pause" multifunction button to pick up or hang up the call
- Double tap the "Play/ Pause" multifunction button to redial the last dialed number

BT Version: 5.0
BT Range: 10M
Battery Capacity: 400 mAh
Power input: DC5V Micro USB Cable

Output Power 3 W
Playing Time Up to 2 Hours
Charging Time 1 Hours
Input Power Supply DC5V
*Playback Time mentioned may vary by user's operation mode & device settings

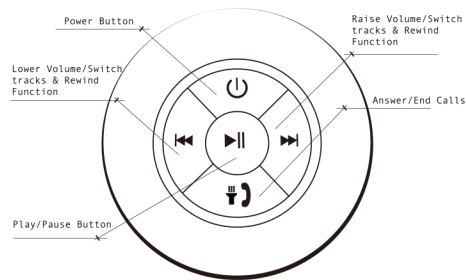

Made in China

FCC warning:

1. This device should be installed and operated with minimum distance 0mm between the radiator&your body.
2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
4. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.