


# **WIRELESS SPEAKER**



INSP1448GR

**USER GUIDE** 

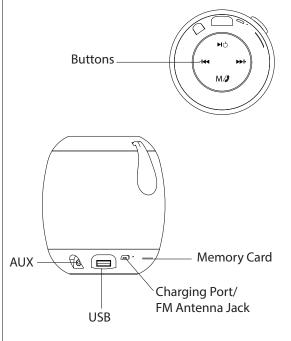

Overview

### Power/Pause & Play Button Press and hold to turn the speaker on/off. Press to pause/play current song.

 


Buttons

 
### Volume Down/Previous Button Press and hold to turn down the volume.

Press to go to previous song.

Volume Up/Next Button Press and hold to turn up the volume.

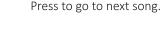




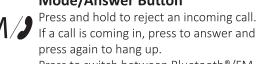

Press to switch between Bluetooth®/FM Radio/AUX/Memory Card modes.

Bluetooth® Setup

 connection is successful.

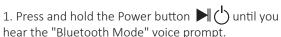





Pair Two Packed Party Speakers

Packed Party Wireless Speakers feature TWS (True

play music on two Packed Party Wireless Speakers

Wireless Stereo) technology, which allows you to





- 2. Press the Power button ►(') on both speakers to enter "Bluetooth Mode".
- 3. Connect your Bluetooth®device to one of the Packed
- Party Wireless Speakers.
- 4. Press and hold the Mode button M/2 on the connected
- 2. Enter the Bluetooth® settings on your Bluetooth device, and look for "INSP1448GR". Tap to connect.

3. A "Bluetooth® connected" prompt will play once

Wireless Speaker. You will hear a sound prompt while the

speakers are pairing. 5. The status light will illuminate on both Wireless Speakers, indicating that the two speakers are connected. Switch to FM radio by pressing the Mode button M/2

Press the Pause/Play button

If you want to search radio stations manually, press the Prev/Next buttons - I✓ ► ► I

when in FM mode to improve radio reception.

FM Radio Mode

stations automatically.

Hands Free Calling

Previous/Volum-

Press once to decrease volume.

Mode/Answer Button

Press once to answer a call. M/J

NOTE: You may insert the included micro USB cable

Press again to hang up.

Press and hold to reject a call.

ress once to increase volume.

Next/Volume+

into the charging port, and plug the other end of the cable into a wall charger (not included).

1. Plug the included micro USB end of the USB cable

2. Allow approximately four hours to fully charge the

battery. A full charge powers the speaker for over 10

Charging Port/

FM Antenna Jack

hours of play time based on a 70% volume level. Note: We recommend using a USB wall adapter with

a 5V output.

off, and then power it on again as usual.

## **Resetting the Speaker**

**Charging the Speaker** 

If your speaker is not operating properly, you may reset it. To do so, press and hold the Power button (1) for approximately 8 seconds until the speaker powers

## 90-day Limited Warranty

Territory: United States/Canada LIMITED WARRANTY TO ORIGINAL CONSUMER

Warranty service not provided

must be suitably packaged.

Warranty Information

#### This product (including any accessories included in the original packaging) as supplied and distributed new by an

authorized retailer is warranted by MCG Innovations Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service: Visit our website at WWW.MCGINNOVATIONS.COM • Click on **Product Support** 

• Select the **Brand** of your device • Select **Service Request** and fill out the form to begin

your inquiry Your product will be repaired or replaced, at our option, for the same

This warranty does not cover damage resulting from accident.

misuse, abuse, improper installation or operation, lack of reasonable

care, unauthorized modification including software modifications such

as the installation of custom firmware. This warranty is voided in the

even any unauthorized person opens, alters or repairs this product.

All products being returned to the authorized service center for repair

- Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that or similar model of equa value if examination by the service center to which the receiver is connected. determines this product is defective. Products received damaged as - Consult the dealer or an experienced radio/TV technician for help. a result of shipping will require you to file a claim with the carrier. This device complies with Part 15 of the FCC Rules. Operation is subject

interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation.

the user is encouraged to try to correct the

- Reorient or relocate the receiving antenna.

**FCC Information** 

Radiation Exposure Information This device has been evaluated to meet general RF exposure requirements.

This device complies with Part 15 of the FCC Rules.

could void the user's authority to operate the equipment.

**Caution:** Any changes or modifications not expressly approved

Note: This equipment has been tested and found to comply with

Rules. These limits are designed to provide reasonable protection

generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation.

interference by one or more of the following measures:

the limits for a Class B digital device pursuant to part 15 of the FCC

against harmful interference in a residential installation. This equipment

If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on,

to the following two conditions: (1) This device may not cause harmful

The device can be used in portable exposure conditions without restriction.

©2023 ALL RIGHTS RESERVED. WWW.MCGINNOVATIONS.COM MADE IN CHINA

**MARNING: CANCER AND REPRODUCTIVE HARM –** 

BRILLIANT INNOVATIONS® NAME AND LOGO ARE

REGISTERED TRADEMARKS OF MCG INNOVATIONS INC.

MANUFACTURED AND MARKETED UNDER LICENSE

WWW.P65WARNINGS.CA.GOV

FCC ID: 2BBQT-INSP1448