PHILIPS

Home Access

Wireless keypad

DDI 200

User

Manual

Sign your product up and

get support at www.philips.com/support

2 3 4 5 6 8 7 9 0 × ✓

PHILIPS

1 Warnings & Safety Information

Safety

- Before using this product, please read and understand all instructions. Damage caused by failure to follow instructions is not covered by the warranty
- Only use components provided by the manufacturer and suggested accessories.
- Only use new, non-rechargeable AAA Alkaline batteries. • Do not forcibly disassemble the product to trigger an alarm
- or damage the product.
- Do not remove the batteries during lock setup and operation.

Caution


- Do not place the batteries near fire sources.
- Do not connect the 2 poles of the batteries to metals in order to avoid a short circuit and potential explosion.
- Any replacement component should be performed by Philips, a Philips authorized service center or professional technician
- Do not use parts or accessories manufactured by others. except batteries

Returns & Disposal

- Product can be returned at authorized Philips service centers. Appropriate compensation will be provided if the returned product meets Philips conditions
- Please follow local regulations and do not throw used product or batteries into normal household waste

2 Product Introduction

DDL200 is a Bluetooth device as an accessory of the retrofit lock DDL230X to verify PIN codes and fingerprints, the device is powered by 2 AAA batteries (included).

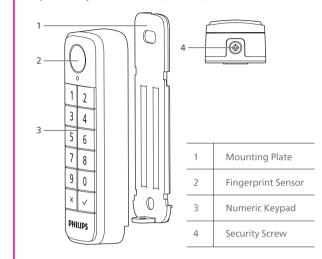

Definition

- Pairing Mode: Press and hold the "×" button for 5 seconds, until the green light blinks slowly, and the buzzer beeps shortly one time.
- One-Touch Locking: Press and hold any key on keypad for 2 seconds to lock the door.

 
Wrong Entry Limit: After 10 unsuccessful attempts to enter a PIN code or 5 unsuccessful attempts to enter a fingerprint, the keypad will shut down and be unusable for 3 minutes

3 Installation

Packing List

- (1) Keypad
- (2) 2 AAA Batteries
- (3) 2 Mounting Screws (optional)
- (4) 2 Wall Anchors
- (5) Adhesive Mounting Strip
- (6) User Manual
- (7) Security Screw

(3) Remove the battery tab While holding the batteries in place. remove the plastic battery isolation tab.



keypad with the hooks of the mounting plate and slide the keypad down.

Alian the slots of the

 
4

1 2 3 4 5 6 7 8 9 0 × ✓

ප

(5) Fix the keypad with security screw.





U.S.A. & Canada:

+1(833)599-9111

4 Pair the Keypad

- 1 Download the Philips Home Access App from Google Play or App Store.
 - 10 App Store Scan OR code to download Google Play Philips Home Access App
- (2) Add the DDL230X retrofit smart lock in the Philips Home Access App.

Attention


Make sure the Philips Home Access App has been downloaded and installed. Pair the DDL230X retrofit lock with your phone prior to keypad pairing.

pairing mode. Pairing mode expires in 300 seconds.

(3) Press and hold "x" button on the keypad for 5s to enable



(4) Select the lock you want to pair with, then go to "Device settings" \rightarrow Accessory \rightarrow Add accessories.

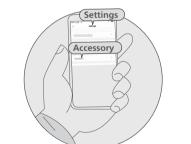

(5) Follow instructions on the App to complete the pairing process.

折叠线

6 FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must



Installation Steps

 
Attention

The keypad should be installed within 118" (3 meters) far from the door.

1) Take off the release paper of the adhesive mounting strip.



2 Stick or screw it on a clean surface, such as door frame and so on



ention

You have the option to omit drilling the back panel into the wall, and only use the adhesive to install your keypad on the door frame.

If you are drilling into the wall, please follow next steps.


${\sf A}.$ According to the wall surface, select installation type (optional).	
Installation type	
Mounting Screws + Wall Anchors	
Mounting Screws + Wall Anchors	
Mounting Screws Only	

B. Drill the holes (optional).

Take one of the included mounting screws and poke it through the center of each of the two hole on the mounting plate Mark the holes with a pen, and drill holes in the two spots you marked




 C. Screw mounting plate into the wall.



*Insert anchors into wall. (optional)

 If required for your surface, take two of the anchors included with your wireless keypad and gently ap them into the drilled holes using a hammer.



正面

accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

7 ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B)

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes :

(1) Cet appareil ne doit pas provoquer d'interférences.

(2) Cet appareil doit accepter toute interférence, y compris les

interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

l'appareil numérique du ciem conforme canadien peut-3 (b) / nmb-3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

The device has been evaluated to meet general RF

exposure requirement. The device can be used in portable

exposure condition without restriction.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé sans restriction dans des conditions d'exposition portables.



双面单黑印刷 128g铜版纸 展开尺寸: 510 x 120 mm 折叠后尺寸: 85 x 120 mm