POCKET MASSAGER



User Manual

Safety precautions

The following people are not suitable for using this product: 1. The people whoe implant medical electronic devices into the body(such as pacemakers.artificial organs.).


- 2. The People who use medical devices (such as electrocardiographs), it may interfere with the normal use of medical devices and endanger life safety.
- 3. This product is not suitable for patients with malignant tumor, heart disease, brain nerve abnormality, infectious diseases, spinal contusion, muscle strain and other
- 4. Do not use this product within one meter of short wave or microwave instrument equipment. 5. Patients with skin infections, osteoporosis, and pregnant and menstrual women
- are not allowed to use this product.
- 6. Do not use this product when the body is damp.

 
- 1. Please use an FCC or UL certified 5V-1A or higher adapter to charge this device.
- 2. Before charging, it is necessary to confirm whether there are any debris, water droplets or other foreign objects near the socket and charging port. Clean the foreign objects before inserting them, otherwise it may cause fire, electric shock. short circuit, and other phenomena.
- 3. Do not place the machine in a high temperature or direct sunlight area during charging. After charging, please remove the charger in time to avoid accidents caused by overcharging.
- 4. Do not use wet hands to plug or unplug the USB charging cable, as this may cause electric shock accidents.
- 5. Do not use in areas with high humidity such as bathrooms, as it may cause discomfort caused by strong clicks.
- $6 \cdot\,$ Do not use it while sleeping, as unconscious movements during sleep may cause product malfunction and discomfor
- 7. Do not use it while driving, as it may cause discomfort and accidents due to

 
- 8. Do not use this product after drinking alcohol.
 - 9. Do not use this product during intense exercise.
 - 10. Do not place this product in an environment with high temperature, humidity.
 - 11. Do not put the product in your mouth.
 - 12. When using, please keep the skin dry and ensure that the fitting area is not injured.
 - 13. The first use may result in a faster heartbeat. Once this occurs, please remove the massage pad and wait for the heart rate to return to normal before using it again. If this phenomenon persists, please stop using it.
 - 14. It is recommended to use it in the same area for no more than 30 minutes. Do not stick the patch for a long time without removing it.
 - 15. This product is not a medical device and cannot replace the therapeutic efficacy achieved by medical devices.
 - 16. Prevent water or other corrosive liquids from entering the machine and causing malfunctions, leading to damage to the machine.
 - 17. If you feel any physical abnormalities during the use of this product, please stop using it immediately and consult a healthcare doctor.
 - 18. This device is not suitable for people who are weak, slow or suffer from mental disorders. If this equipment is needed, it must be used under the supervision and direction of a supervisor
 - 19. Appliances are not toys, children are prohibited from using this appliance as a toy to play.
 - 20. The appliance has a heating surface, and people who are sensitive to heat must pay attention to its use.
 - 21. Please keep the appliance in a dry place and away from dampness.

Package List				
Massager	User manual	Type-C charging cable		
1 PC	1 сору	1 root		

Product Structure Diagram

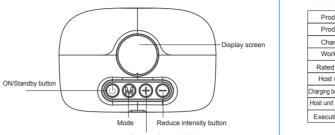





The pictures are for reference only, please refer to the actual product.

Product parameters

Product name	Pocket massager		
Product model	Q1		
Charging input	5V1A		
Working voltage	3.7V 		
Rated input power	2W		
Host unit power	0.3W		
Charging box battery capacity	500mAh		
Host unit battery capacity	90mAh		
Executive standards	GB 4706.1-2005 GB 4706.10-2008		

Use Instruction

- 1. ON/Standby key: Press this button to turn on the machine, which defaults to beating mode (first gear). Press this button again to turn off the machine and enter
- 2. Mode button: Press this button can switch between 6 different massage modes.
- 3、"+" button:Press this button can enhance the gears, with a total of 16 gears, increasing one gear with each press. 4、 "-" button: Press this button can reduce the gears, with a total of 16 gears, reduce
- 5. The machine will automatically shut down after 15 minutes of operation

Warranty Card

Ω	Name:			Warranty
JSt	Address:			period
Customer	Phone:			One year
ਕੁ	Purchase date:			,
in detail otherwis 1. This normal 2. If pa warrant charged 3. Duri of the fo	fill out each item of it and stamp it with the se it will be invalid. s product is service f use from the date of rts need to be replad y period, maintenand it as appropriate. ing the warranty peri illowing situations, the be enjoyed.	e dealer's seal, or free under purchase. ced beyond the ce fees will be	D	
voucher	not present warranty (invoice or receipt). eeding the warranty		Dealer signature and	
	age caused by disa	ign		
d. Dam	amage caused by incorrect/negligent use proper human use.			
	e Damage caused by use in abnormal environments.		and sea	
f. Due	ue to prolonged use, the appearance			

Operation instruction

1. Installation: take two massage patches from the battery box and align them with the magnetic buckles of both hosts to make them fit (as shown in Figure 1).



2. Apply: Remove the protective film from the massage patch (put it back into the charging box to prevent loss), and apply the massage patch to the area that needs to be massaged (as shown in Figure 2 below).



 


Figure 2

 3. Turn on: Press the on/standby button to turn on the product and it will start working (as shown in Figure 3).



 
4. Intensity adjustment: Press the "+" or "-" keys to increase or decrease the massage intensity, with a total of 16 gears. Each time you click the button the indicator light will flashes, you can choose the appropriate massage intensity (as



5. Mode adjustment: Press "M" to switch modes, totaling 6 modes. Each time you press, switch to one mode, and the indicator light flashes once. Cycle between beating, kneading, intelligent, soothing, scraping, and pressing (as shown in Figure 5)



 6. Remote control: When the main unit is working, the panel on the battery box can be operated to control the gear force and mode of the main unit (as shown in Figure 6)



7. Host separation patch: During the operation of the host, remove the host, and the host indicator light will flash for 15 seconds before automatically shutting down. To remove the host and assemble it onto the patch for use, press the host switch key and perform the operation again. (As shown in Figure 7)



8. Massage End: After 15 minutes of massage, the machine will automatically shut down, or simply press the on/standby button to shut down, and then put the protective film back on the massage patch and the host back into the charging box (as shown in



Warm Notice

Best massage position:















Common faults and analysis

Fault symptom	cause analysis	Solution	
	The battery is dead	use after fully charged	
Fault symptom	have not press the on/ standby button	Press the on/standby button again to turn on the device	
	The product is faulty	Contact the after-sales service department	
Machine stopped working	The battery has run out of		
	The timed massage program has been completed	Reboot and use	
Needling sensation during use Insufficient stickiness of the patch		Clean and dry the patch before use	

Cleaning and maintenance

- 1. Please shut down and unplug the charging plug before cleaning
- 2. To extend the service life of the built-in battery, if it is not suitable for a long time, please fully charge the host before saving it, and charge it every 2-3 months.
- 3. Do not rinse or soak this product directly under the faucet. Simply wipe it lightly with a damp towel (no water should flow out of the towel). Do not use corrosive liquids (such as alcohol, gasoline, wiping water, etc.) to wipe the surface of the machine to prevent corrosion and aging and discoloration of the surface.
- 4. If the stickiness of the patch decreases, a small amount of water can be used for cleaning. After drying, it will restore stickiness.
- 5. Under normal circumstances, the patch can be reused for about 30 times. If the stickiness of the patch is not enough, firstly it cannot achieve the massage effect, and secondly it is prone to tingling. When the stickiness of the patch cannot be restored, a new patch needs to be replaced.
- Please store in a dry and ventilated area that children cannot reach.

Battery disposal ways

- —Before abandoning the appliance, the battery must be removed from the appliance. -----When removing the battery, the appliance must be powered off.
- 1. Use auxiliary tools to pry open the battery box and host body, and then remove the internal battery completely.
- 2. Do not dispose of the battery when removing it. Please place the battery in a dedicated recycling bin and do not mix it with other household waste to avoid polluting the environment

Federal Communications Commission Notice

naturally fades or becomes dirty

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

te: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. provide reasonable protection against nammul interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:
-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restrict