

User Manual

BATTLE ARMOUR 10W CANNON WIRELESS SPEAKER

Product list:
Battle Armour 10W Cannon Wireless Speaker x 1
USB charging cable x 1
User Manual x 1

 
Thank you for purchasing our company's wireless speaker, Please read this guide carefully to ensure safety and if you are satisfied with the operation, Please keep this guide in a safe place for future reference.

Technical specifications


BATTLE ARMOUR WIRELESS SPEAKER	
Product name	Karaoke Equipment
Input	Type-c 5V
Speaker	10W (max)
Wireless version	5.3
Product dimensions	182*50*66mm
Effective distance	≥10m
Battery capacity	1200mAh
Charging time	2-3h
Standby time	About 120 Day
Usage time	About 3h

1

Sketch map of product

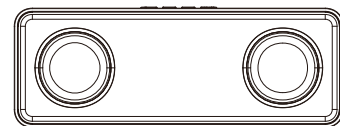

Front

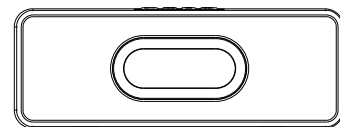 

Back

 
Operation manual

1. Power on/off: long press the on/off button for 2 seconds (power on/off beep);
2. Music play/pause: short press the on/off button once (under the music playing status); and
3. Music volume: long press the next key to increase the volume, long press the previous key to decrease the volume (under the music playing state);
4. Music switching: short press the next key to switch to the next song, short press the previous key to switch to the previous song (under the music playing state);

2


5. Coupling: double-click the next song key to automatically couple (under the wireless mode not connected state);
6. Lighting: short press M key to switch lighting;
7. Mode switching: long press M key to switch mode.

Pairing with devices

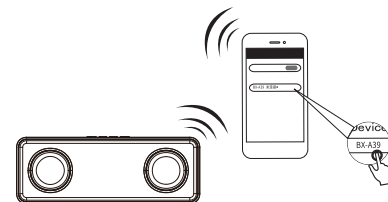


USB interface:

Schematic diagram of the power adapter/power bank charging the speaker

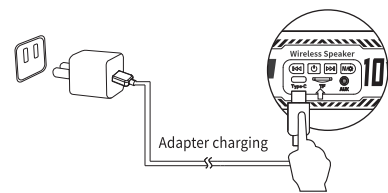 

3

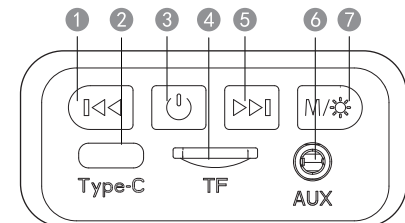 

- ① Previous song key: can switch to the previous song, volume down
- ② DC: insert the charging cable to the speaker charging port
- ③ Switch: turn on and off the speaker, music play/pause
- ④ TF: insert TF card to recognize and play music
- ⑤ Next key: you can switch the next song, volume up, double-click couplet mode
- ⑥ AUX: insert AUX cable to enter AUX mode
- ⑦ Mode: mode conversion, switch the lighting mode

4

Standard accessories list

Battle Armour Wireless Speaker	x1
USB charging cable	x1
User Manual	x1

Remarks:

The default Wireless mode when power on.

Troubleshooting

If the following "actions" do not solve your problem, please stop using this product and contact the dealer who purchased the product.

1. What should I do if the speaker cannot be connected?
Please check if your speaker audio source (mobile phone or computer etc.) has a built-in blue Wireless functionality, if so, please turn the wireless mode on and search for a wireless speaker connection or restart the wireless speaker.
2. What should I do if the machine operation does not respond?
Please make sure that the wireless speaker is charged, if not please charge it in time.

5

Precautions

- Do not drop, crush, disassemble or pierce this product.
- Do not expose the battery to excessive heat such as sunlight, fire or similar elements.
- Do not put this product into water or corrosive liquids.
- Do not charge the battery higher than the rating.
- The maximum temperature during charging cannot exceed 45°C.
- Danger of explosion if battery is incorrectly replaced, replace only with the same or equivalent type.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The pictures in the manual are for reference only, the actual product (including color, size, etc.) is subject to the actual product

