

138cm*95cm

E-SPORTS GAME MOUSE



FCC WARNING
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance, such modifications could void the user's authority to operate the equipment.
The device has been evaluated to meet general RF exposure requirement.
This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

E-SPORTS GAME MOUSE



A5

酷炫发光无线电竞鼠标
Professional optical wireless gaming mouse

使用说明书/质保书
Instructions/Warranty

执行标准:GBT 26245-2010
Executive standard: GBT 26245-2010

Product warranty certificate
PRODUCT WARRANTY

Warranty clauses

Mouse can enjoy 12 months of free warranty service if hardware failure occurs under normal use conditions from the date of sale. If the failure belongs to the following factors, the product will not be guaranteed. The company will have the right to charge maintenance costs if you need the service.

- 1.The damage caused by accidents, earthquake, fire, flood or other natural disasters, and unauthorized product modification
- 2.The damage caused by unauthorized personnel repair or any attempted to repair
- 3.The damage caused by transportation after sale
- 4.Physical damage, including the damage caused by the users when moving or installing the product
- 5.The damage caused by the use of substitutes or components that not meet the company's technical specifications
- 6.Normal utility consumption
- 7.The damage caused by other reasons that are not related to the product's quality

The company reserves the final explanation right to the above terms.

The right way to use the wireless mouse

Step1:Insert the receiver into the computer USB interface

Step2:Turn on the power switch at the bottom of the mouse. You can enjoy the wireless optical mouse easily when the cursor appears on the computer screen.

Special note: The rechargeable mouse has a built-in battery, don't place additional batteries. It is recommended to charge before using.

If you find that a slow or delayed movement of the cursor occurred in the use of the mouse, it is normally caused by insufficient power and it needs to be charged before using. (it can be fully charged after 2-3 hours of charging in the case of no power. When charging, the charging indicator light is red, and the light is turned off after charging.)

Cautions

Locate the wireless mouse far away to the strong interference sources such as: household microwave oven, etc. If you find that the mouse becomes dirty after using for a long time, you can use anhydrous alcohol to wipe a little and must not place it into the liquid to clean.

【产品保修凭证】
PRODUCT WARRANTY

保修条款

鼠标产品自售出之日起,正常使用情况下如发生硬件故障可享受12个月的免费保修。若属于以下因素,将不予保修,如需维修服务,本公司将有权收取维修费用

- 1.意外事故、地震、火灾、水灾、闪电或其他自然灾害,未经授权的产品修改造成的损坏
- 2.被未经授权的人员修复或试图修复过
- 3.本产品售出后因运输造成的损坏
- 4.物理损坏,包括用户移动或安装产品时造成的损坏
- 5.使用不符合本公司技术规格的代用品或部件所致
- 6.正常损耗
- 7.与产品质量无关的其他原因所致

以上条款最终解释权归本公司所有

无线鼠标的正确使用方法

步骤1:将接收器插入电脑USB接口

步骤2:打开鼠标底部的电源开关。当电脑屏幕上出现鼠标指针时,您可以轻松的享受您的无线光学鼠标。

特别注意:本款充电鼠标是内置充电电池的,无需另外放置电池。建议先充电再使用:如果您发现鼠标在使用过程中出现光标移动缓慢、延迟等情况,正常情况下就是电力不足导致的,需要充电后再使用。(没电情况下一般充电2-3个小时即可以充满电量,充电时充电口亮蓝色灯,充满后指示灯熄灭)

注意事项

使用此类无线设备,请尽量远离强干扰源,如:家用微波炉等...如使用比较久后发现鼠标脏污,可采用无水酒精少量擦拭,切不可整体置于液体中清洁。

产品维修登记表 Product maintenance registration form			
序号/serial number	日期/date	故障原因/fault reason	备注/notes