

DS17-60 说明书
 尺寸: 100mm x 150mm
 80g书写纸, 黑白印刷, 折页, 双面印
 料号: 416-DS17091-OR00R

Feel Free to Contact Us:
support@goodsoundersonic.com

IMPORTANT
Please read this manual carefully before operating the SPEAKER, keep this user manual for further reference.

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Follow all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled on objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

Additional Warnings:
The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

Caution marking is located at the rear or bottom of the apparatus.
Attention: marquage est situé sur le panneau arrière ou inférieur de l'unité.

The marking information is located at the rear or bottom of the apparatus. Le marquage est situé sur le panneau arrière ou inférieur de l'unité.

1 What's in the box

Make sure you read all the safety information before you use this product.

2 Overview

Press to switch the unit on/off.

Select the input modes (BT, OPTICAL, ARC, AUX, USB).

Total Volume Control
 Treble Volume Control
 Bass Volume Control

Previous
 Next

3 SPEAKER LED Indicator

The LED indicator on the sound bar gives you information about the status of the SPEAKER.

ARC	ARC Mode	bt	BT Mode
OPT	Optical Mode	AUX	AUX Mode
USB	USB Mode	LINE	Line Mode

4 Install or replace the remote batteries

Battery type: 1.5V AAA Alkaline battery x 2 (Battery not supplied, please use yours)

5 How to use the remote control

- Short Press Power on/off
- Short Press Switch Mode (USB, OPT, ARC, BT, AUX, USB)
- Mute/recover the volume
- Volume turning up
- Play/Pause
- Previous Track
- Next Track
- Volume turning down
- Short Press to BT mode
- Treble Down
- Treble Up
- Bass Down
- Bass Up
- Long Press to Volume Reset

6 Connect the SPEAKER

7 Using & Connect to your TV

7a Optical

Step 1, Turn off the SPEAKER and TV, connected the SPEAKER to the TV through the optical cable. **(Remove the white cover on cable).**

Step 2, Turn on the SPEAKER, press the "MODE" on the SPEAKER remote, then select the input mode "OPT" which is shows on the LED display.

Step 3, Turn on the TV, press the home on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** or turn off **TV speaker**. save the **setting**, then back to **audio** (sound setting) → select **expert setting** → **digital audio output** (or optical output) → select **PCM** (some TV called **SPDIF** or **optical**). Save the **setting**.

Step 4, Play TV show to test the SPEAKER.

Kindly Note: for optical connection, please change TV audio output to PCM (or SPDIF and optical) and external speaker, otherwise you will get cracking noise or no sound.

7b ARC

Step 1, Turn off the SPEAKER and TV, connected the SPEAKER to the TV through the optical cable. **(Remove the white cover on cable).**

Step 2, Turn on the SPEAKER, press the "MODE" on the SPEAKER remote, then select the input mode "ARC" which is shows on the LED display.

Step 3, Turn on the TV, press the home on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** or turn off **TV speaker**. save the **setting**, then back to **audio** (sound setting) → select **expert setting** → **digital audio output** (or optical output) → select **PCM** (some TV called **SPDIF** or **ARC**). Save the **setting**.

Step 4, Play TV show to test the SPEAKER.

Kindly Note: for optical connection, please change TV audio output to PCM (or SPDIF and ARC) and external speaker, otherwise you will get cracking noise or no sound.

7c AUX

Step 1, Choose line in cable (3.5mm to 3.5mm) or RCA cable connect the SPEAKER to your TV.

Step 2, Turn on the SPEAKER, press the "MODE" on the sound bar remote, then select the input mode "AUX" which is shows on the LED display.

Step 3, Turn on the TV, press the **home** (or menu) on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** (turn off TV speaker), save the **setting**. (For some TVs, please back to **audio(sound)** → select **analog output** → select the **Variable**, save the setting).

Step 4, Play TV show to test the SPEAKER.

3.5mm to 3.5mm cable (not supplied)

7d BT

The BT connection

- Press the "MODE" on the SPEAKER remote, then select the input mode "BT" which is shows on the LED display, the "BT" will be flash.
- Turn on BT on the BT device. (see the device's manual for more information)
- Select **"OR-01"** from the device BT list, connect it. When your BT device is connected, the LED display will stop flash.
- Play music from the BT device to test the SPEAKER.

BT Device

* You cannot connect more than one BT device at a time.
 * If your device requests a password, enters the default "0000".
 * Only work with the device which can output BT signal, it can not work with some devices can not output BT signal such as headphones.

7e USB

- Connect your USB drive to the USB jack on the SPEAKER.
- Press the "MODE" on the sound bar remote, then select the input mode "USB" which is shows on the LED display.
- Play music to test.

Kindly Note: only for USB flash drive to play MP3 music and update firmware, can not compatible with other usb devices.

8 Specifications

Model	OR-01
Power Supply	DC21V
Peak Power	70W
Speaker	2"x2"4"x2
Volume Level	0-32
BT Version	5.0
Distortion	<1%
Product Weight	4.3kg
Product Dimension	5.7(L) x 6.1(D) x 9.4(H) inch

TV Brand	Setting Steps
Roku Stick	① Setting → Audio → Digital Output Format → Select Stereo. ② Setting → Audio → Audio Mode → Select Stereo.
Fire Stick	① Settings → Display & Sounds → Audio → Surround Sound → PCM.
Samsung	① Setting → Sound → Sound Output → Turn off TV Speaker or select External Speakers. ② Setting → Sound → Expert Setting → Digital Output Audio Format → PCM.
Vizio	① Setting → Audio → TV Speakers → OFF. ② Setting → Audio → Digital Audio Out → PCM.
Sony	① Setting → Display & Sounds → Audio Output → Speakers → Audio System. ② Setting → Display & Sounds → Audio Output → Digital Audio Out → PCM. ③ Setting → Display & Sounds → Audio Output → Pass Through Mode → OFF.
LG	① All Setting → Sound → TV Speakers → OFF or select External Speakers. ② All Setting → Sound → Advance Settings → Digital Sound Output → PCM.
TCL Rock	① Setting → Audio → Audio Out → Auto. ② Setting → Audio → Digital Audio Format → Select Stereo.
TCL (Android system)	① TV Setting → Audio → TV Speakers → OFF or select External Speakers. ② TV Setting → Audio → Advance Setting → Digital Audio Out → Select PCM. ③ TV Setting → System → T-Link → Select ON.
Hisense Roku	① Setting → Audio → TV Speakers → Select Disabled. ② Setting → Audio → Digital Audio Out → Select Stereo.
ONN Roku	① Setting → Audio → TV Speakers → Select Disabled. ② Setting → Audio → Digital Audio Format → Select Stereo.
Sharp	① TV Setting → Sound → Advance Audio Setting → Digital Audio Out → Select PCM. ② TV Setting → Sound → Advance Audio Setting → TV Speakers → Select OFF or select External Speakers.
Sharp (Android system)	① Setting → Devices Preferences → Sound → Digital Output → Select PCM. ② Setting → Devices Preferences → Sound → Speakers → Select External Audio System.
Insignia Fire & Toshiba Fire	① TV Settings → Display & Sounds → Audio Output → TV Speakers → Select OFF. ② TV Settings → Display & Sounds → Audio Output → Digital Audio Format → Select PCM.
Panasonic	① Menu → Audio Settings → Advance Audio → TV speakers → Select OFF. ② Menu → Audio Settings → Advance Audio → Digital Audio Out → Select PCM.

Kindly Note: TV settings may differ according to TV models difference, if the listed method can not work, or your TV is not listed, please contact us via service mail: support@goodsoundersonic.com, or contact the TV manufacturer for help, thank you!