

使用说明书

M47


TWS 蓝牙耳机

INSTRUCTION MANUAL

M47

TWS Bluetooth headphones

Product Structure Diagram

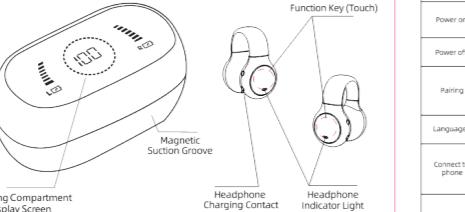

Packing List

Headphones x 2 pcs
Charging compartment x 1 pcs
Type-C charging line x 1 pcs
Instruction x 1 pcs

Use Manual

Function	Operation	Indicator Light	Warning Tone
Pairing name	M47		
Power on	Out of the power bank, the headset will turn on automatically. Or, press the key for 5 seconds to turn it on.	Blue indicator flashes	Power on/开机
Power off	After the headset is put into the power bank, it will turn off automatically, or press the key for 5 seconds to turn it off.	Red indicator flashes 3 times	Power off/关机
Pairing	The headphones automatically will start pairing after power on.	After pairing, the blue and red indicator of the master headset will turn off, and the slave headset will turn off.	Tinkling/提示音
Languages	When the mobile phone is not connected, touch the key twice to switch the language. The factory default is English.		English/中文
Connect to phone	After pairing, it will automatically enter the standby state. Check the Bluetooth list of the smart device to search and click "M47" to connect. After the headset is successfully connected, it will be a voice assistant and the indicator will turn off.	Indicators turn off	Connected/连接成功
Mode	Click the left/right key 3 times to switch the mode. Factory default is music mode.	Indicators turn off	Music mode / Game mode 音乐模式 / 游戏模式
Play/Pause	Double click the key when connected.		
Previous	In music mode, click the left headset key three times.		
Next	In music mode, click the right headset key three times.		
Volume up	In connecting, click the right headset key.		最大音量(100%) Maximum volume
Volume down	In connecting, click the left headset key.		
Voice Assistant	In connecting, press the left headset key for 2 seconds to wake up the voice assistant.		Tinkling/提示音

Connect phone call	Double click any headset key when there is an incoming call.	/	Phone ring/手机铃声/语音
Reject	Press the headset key for 2 seconds when there is an incoming call.	/	/
Hang up	Double click the headset key after a phone call.	/	/
Low Battery	When the voltage is lower than 1.6V, there will be a voice reminder when the headset is turned on.	Red indicator flashes in 5 seconds	Tinkling/提示音
Disconnected	If the pairing is exceeded or is manually operated, the indicator will be disconnected.	The master headset indicator flashes in red and the slave headset turns off.	Disconnected
Auto connection	After pairing, it will automatically connect to the user device when a valid distance.	Indicators turn off	Connected/连接成功
Charging	Put the headphones back into the charging compartment, automatically turn off and start charging. The red light of the earphones remains on, but it turns off when fully charged.		
Put into the power bank	During headphones charging, the display screen lights up to display the current battery level, and when the headphones are fully charged, the display screen turns off.		
Power bank charging	Put the headphones in the additional charge compartment, and the charging compartment display shows the current battery level.		
Charging finished	After being fully charged, the display shows a battery level of 100.		

Note: When the Bluetooth headphones are connected to a smart device, and the Game Mode is switched, the service time and connection distance of the headphones will be shortened.

Headset Parameters

1. Bluetooth version: Bluetooth 5.3	10. Headphone battery capacity: 3.7V/40mAh (Polymer battery)
2. Support mode: AAC/SBC	11. Battery capacity of charging compartment: 3.7V/250mAh (Polymer battery)
3. Bluetooth transmission distance: 10m	12. Charging interface: USB Type-C
4. Carrier frequency: 2.402 GHz ~ 2.480 GHz	13. Charge duration: ≥ 5 hours
5. Frequency response range: 20Hz~20KHz	14. Charging time of headphones: ≥ 1.5 hours
6. Headphone weight: 12.13mm	15. Charging time of charging bin: ≥ 1.5 hours
7. Headphone灵敏度: 115dB±3dB	16. Charging time of headphones in charging compartment: 2 times
8. Headphone阻抗: 32Ω±15%	17. Headset待机时间: ≥ 2300 hours
9. Headphone阻抗: 3mW	

Simple Troubleshooting

Malfunction	Factor	Solution
Cannot be turned on	Headphones are low in power	Charge the earphone
Headphones flashing red light	Headphones are low in power	Charge the earphone
Charging without prompt	The headphones are not put away	Adjust the position of headphones
Automatic shutdown	Headphones are low in power	Charge the earphone
Headphones have no sound	The volume is too low, or the environment is too noisy	Adjust the volume or change the environment
Abnormal noise in headphones	Serious external interference or too far away from the mobile phone	Change location or close to mobile phone
Calling party voices low	Headphones are incorrectly worn or the volume is too low	Adjust the earphone wearing or volume
Intermittent signal	Serious external interference or too far away from the mobile phone	Choose a non-interference environment or close to the mobile phone

Safety Guidelines

1. Please fully charge this product before using it for the first time.
2. Because the item is not a toy, children under the age of 12 must use it with adult supervision.
3. Please use 5V/1A charger that has passed the safety certification of regular manufacturers to avoid damage to products caused by fast charging chargers that support high voltage.
4. Please charge in a safe environment. Please remove the charging cord from the charging compartment as soon as possible once the charge is complete to prevent battery damage from prolonged charging. The charging mode of the charging bin is Type-C interface.
5. This product has built-in non-detachable rechargeable battery. Repeated charging and discharging of headphones will lead to battery performance degradation over time, which is a normal phenomenon for all rechargeable batteries.
6. This product is equipped with lithium battery. Charge it at least once a month if it hasn't been used for a while.
7. Please stop using it and see a doctor if you experience skin irritation while wearing it owing to individual variances.
8. When using this product with Bluetooth connection, please adjust the earphone sound to the appropriate volume, to avoid hearing damage caused by long-term high volume.
9. If you use this device while engaged in activities that call for attention, such as driving or cycling, on roads, at construction sites, on trains, or while walking, you should be mindful of your own and other's safety. To ensure that you can hear the sounds around you, including alarms and warning signs, you should take off your headphones or increase the volume.
10. Please comply with the relevant regulations of your region or country, and use this product as required when driving.

11. This product contains magnetic materials. When using or placing the product, please keep it away from electrical appliances with strong magnetic field or strong electric field, such as microwave oven, refrigerator, etc.

12. It is recommended to use this product in the environment with temperature of -0°C~45°C. When the ambient temperature is lower than -5°C, the battery performance will be limited.

13. Do not use this product in places where the use of wireless devices is expressly prohibited, otherwise it will interfere with other electronic devices or cause other dangers.

14. Before approaching medical and industrial equipment or boarding an airplane, please consult local staff for use of the product.


15. Before cleaning and maintaining this product, please stop using this product, close all applications, and disconnect all connections or cables with other equipment.

16. Please dispose of waste electronic products correctly according to local laws and regulations, and do not discard electronic and electrical equipment, components, batteries and other domestic garbage together.



产地: 中国·广东
Place of production: China·Guangdong

产品结构图

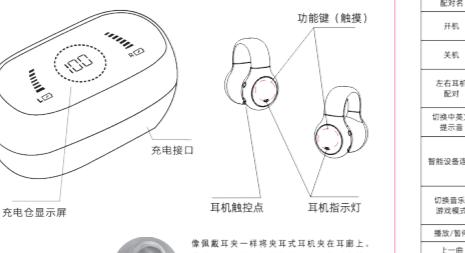

包装清单

耳机 x 2 pcs
充电仓 x 1 pcs
Type-C 充电线 x 1 pcs
说明书 x 1 pcs

产品操作介绍

功能	操作	指示灯	提示音
配对名	M47		
开机	耳机在充电仓内状态下, 双击任意耳机自动开机/关机	蓝灯亮	Power on/开机
关机	耳机放入充电仓后, 长按任意耳机2秒, 天线	红灯快闪三次	Power off/关机
左右耳机配对	左右耳机同时长按2秒, 天线	左右耳机快闪三次, 蓝灯	连接成功
切语种	当蓝牙耳机连接智能设备, 切换游戏模式时, 耳机快闪三次, 蓝灯		
智能设备连接	当蓝牙耳机连接智能设备, 切换游戏模式时, 耳机快闪三次, 蓝灯		
切换音乐/游戏模式	当左右耳机同时长按4次, 进行模式切换。 出厂默认音乐模式		音乐/游戏模式 MUSIC/GAME MODE
播放/暂停	播放状态下, 双击任意耳机切换模式		
暂停/暂停	暂停状态下, 单击任意耳机切换模式		
增加音量	播放状态下, 单击任意耳机增加音量		最大音量提示(蜂鸣)
减小音量	播放状态下, 单击任意耳机减少音量		
语音助手	语音状态下, 长按任意耳机快键2秒开启, 有语音提示音		
接听来电	来电状态下, 双击任意耳机快键		手机铃声提示音
拒接来电	来电状态下, 长按任意耳机快键2秒		

简单故障排查

故障	原因	解决方法
不开机	耳机电量不足	对耳机进行充电
耳机闪红灯	耳机电量不足	对耳机进行充电
充电仓显示	耳机没有放好	调整耳机放置的位置
自动关机	自动电量不足	对耳机进行充电
耳机有杂音	音量过大或环境太嘈杂	调节音量或改变环境
耳机有杂音	耳机佩戴不正确或距离手机太远	更换耳机或靠近手机
对方声音小	耳机佩戴不正确或音量太小	调节耳机佩戴或音量大小
信号断开	外界干扰严重或距离手机太远	选择无干扰的环境或靠近手机

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
主机	×	○	○	○	○	○
配件	×	○	○	○	○	○

本表依据SJ/T 11364的规定编制。

O: 表示该有害物质在该部件所有均质材料中含量均在GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一项均质材料中的含量超过GB/T 26572规定的限量要求。

注: 本产品有“X”的原因是, 现阶段没有可选择的替代技术或部件。

安全指引

- 1.初次使用本产品前, 请先充满电再使用。
- 2.产品不是玩具, 12岁以下儿童须在成年人监护下使用。
- 3.请使用通过国家安全认证的5V/1A充电器, 避免支持高电压的快充充电器对产品造成损坏。
- 4.请在安全的环境下充电, 在充电仓充电时, 电量充满后请尽快将充电线拔出, 避免长时间充满对电池造成损坏。
- 5.本产品不放置在太阳直晒或者温度过高的地方。高温会缩短电子部件的使用寿命, 损坏电池, 使某些塑料部件变形。
- 6.请勿将产品放在尘土多、温度和湿度过低或过高的地方保存。
- 7.请勿将磁条卡 (例如银行卡、公交卡等) 长时间接触本产品, 否则可能导致磁条卡被磁场损坏。
- 8.请勿在本产品上施加过大的压力, 或拆卸、撞打本产品, 以防产品损坏。
- 9.请勿在靠近热源处使用本产品, 如加热器、热风调节器、炉灶或其他产生热量的仪器。
- 10.请勿堵塞本产品的开口处, 如充电口、指示灯、麦克风等。
- 11.请勿在暴雨天气下使用设备, 雷暴可能导致设备出现故障, 增大击打的风险。
- 12.请遵守本产品及其配件雨淋或受潮, 及激烈运动或出汗较多时使用本产品, 防止液体渗透到产品内部损坏本产品。
- 13.产品属于内置聚合物锂电池, 不可更换, 请勿丢弃或置于以火, 免爆炸、起火等危险发生。
- 14.因消费者违反上述警示而不恰当使用所造成的人身及财产损害将自行承担一切后果, 本公司将不产生任何法律责任。

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.