





	press for 2 seconds, standby mode, and the light flashes. Vibration key Short press to activate the dual vibration function, long press for 2 seconds, standby mode, and the light flashes.	3. Magnetic suction, relying on a magnet to clamp underwear.	accompanying US8 charging cable is not waterproof. Please be careful not to put it into water to avoid other accidents such as electric shock or burns	Use takum powder Ventilated place Word the sun Way from children Word the sun Way from children Way from children Way from children Way for children Way for children Way for children Way for children	please wipe it with a dry doth or cotton swab Is the product fully charged? When the product is fully charged, the indicator light will remain on. Charging will not be completed. (Indicator light remains on) Dust and stains may stick to the charging port. Please wipe with a dry cloth or cotton swab before charging If the indicator light remains on after 180 minutes of charging, it may be due to poor contact of the charging contacts	Please turn off the switch before cleaning, otherwise it may cause malfunction, overheating or burning. When unplugging the included USB charging cable, please hold the connection part and do not stretch the cable, otherwise it may accelerate the deterioration of the cable and lead to electric shock-short circuit or even fire. Unplug the USB charging cable when there is no need for charging. Otherwise it may be short-circuited due to dust and moisture, and lead to electric leakage or fire accidents Please clean the USB charging cable connector regularly to avoid dust causing a short circuit or fire.	avoid spreading sexually transmitted diseases.	
-9-	-10-	-11-	-12-	-13-	-14-	-15-	-16-	1



