

Utium

## WARRANTY & AUTHENTICATION

### Visually Act Now!

The default warranty period for the product is 24 months.

Scan the QR code below to **Extend the warranty period to 3 years!**

Verify the authenticity of the product **Get exclusive Promos & Giveaways**

Professionally Test And Recommend Each Toy For You!

- 1. WARRANTY EXTENSION
- 2. WAREHOUSE
- 3. AFTER-SALES SERVICE
- 4. FLOW CHART

*\*Note: Warranty does not include accessories and consumables.*

**OUR SOLUTION: Professionally Test And Recommend Each Toy For You!**

## WARRANTY & AUTHENTICATION

### BRAND STORY

#### UT1P4

Professionally testing and recommendation of each toy.

All UT-series products are selected through online screening. All tested and recommended by professional players, and listed by the platform as excellent products before they reach the shelves.

Over the years, we found a large number of problems with adult products such as their parts, pins and so on. Many packaging, and use of materials that are harmful to the body. To solve these problems, we carried out a comprehensive strategic upgrade and determined to allow users to easily find the right and reassuring products.

#### Evolution

In 2014, UTIM was founded.  
In 2016, UTIM became the largest seller in the Sound Ball game category on Amazon.  
In 2019, UTIM has 10th patents for adult products.

Over the years, we found a large number of problems with adult products such as their parts, pins and so on. Many packaging, and use of materials that are harmful to the body. To solve these problems, we carried out a comprehensive strategic upgrade and determined to allow users to easily find the right and reassuring products.

#### Future Products

Utium provides high-quality, safe, creative, effective, collectible social products, as well as unexpected and exciting customer service.

## AFTERSALES SERVICE

If you are not satisfied with the product, please contact us first, we will give our best to solve your problem as soon as possible.

Other questions, such as warranty and authentication, instructions for use, product advice, product representation, etc.

Please contact us through the following ways.

WhatsApp: <https://www.whatsapp.com/channel/00293a0c702276023473>

Skype: <https://www.skype.com/en/contact-us/voice-calls>

LINE: <https://www.line.me/S000000000>

Telegram: <https://t.me/utium>

Facebook: <https://www.facebook.com/utium.us>

Twitter: [https://www.twitter.com/utium\\_us](https://www.twitter.com/utium_us)


Instagram: <https://www.instagram.com/utium.us>

Website: <https://www.utium.us>

EN EN

## SPECIFICATION

Material: ABS + AISI  
Main body size: 65.5x37.0x71.55mm  
Remote control: 16.3x31.5x22.5mm  
Weight: 125g  
Maximum number <= 600h  
Recharge time: 4.5h  
Function: remote control, status indication  
Accessories:  
- 1 x Remote Control  
- 1 x Instruction Manual  
- 1 x Remote Control Case  
- 1 x USB Charging Cable  
- 1 x Protective Bag

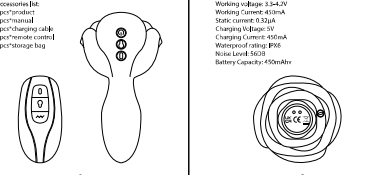

## OPERATION BUTTONS

Switch key:  
Pressing the power button turns on the device. It can be turned on and off in the power button.

Frequency link:  
Pressing the frequency link button turns on the frequency link function. It can be turned on and off in the frequency link button.

On/Off button:  
Pressing the on/Off button turns on the device. It can be turned on and off in the on/Off button.

Deflate button:  
Pressing the deflate button turns on the deflate function. It can be turned on and off in the deflate button.

*Note: For the deflate control opens when the frequency link is on.*

EN EN

## OPERATION BUTTONS

Manual valve:  
Pressing the manual valve turns on the manual valve function. It can be turned on and off in the manual valve.

Remote control key:  
Pressing the remote control key turns on the remote control function. It can be turned on and off in the remote control key.

Frequency link:  
Pressing the frequency link turns on the frequency link function. It can be turned on and off in the frequency link.

On/Off button:  
Pressing the on/Off button turns on the device. It can be turned on and off in the on/Off button.

Deflate button:  
Pressing the deflate button turns on the deflate function. It can be turned on and off in the deflate button.

*Note: For the deflate control opens when the frequency link is on.*

EN EN

## HOW TO USE

1. When using: When using the product, please connect the USB charging cable to your PC. It is recommended to use it together with a power adapter in order to get the best user experience.

2. When using: When using the product, please connect the USB charging cable to your PC. It is recommended to use it together with a power adapter in order to get the best user experience.

3. After use: After use, rinse with warm water and gently dry with dry paper. Do not leave it in the sun or near heat.

4. Preservation: If not used, the product should be kept in a dry and well-ventilated place, away from direct sunlight and away from the reach of children.

EN EN

## ATTENTION

Do not use the USB port of your PC is connected to the product before connecting fully. Please disconnect before using for the first time or before being inserted for an extended period of time. To ensure the quality of the product, please fully charge it at least once every 4-5 months. Do not use a USB charging cable that is not included. The included USB charging cable is not waterproof. Please be careful not to put it into water to avoid other accidents such as electric shock or burns.

The product body is waterproof and can be rinsed underwater.

Do not use with hot water and oil. Do not clean with solvents such as benzene, alcohol, etc. to avoid deformation and discoloration of the product.

It is strictly prohibited to immerse the product in water when charging to avoid electric shock, burn, cancer, etc. and other accidents.

Do not store the product in places exposed to sunlight, high temperature, high humidity. The top of the device is flammable, heating, burning or even fire.

## FAULT RESOLUTION

The product is not working properly: the telescoping or deflating function is not working.  
**Is the power on?** The power is not on. Please check the power button.  
**Is the fully charged?** Please check the battery level.  
**Are you using the power correctly?** Please check the power button.  
**Is the charging cable disconnected from the adapter or charging port?**  
**When using your computer, is the product fully charged?** Please check if your computer is in standby mode. Please check if your computer is in standby mode.  
**Is there a dust or oil on the charging port when charging again?** Please wipe it with a dry cloth or cotton swab.  
**Is the product fully charged?** Please fully charge the product. The indicator light will stay on.

EN EN

## FAULT RESOLUTION

Charging will not be completed: If the indicator light does not flash.  
**Dust and stains may be attached to the charging port.**  
**Please wipe them with a dry cloth or cotton swab first, and then charge them again.**  
**If the indicator light is still on after 100 minutes of charging, it may be due to poor contact with the charging cable.**  
**If the indicator light is still on after 100 minutes of charging, it may be due to poor contact with the charging cable.**


## SAFETY & WARNING

If you are using a medical device, please stop using it before use. If you are using a medical device, please stop using it before use. If you are using a medical device, please stop using it before use. If you are using a medical device, please stop using it before use. If you are using a medical device, please stop using it before use.

DE DE

## SPEZIFIKATION

Material: ABS + AISI  
Hauptkörpergröße: 65,5x37,0x71,55mm  
Fernbedienung: 16,3x31,5x22,5mm  
Gewicht: 125g  
Maximale Anzahl <= 600h  
Wiederladezeit: 4,5h  
Funktion: Fernbedienung, Statusanzeige  
Zubehör:  
- 1 x Fernbedienung  
- 1 x Bedienungsanleitung  
- 1 x Fernbedienungsfalle  
- 1 x USB-Ladekabel  
- 1 x Schutzbeutel

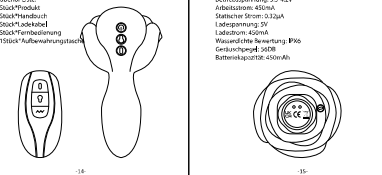

## ANWENDUNGEN

Aufblähen: Drücken Sie den Aufblähen-Button (H).  
Entleeren: Drücken Sie den Entleeren-Button (D).  
Strom ein/aus: Drücken Sie den Ein/Aus-Button (P).  
Frequenzverbindung: Drücken Sie den Frequenz-Button (F).  
Handsteuerung: Drücken Sie den Hand-Button (H).

## TASTEN ZUR BEDIENTUNG

Ein/Aus-Button:  
Drücken Sie den Ein/Aus-Button, um das Gerät zu aktivieren oder zu deaktivieren.

Frequenz-Button:  
Drücken Sie den Frequenz-Button, um die Frequenzfunktion zu aktivieren.

Hand-Button:  
Drücken Sie den Hand-Button, um die Handfunktion zu aktivieren.

Entleeren-Button:  
Drücken Sie den Entleeren-Button, um das Gerät zu entleeren.

Strom-Button:  
Drücken Sie den Strom-Button, um den Strom zu aktivieren oder zu deaktivieren.

*Note: For the deflate control opens when the frequency link is on.*

DE DE

## TASTEN ZUR BEDIENTUNG

Manuelle Ventile:  
Drücken Sie die manuellen Ventile, um das Gas aus dem Produkt zu lassen.

Remote Control Key:  
Drücken Sie den Remote Control Key, um die Remote Control Funktion zu aktivieren.

Frequency Link:  
Drücken Sie den Frequency Link, um die Frequency Link Funktion zu aktivieren.

Ein/Aus-Button:  
Drücken Sie den Ein/Aus-Button, um das Gerät zu aktivieren oder zu deaktivieren.

Deflate-Button:  
Drücken Sie den Deflate-Button, um das Produkt zu entleeren.

*Note: For the deflate control opens when the frequency link is on.*

DE DE

## WIE ZU VERWENDEN

1. Vor dem Gebrauch: Bitte lesen Sie die Bedienungsanleitung des Produktes und stellen Sie die Fernbedienung ein und laden Sie sie vollständig auf.

2. Bei der Verwendung: Wenn das Produkt verwendet wird, empfehlen wir, es mit einer Fernbedienung zu steuern, um die Handfunktion zu vermeiden.

3. Nach dem Gebrauch: Nach dem Gebrauch mit warmem Wasser spülen und mit trockenem, weichen Papier abtrocknen.

4. Aufbewahrung: Wenn das Produkt nicht benutzt wird, sollte es an einem trockenen und belüfteten Ort aufbewahrt werden, ohne direkter Sonneneinstrahlung ausgesetzt zu werden.

DE DE

## AUFMERKSAMKEIT

Verpackung öffnen und den Füllstoff aus dem Behälter des Produktes nehmen. Nach dem Öffnen des Produktes, lassen Sie das Produkt an einem trockenen, gut belüfteten Ort stehen.

Das Produkt ist nicht wasserfest und sollte nicht in Wasser eingetaucht werden.

Das Produkt ist nicht wasserfest und sollte nicht in Wasser eingetaucht werden.

Das Produkt ist nicht wasserfest und sollte nicht in Wasser eingetaucht werden.

DE DE

## STÖRUNGSBEHEBUNG

Das Produkt funktioniert nicht richtig: Die Teleskopfunktion oder die Entleerungsfunktion funktioniert nicht.  
**Ist das Stromnetz an?** Bitte überprüfen Sie, ob das Stromnetz an ist.  
**Ist das Produkt vollständig geladen?** Bitte überprüfen Sie den Ladezustand des Produktes.  
**Wird das Produkt richtig verwendet?** Bitte überprüfen Sie die Bedienungsanleitung.

## STÖRUNGSBEHEBUNG

Das Produkt funktioniert nicht richtig: Die Teleskopfunktion oder die Entleerungsfunktion funktioniert nicht.  
**Ist das Stromnetz an?** Bitte überprüfen Sie, ob das Stromnetz an ist.  
**Ist das Produkt vollständig geladen?** Bitte überprüfen Sie den Ladezustand des Produktes.  
**Wird das Produkt richtig verwendet?** Bitte überprüfen Sie die Bedienungsanleitung.

DE DE

## STÖRUNGSBEHEBUNG

Das Produkt funktioniert nicht richtig: Die Teleskopfunktion oder die Entleerungsfunktion funktioniert nicht.  
**Ist das Stromnetz an?** Bitte überprüfen Sie, ob das Stromnetz an ist.  
**Ist das Produkt vollständig geladen?** Bitte überprüfen Sie den Ladezustand des Produktes.  
**Wird das Produkt richtig verwendet?** Bitte überprüfen Sie die Bedienungsanleitung.