


正面

QUICK BUTTON COMMAND PMN:Helmet bluetooth headset

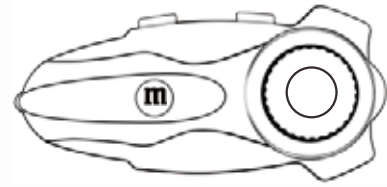

XGP

Motorcycle Intercom X10

Tips:

- 1.To ensure the sound quality and normal audio output, please plug the speaker wire into the TYPE-C jack all the way till there is a "click" tone.
- 2.Due to the wzaterproof finish for the charging connector, the Type-C Jack will be much longer, so please use our TYPE-C cable for charging.

1、Product Overview

2、Basic Function

Power on

Hold 2 seconds → voice prompts "Power on" → Blue Light Flashes

Power off

Hold 2 seconds → voice prompts "Power off" → Red Light Goes out

Battery Prompts

Tap X2 → Power is % Usable Power

Low Battery Prompt

Battery below 50% → voice prompts "Power is lower than 50%" → Charge

Battery below 10% → voice prompts "Power is lower than 10%" → Power off
(Please use the DC 5V adapter to charge. It will flash RED light while charging and turn BLUE when fully charged.)

Factory Reset

Hold 3 seconds → voice prompts "Factory Reset" → Red and blue lights Flash
(After factory reset, power off and restart the device. The power button will flash red and blue alternately. At this point, you can directly connect the device to your phone via Bluetooth without entering pairing mode again;)

3、Phone Call

Connect Phone (Power off status)

Hold 4 seconds → Red and blue lights flash, voice prompts "pairing", Phone bluetooth connects *X10 → voice prompts "connected" → Blue light blinks

(The X10 unit can simultaneously connect two phones)

Answer call

Tap x1 → (coming call) → Answer

End call

Tap x1 → (on the phone) → End

Reject call

Hold 1s → (coming call) → Reject

Enable Auto-answering call

Hold 3 seconds → voice prompts "enable auto answer" → Auto-answering about 6s

Disable Auto-answering call

Hold 3 seconds → voice prompts "disable auto answer" → Shut down
(The factory default setting is "No auto answering")

Activate Voice Call (Siri/Google Assistant)

Tap x2 → Speak out the name on your phone list to call or other commands.

背面

XGP

Email: XGPTX2023@163.com

Youtube @XGPTX

Ins @xgpmoto

6、Universal Pairing

2-Way Bluetooth Intercom (Power on Status)

1. Hold 3s (other brand enter pairing mode on its way) → The red and blue lights flash, voice prompts "searching"
2. Start a talk: Tap x1 together → The blue light flash on X10, voice prompts "device is connected"
3. End a talk: Tap x1 together → The blue light flash slowly on X10

(To connect with XGP other styles intercom, just enter the pairing mode together when the red and blue light flash on both units, wait till the blue light slowly flashes then you can talk back and forth.)

5、Music Function

Music Play/Pause

Tap x1 → (music stops) → Play

Tap x1 → (music playing) → Pause

Music Switch

Tap x1 → (music playing) → Last song

Tap x1 → (music playing) → Next song

Volume Modulation

Rotate clockwise → (music playing) → Turn up

Rotate counterclockwise → (music playing) → Turn down

(1. There's a tone "du" while adjusting volume. When the volume is at the maximum the tone turns to "di", and at the minimum it turns to "du")

(2. The X10 has Audio Multitasking feature. So when have a intercom talk and music playing simultaneously, rotate the Jog Dial directly to adjust the music volume, and pause the music playing then rotate the Jog Dial to adjust the intercom volume.)

4、Mesh Intercom Function

Mesh Intercom Function (Power on Status)

Tap x1 on each intercom → The green light flash quickly, voice prompts "intercom mesh on", → After 5s the Solid green light is On, voice prompts "N" mesh devices connected

Exit Mesh Intercom

Tap x1 → The green light flashes every 2s

Recover Mesh Intercom

Tap x1 → The solid green light ON

Turn off Mesh Intercom

Tap x2 → voice prompts "intercom mesh off" → The green light is Off

1. The XGP X10 can support up to 10 people to have a mesh intercom talk. The "N" presents numbers 1 to 10.
2. Anyone who want to exit the mesh intercom, just click the "M" button, at this time others can still keep connected and talk; if he wanna re-enter the mesh intercom talk, click the "M" button again to join in.
3. If someone beyond the range and disconnect from the mesh intercom talk, it will automatically reconnected if he come back to the mesh group talk within 5 minutes, or have to click the "M" button again to re-join in.

FCC& ISED Statement

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la partie 15 des règles de la FCC et aux normes RSS exemptées de licence d'Industrie Canada. Le fonctionnement est soumis aux deux

conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant entraîner un fonctionnement indésirable.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conforme avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

Radiation Exposure Statement for camera

This equipment should be installed and operated with minimum distance 0cm between the radiator & your body.

Cet équipement doit être installé et utilisé à une distance minimale de 0 cm entre le radiateur et votre corps.