# Pacific telecom SE1100 Product description

# catalogue

1.	summary	1
	Specification and parameters	
	operation declaration	
٠.	3.1 Installation of accessories	
	3.2 Power up on the equipment	
	3.3 Device SSH Login	
4.	after-sale service	

### -, summary

SE1100 Series is a hardware device developed by Pacific Telecom that integrates various network access functions, which can meet the needs of enterprise office network networking.

# 二、 Specification parameters

Specifications name	SE1100
joggle	4 * GE port
WIFI	IEEE 802.11 n/g/b , 2.4GHz
	IEEE 802.11 ac/a , 5.8GHz
heat radiation	No fan
Power adapter	AC 100-240v~50/60Hz 0.6A
rated operational voltage	DC 12V
maximum operating current	2A

maximum power dissipation	18W
weight	0.785kg
Equipment size	20.5cm *12cm *3cm
operating ambient temperature	0°C~50°C
Humidity of working environment	10% to 90%, non-condensation

# 三、 operation declaration

#### 3.1 Installation of accessories

If you need to use the Wifi function, you need to install the antenna. The product comes with two antennas, and each antenna supports both 2G and 5G. If the antenna into the antenna interface and tighten the nut clockwise..4.8

## 3.2 Power up on the equipment

Plug the power adapter into a power outlet and connect the other end to the power port of the device. Later, the red power indicator lights on, and the system enters the start state. When the red power indicator is off and the blue power and WIFI indicators are on, the device is started.

## 3.3 Device SSH Login

Set the PC network card IP to static ip is 192.168.253.2, the subnet mask is 255.255.255.0, use the network cable to access the far left network port (network port 4), use the terminal simulation software (such as Putty, SecureCRT, etc.). The default IP of the factory software version is 192.168.253.1, port number is 9322, user name: root, and initial password is 12345678.

You can also connect to the device through WIFI, have two access points, search for WIFI names CPE-xxx xxxxx-5G and CPE-xxxxxxxx-2G, where x

number represents the SN number of CPE and the default password is wifi 7890. After successfully connecting the Wifi is equivalent to receiving the LAN port.

# 四、 after-sale service

- ➤ Equipment from the date of purchase provides one year free warranty service, provide 7 \* 24 hours technical support.
- After the hardware failure occurs, the equipment shall be sent to the customer site after confirmation by the after-sales personnel, and the customer will be sent back to the faulty equipment after the fault is solved.
- Customer service hotline: 400 700 2800

The model is displayed on the physical equipment nameplate. Please provide the accurate model.

#### FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.