 



802.11ax-HE40 - Ant 1 (Nss = 1)

Channel 187 (6885MHz)

The Reference Level

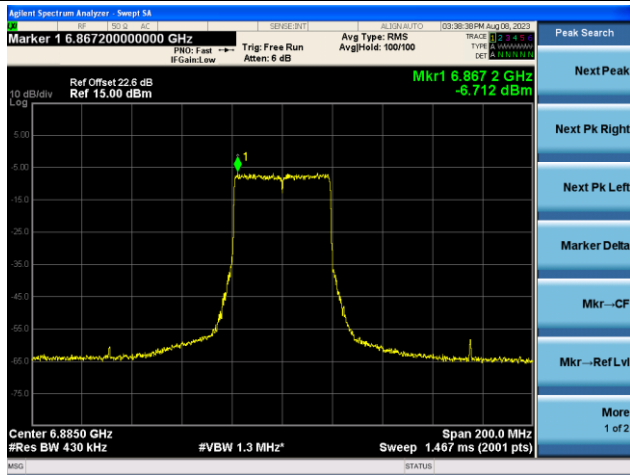


 The Mask Data

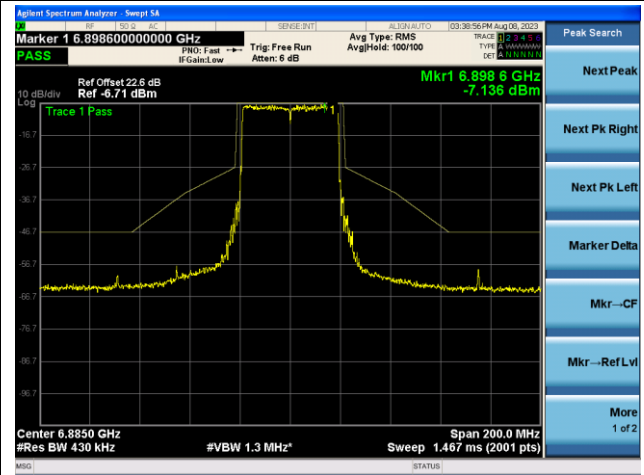


Channel 195 (6925MHz)

 The Reference Level

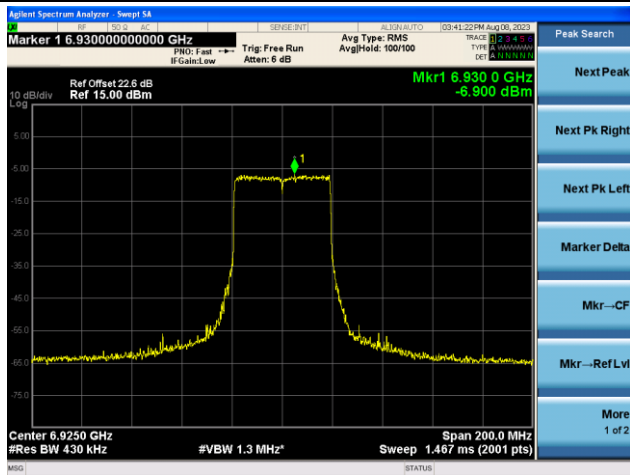


The Mask Data

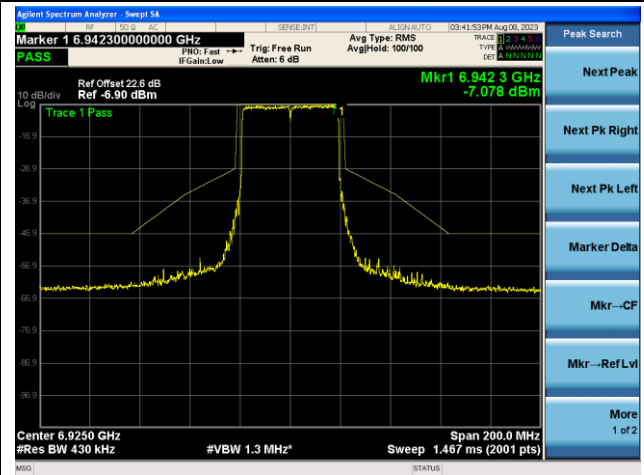 


Channel 211 (7005MHz)

 The Reference Level

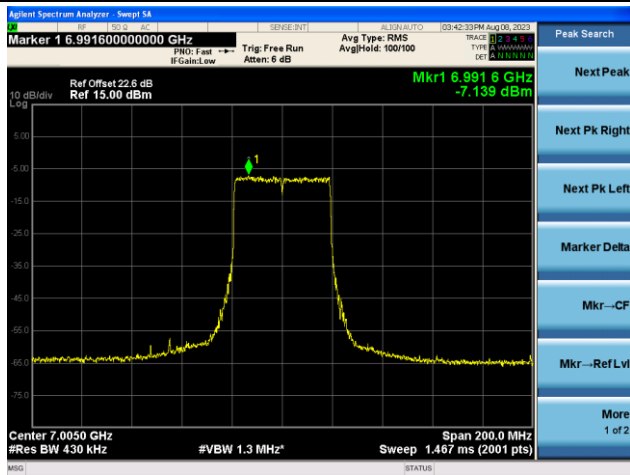

The Mask Data


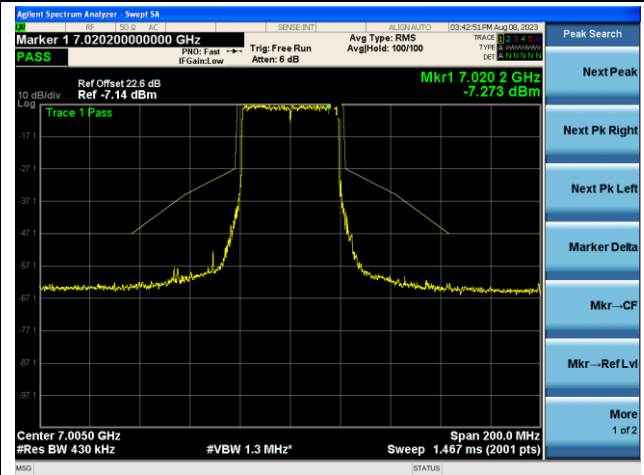 


802.11ax-HE40 - Ant 1 (Nss = 1)

Channel 227 (7085MHz)

The Reference Level

  
The Mask Data

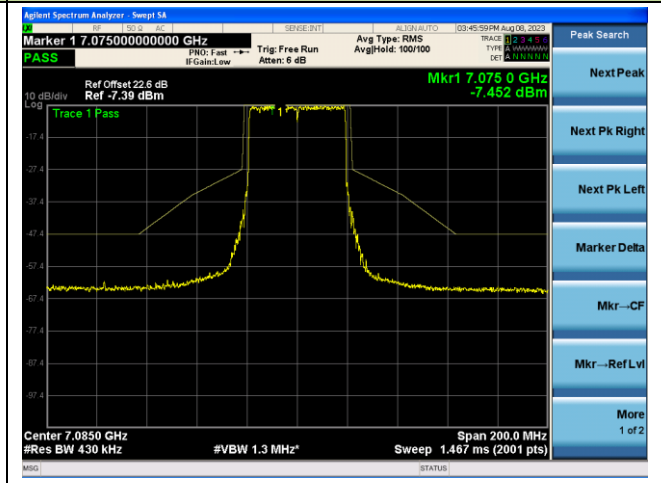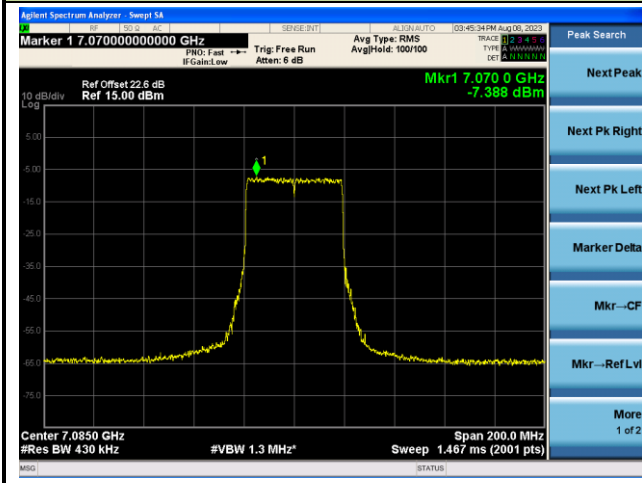


802.11ax-HE80 - Ant 1 (Nss = 1)

Channel 7 (5985MHz)

 The Reference Level

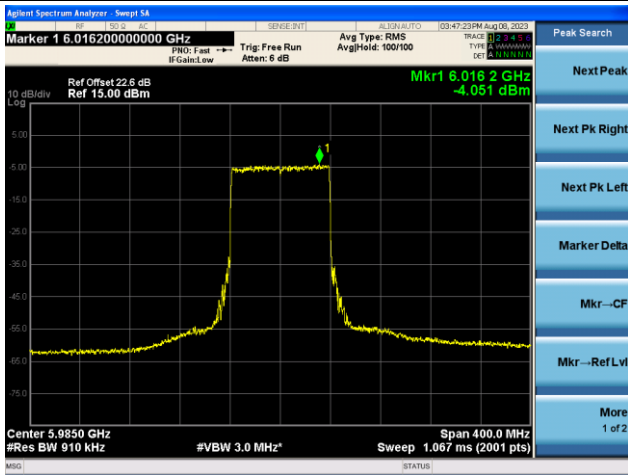


The Mask Data

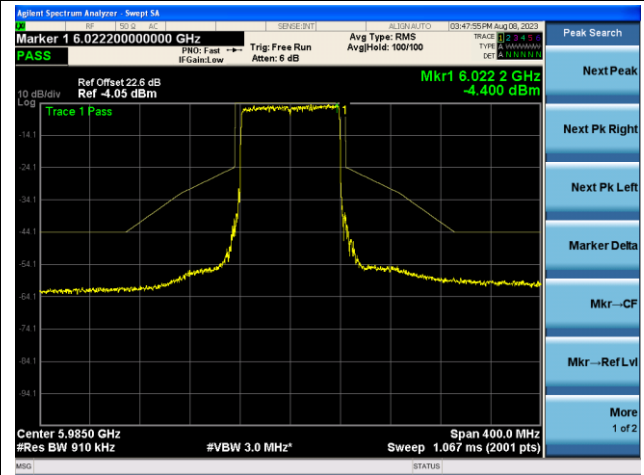 


Channel 39 (6145MHz)

 The Reference Level

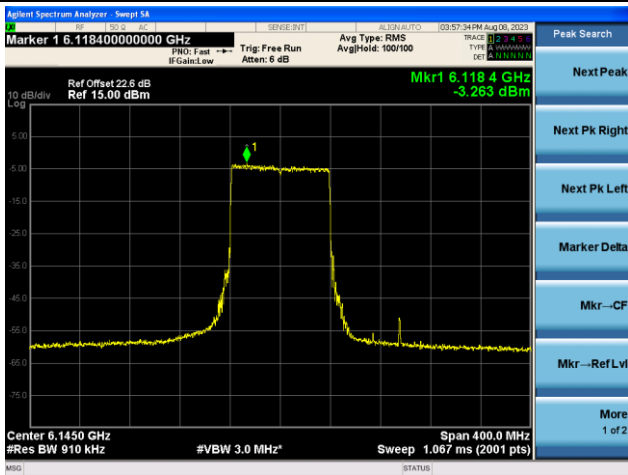


The Mask Data

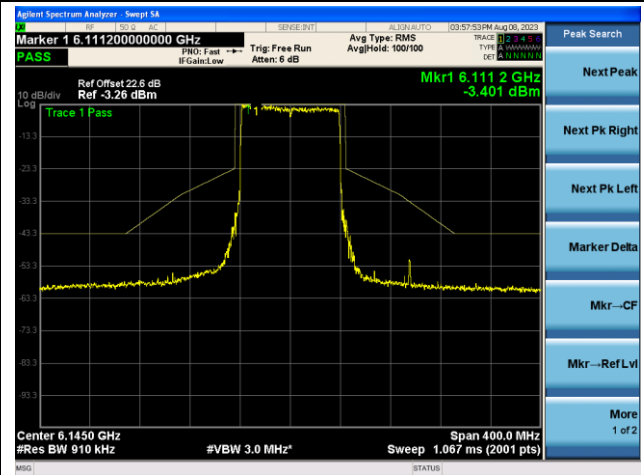 


Channel 87 (6385MHz)

 The Reference Level

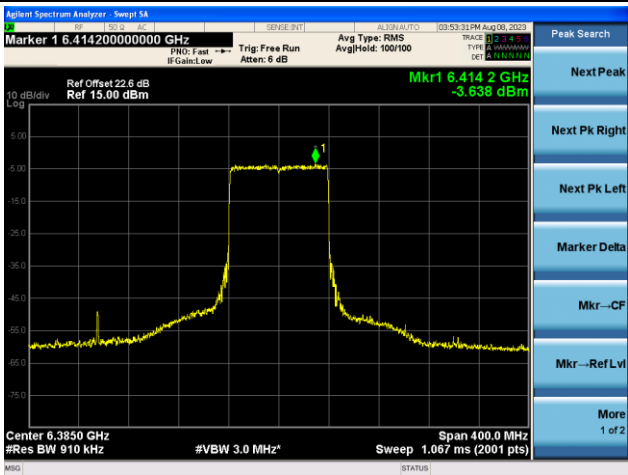


The Mask Data

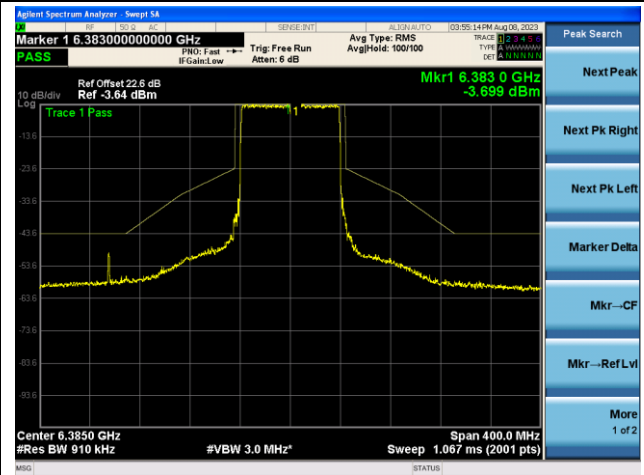 


802.11ax-HE40 - Ant 1 (Nss = 1)

Channel 103 (6465MHz)

 The Reference Level

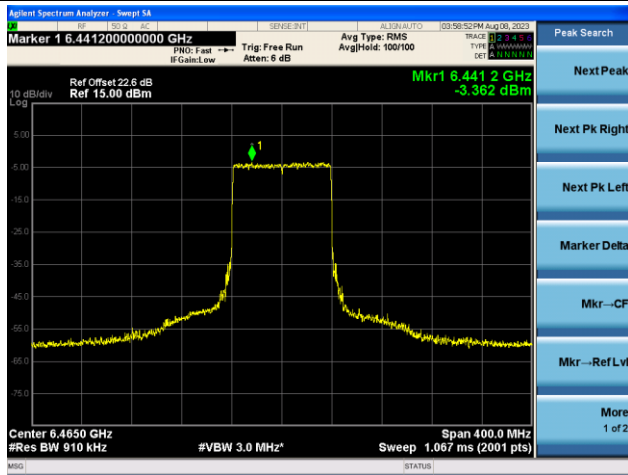


The Mask Data

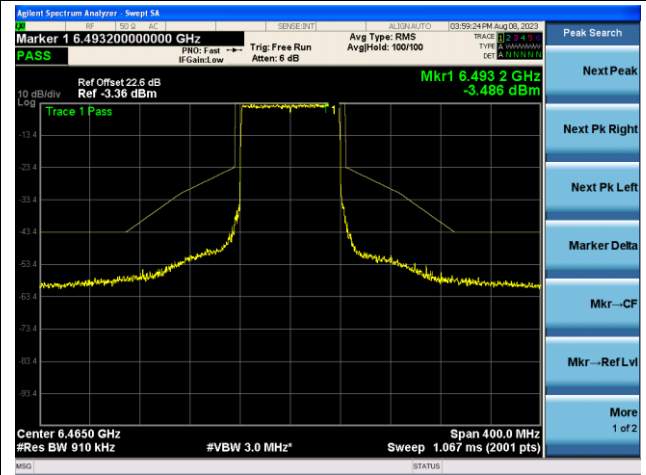 


Channel 119 (6545MHz)

 The Reference Level

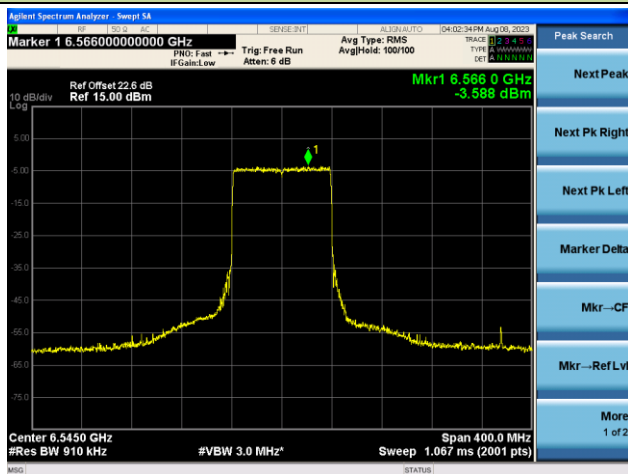


The Mask Data

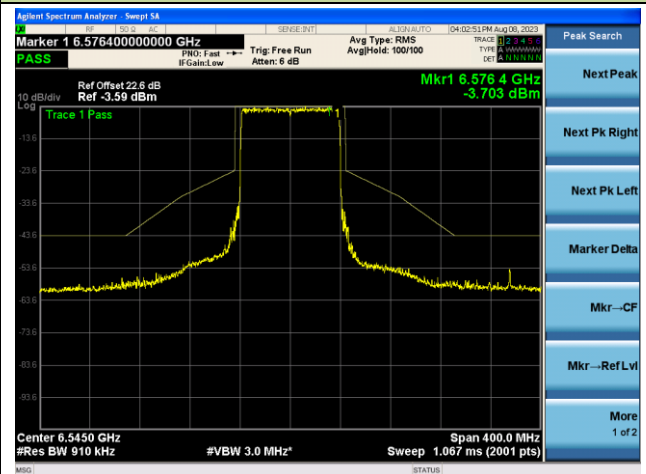 


Channel 135 (6625MHz)

 The Reference Level

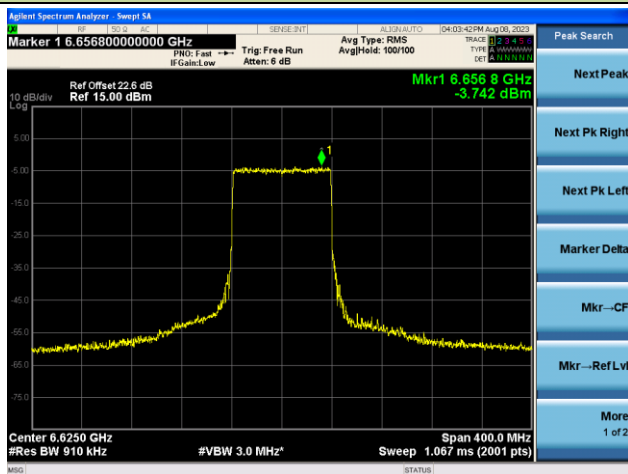


The Mask Data

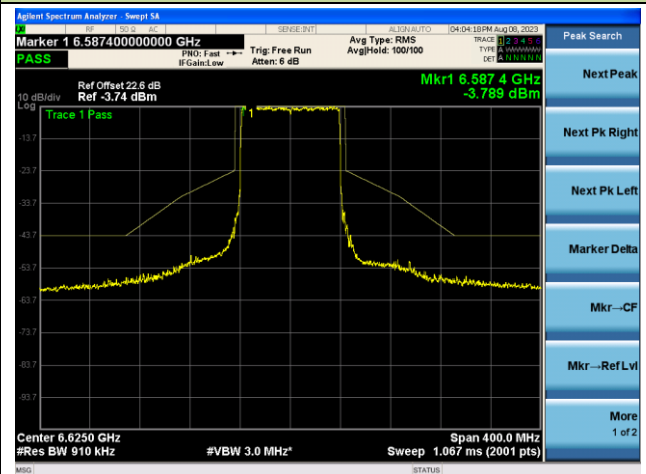 


802.11ax-HE80 - Ant 1 (Nss = 1)

Channel 151 (6705MHz)

 The Reference Level

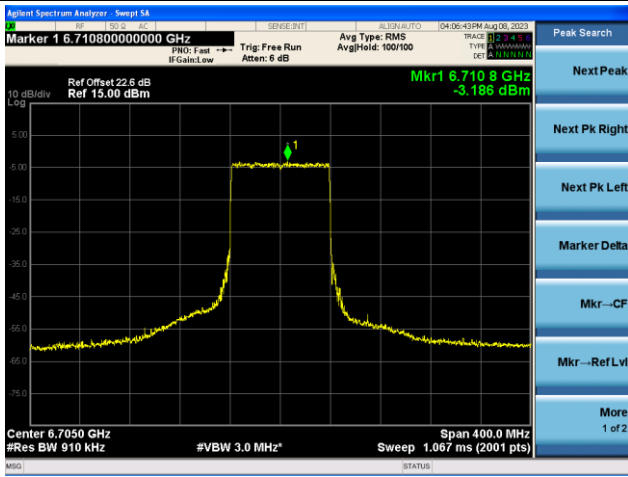


The Mask Data

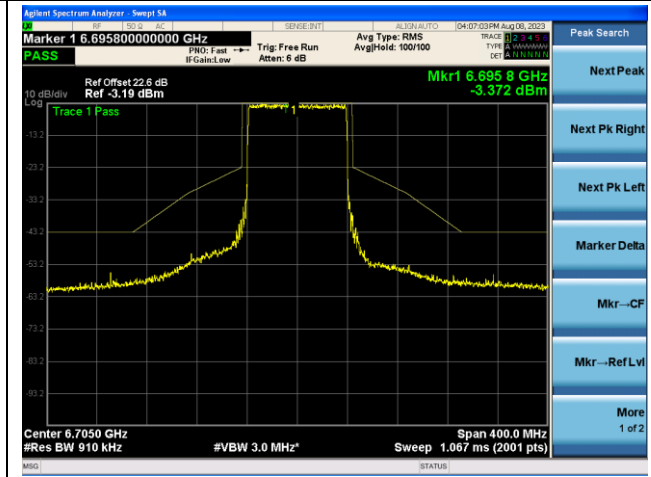 


Channel 167 (6785MHz)

 The Reference Level

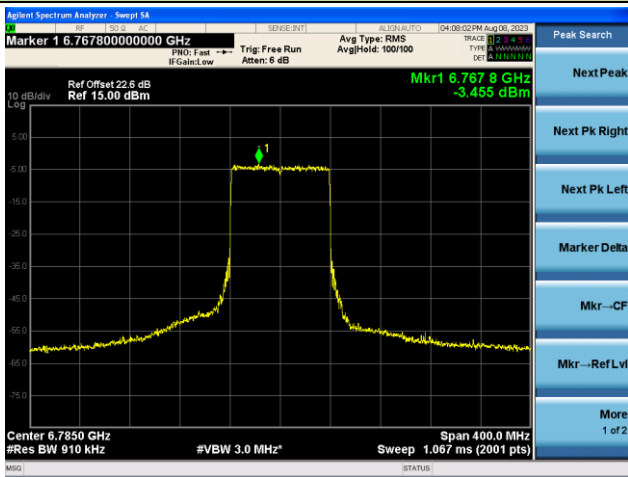


The Mask Data

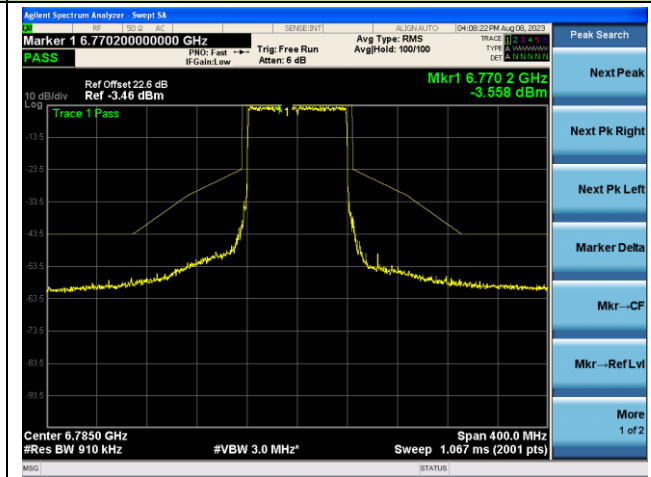 


Channel 183 (6865MHz)

 The Reference Level

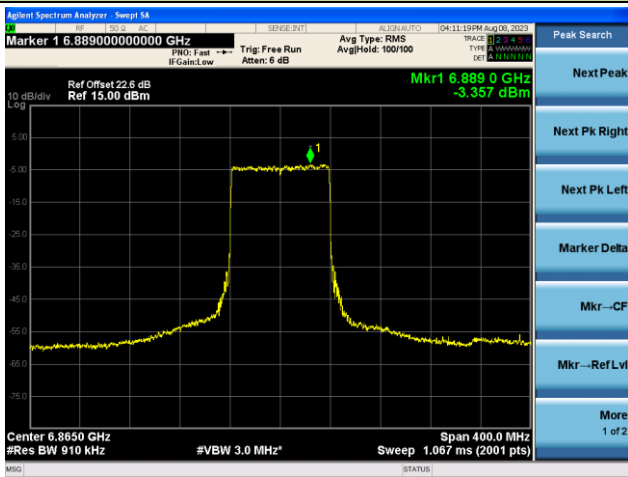


The Mask Data

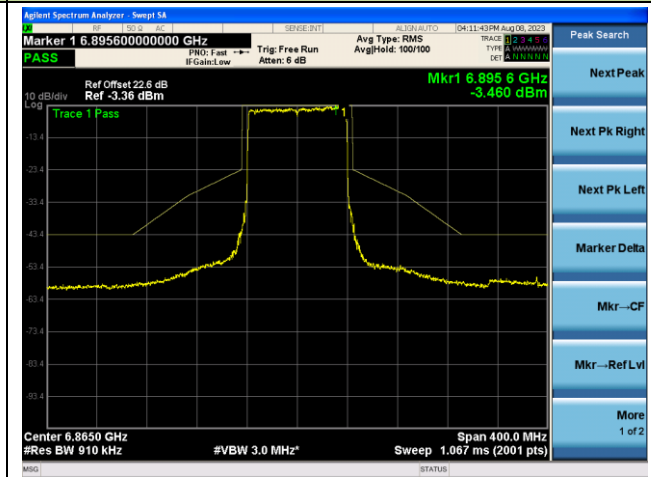 


802.11ax-HE80 - Ant 1 (Nss = 1)

Channel 199 (6945MHz)

 The Reference Level

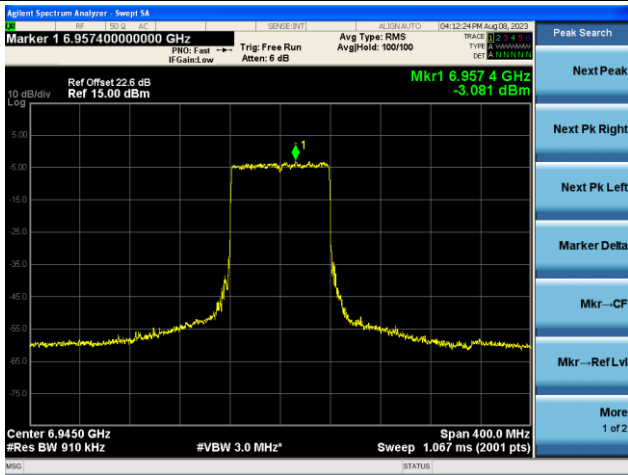


The Mask Data

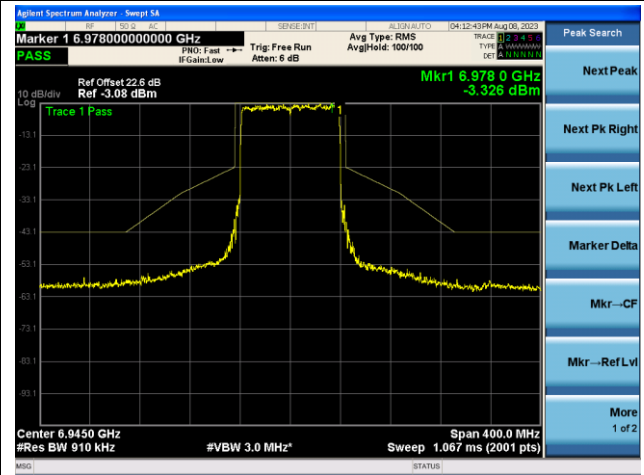 


Channel 215 (7025MHz)

 The Reference Level

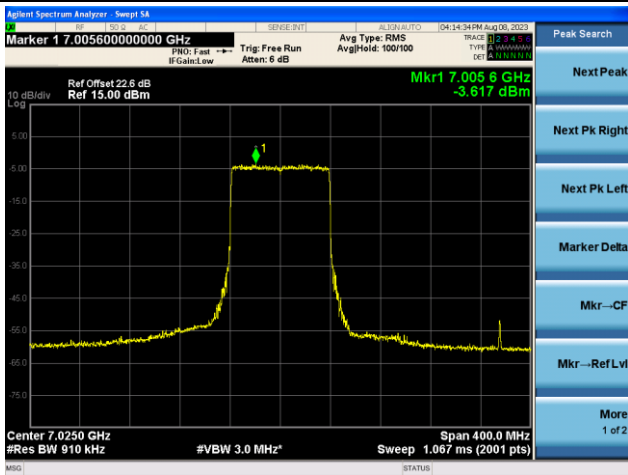


The Mask Data

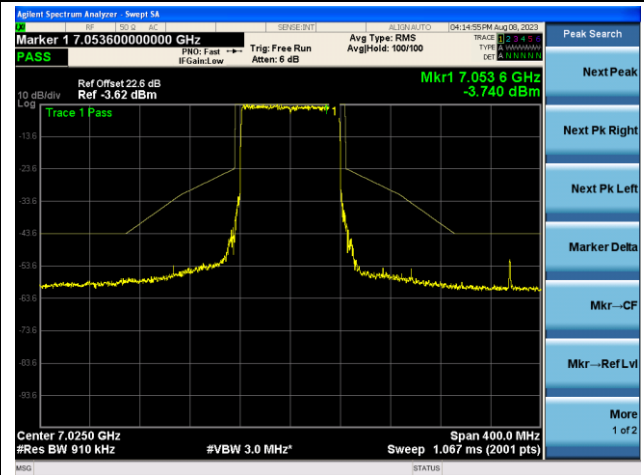 


802.11ax-HE160 - Ant 1 (Nss = 1)

Channel 15 (6025MHz)

 The Reference Level

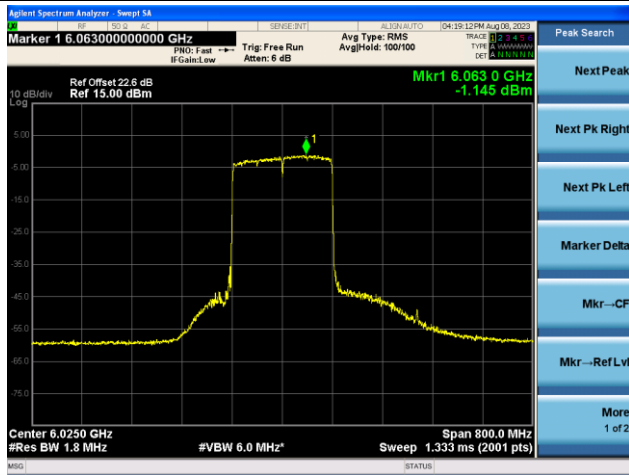


The Mask Data

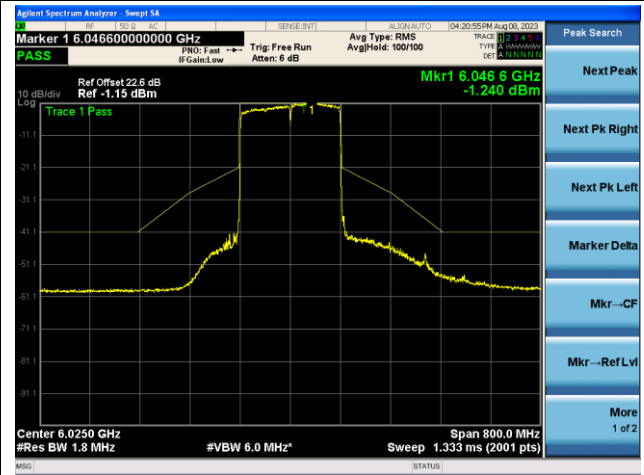 


Channel 47 (6185MHz)

 The Reference Level

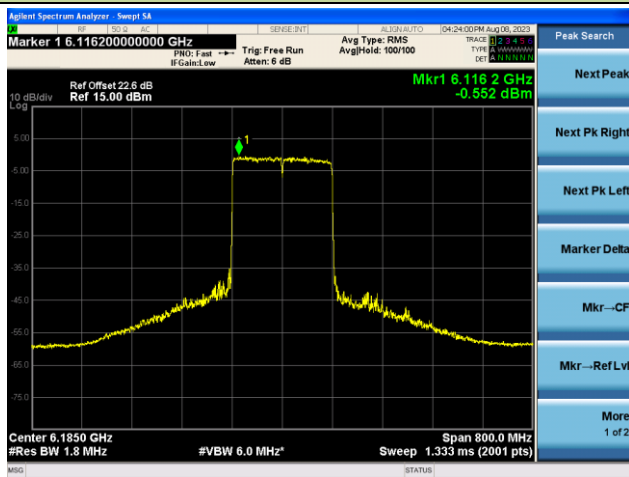


The Mask Data

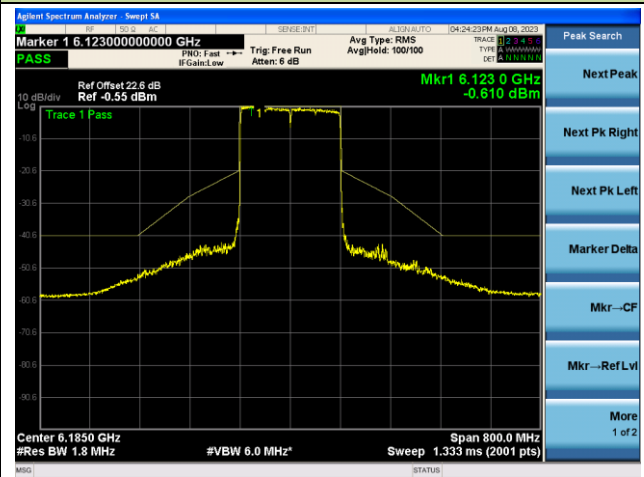 


Channel 79 (6345MHz)

 The Reference Level

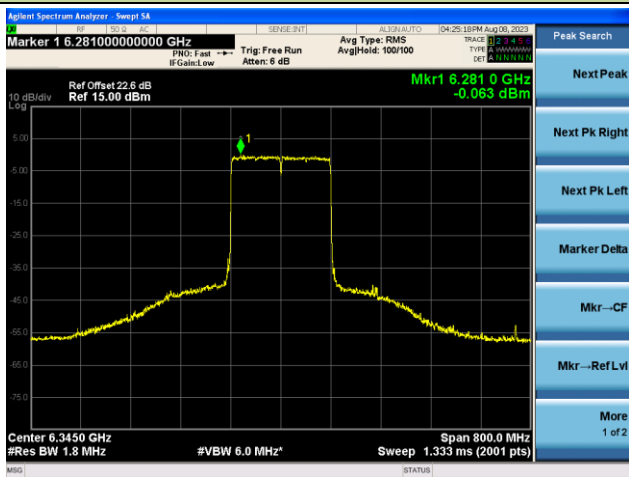


The Mask Data

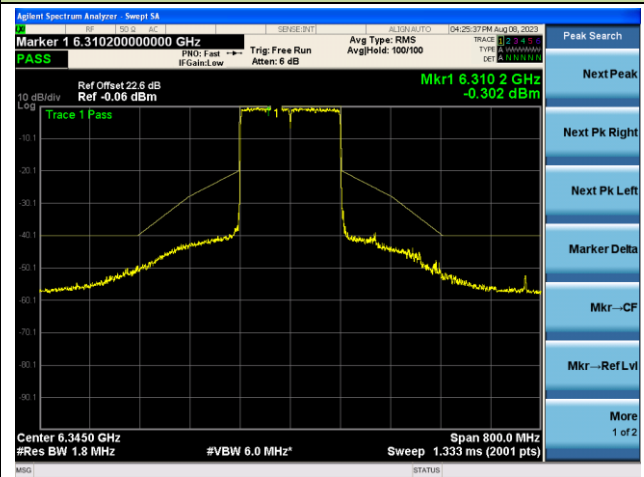 


802.11ax-HE160 - Ant 1 (Nss = 1)

Channel 111 (6505MHz)

 The Reference Level

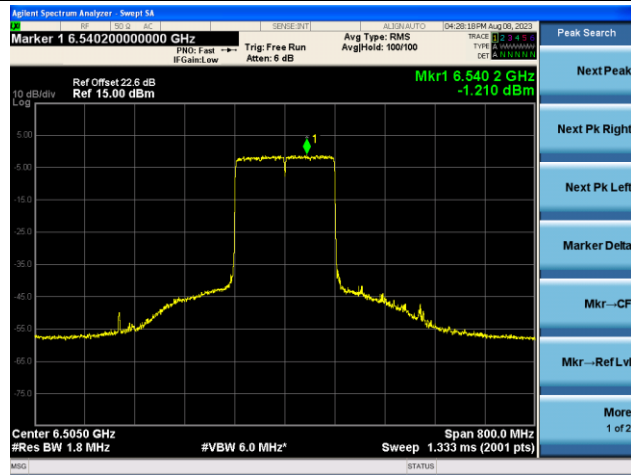


The Mask Data

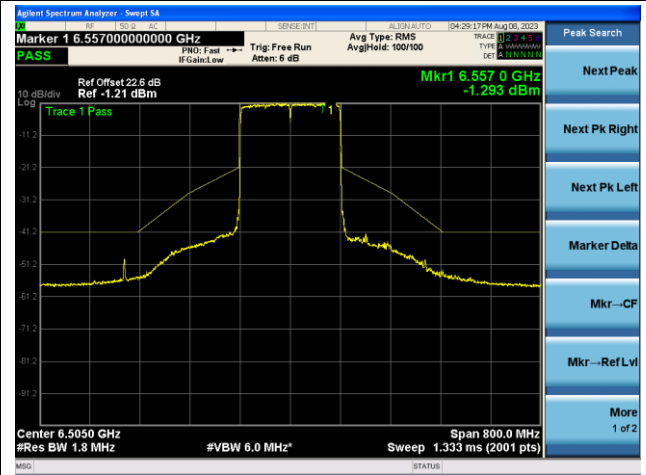 


Channel 143 (6665MHz)

 The Reference Level

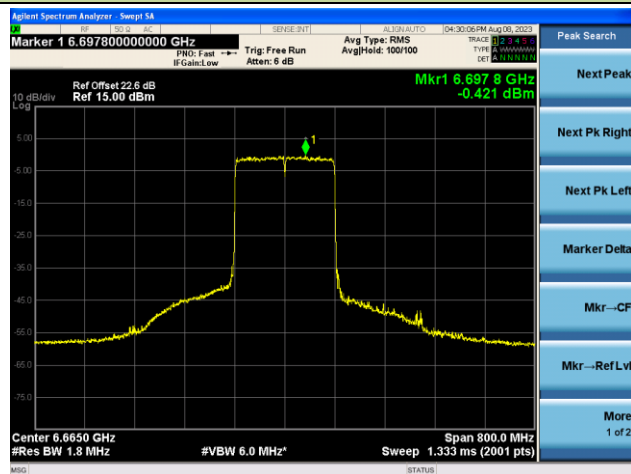


The Mask Data

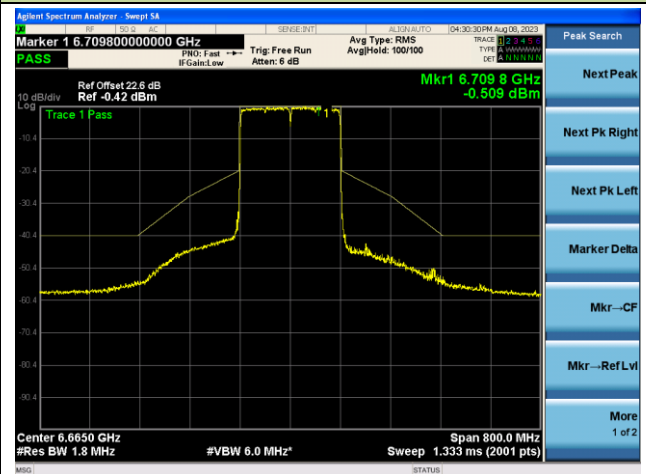 


Channel 175 (6825MHz)

 The Reference Level

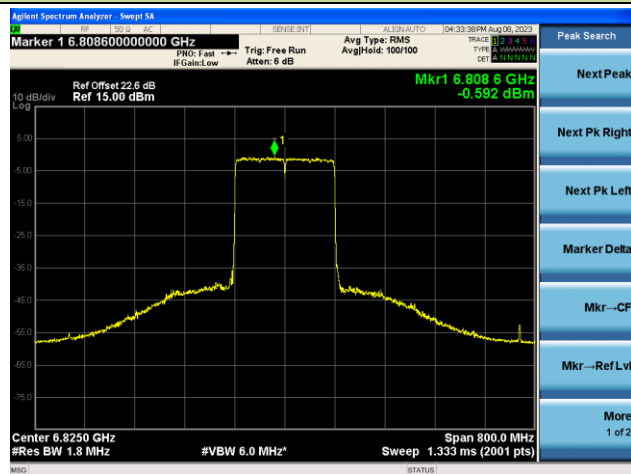

The Mask Data


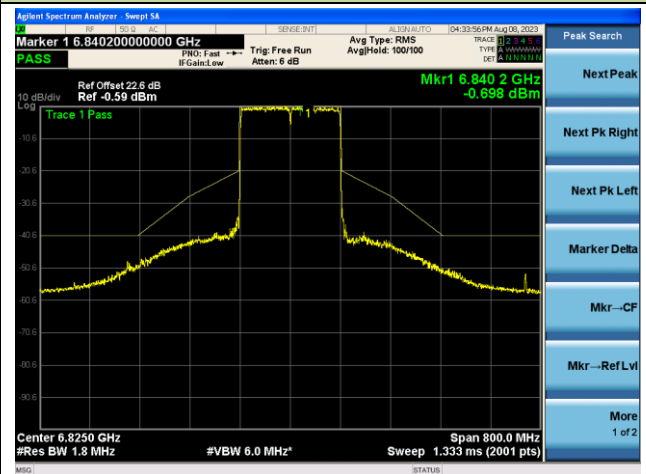 


802.11ax-HE160 - Ant 1 (N_{ss} = 1)

Channel 207 (6985MHz)

The Reference Level

  
The Mask Data

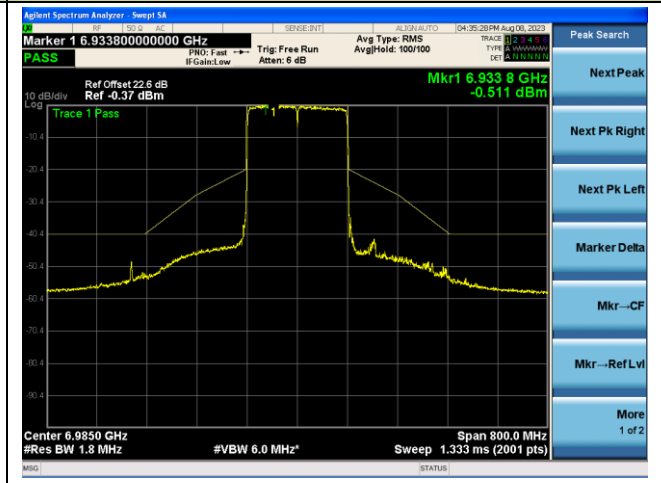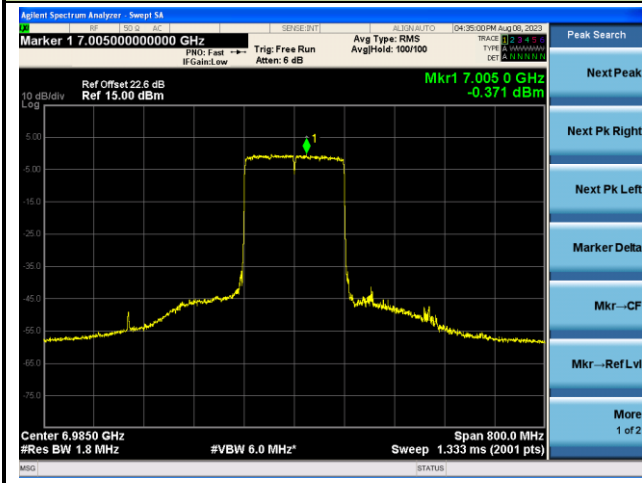


802.11ax-HE20 - Ant 2 (Nss = 1)

Channel 1 (5955MHz)

 The Reference Level

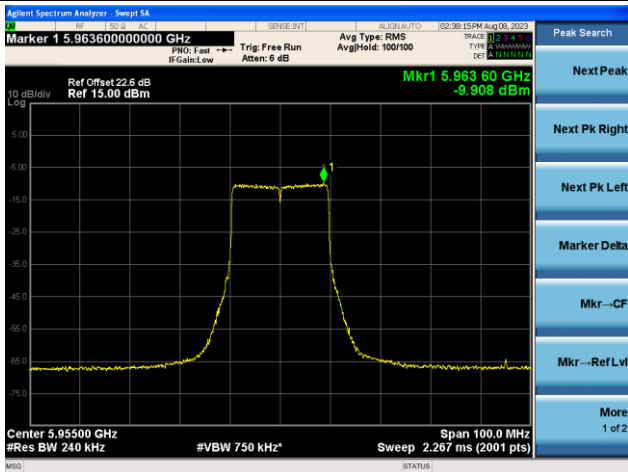


The Mask Data

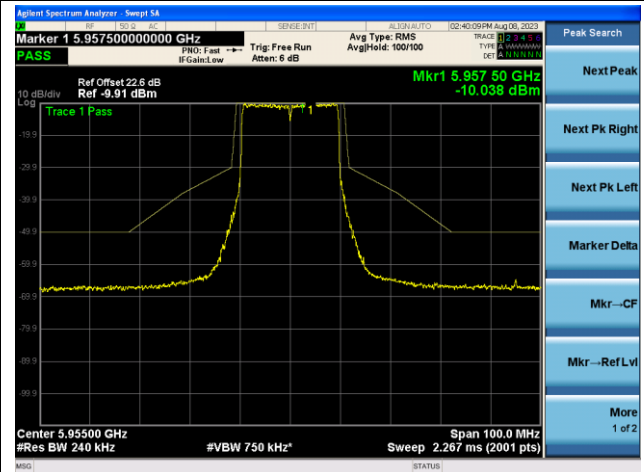 


Channel 4 (6175MHz)

 The Reference Level

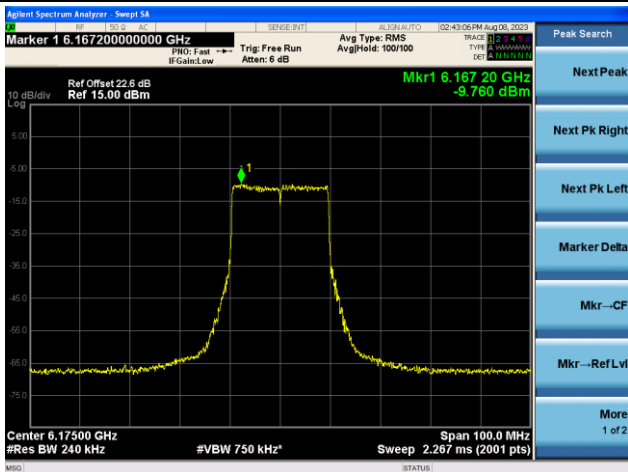


The Mask Data

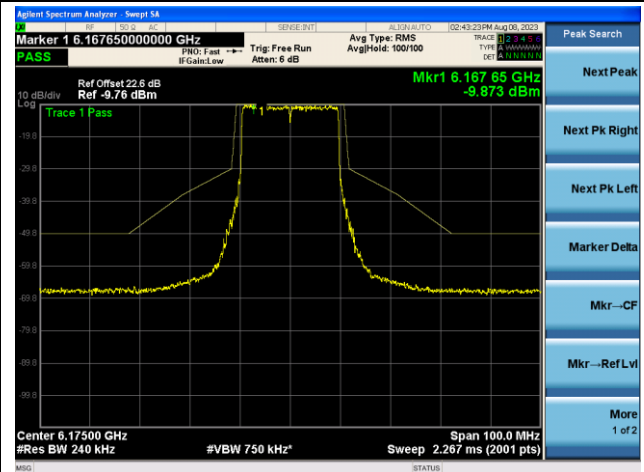 


Channel 93 (6415MHz)

 The Reference Level

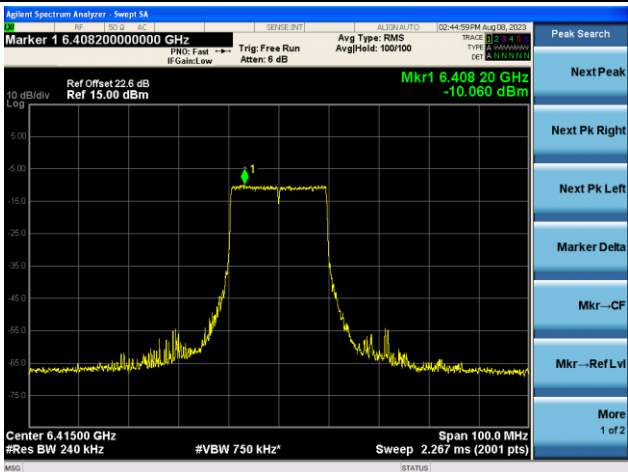


The Mask Data

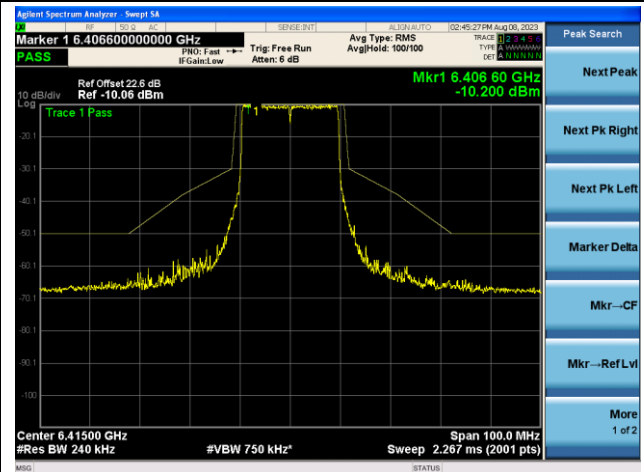 


802.11ax-HE20 - Ant 2 (Nss = 1)

Channel 97 (6435MHz)

 The Reference Level

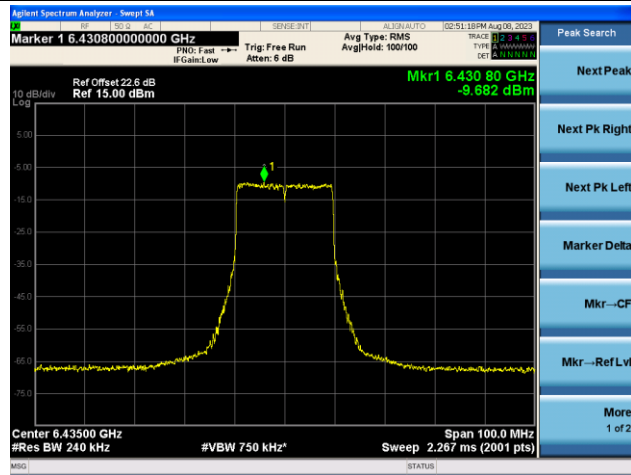


The Mask Data

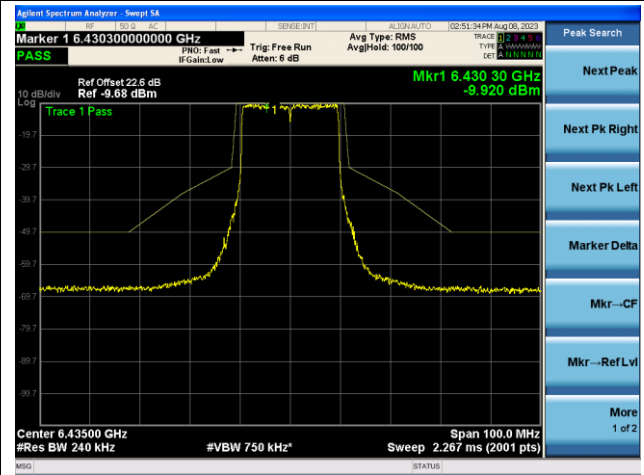 


Channel 105 (6475MHz)

 The Reference Level

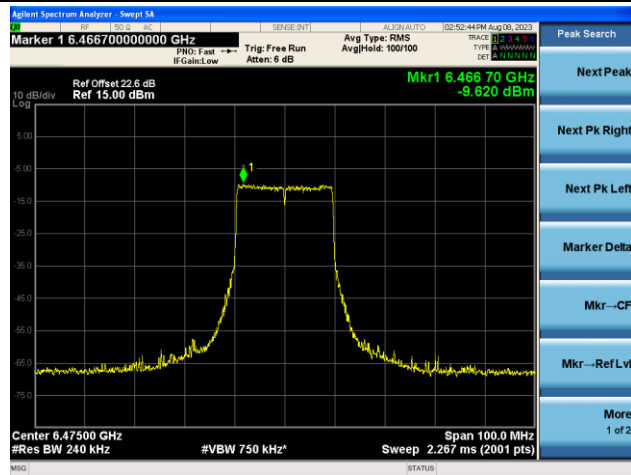


The Mask Data

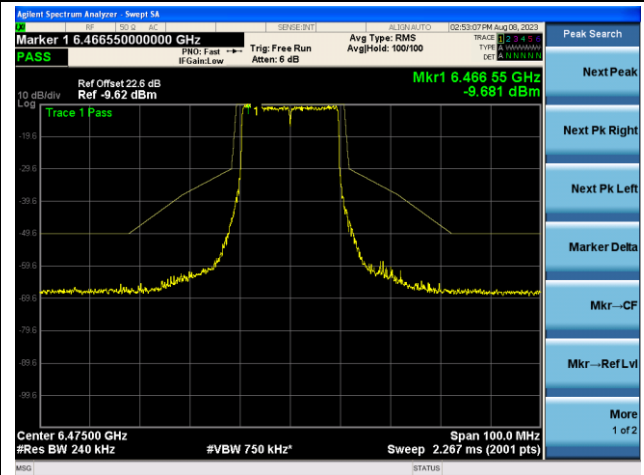 


Channel 113 (6515MHz)

 The Reference Level

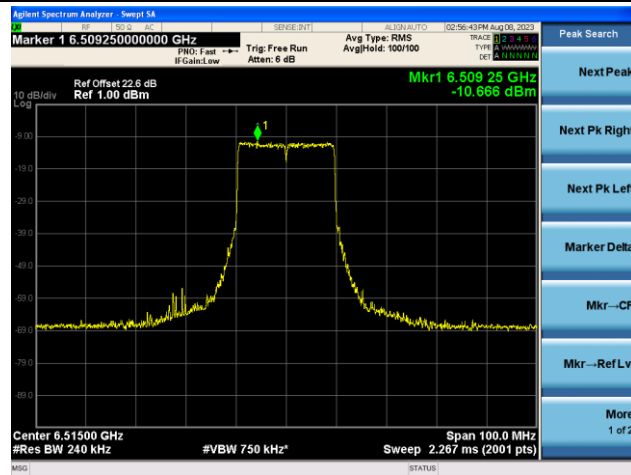


The Mask Data

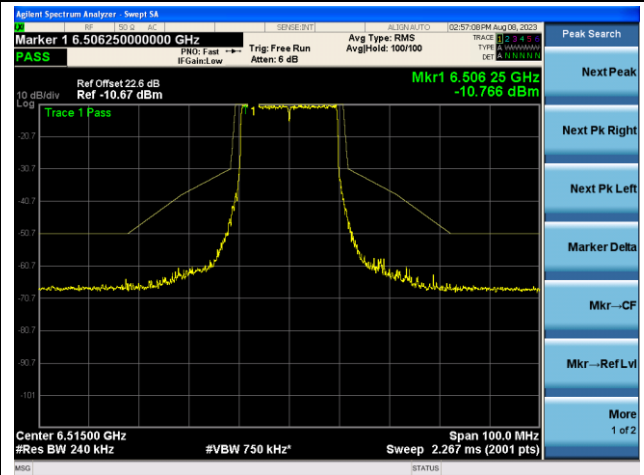 


802.11ax-HE20 - Ant 2 (Nss = 1)

Channel 117 (6535MHz)

 The Reference Level

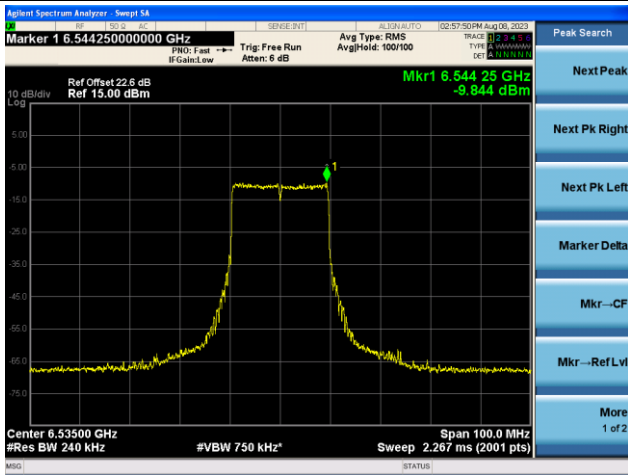


The Mask Data

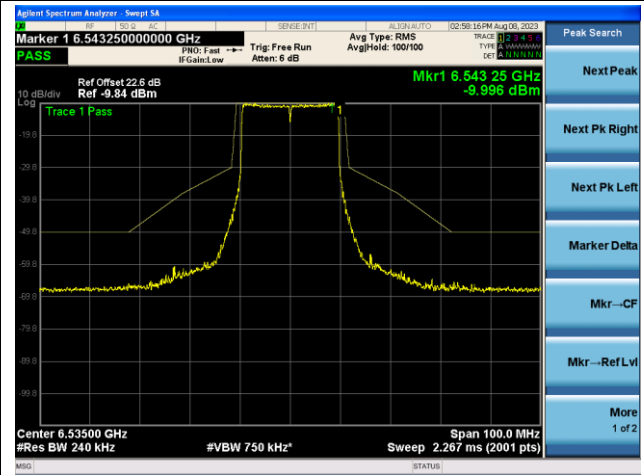 


Channel 149 (6695MHz)

 The Reference Level

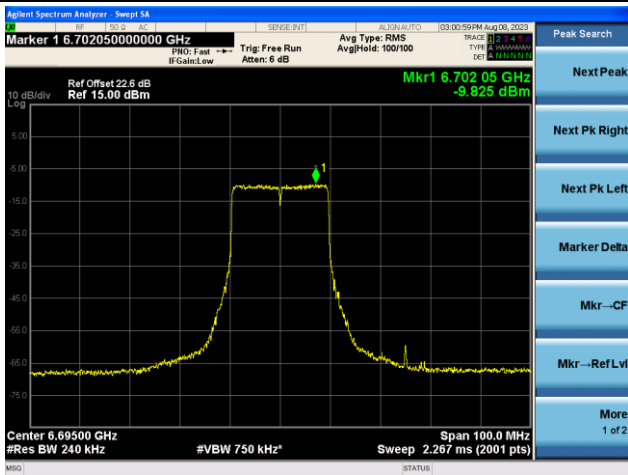


The Mask Data

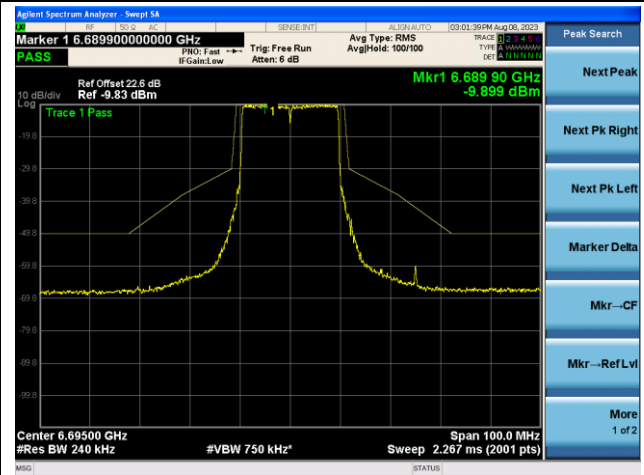 


Channel 181 (6855MHz)

 The Reference Level

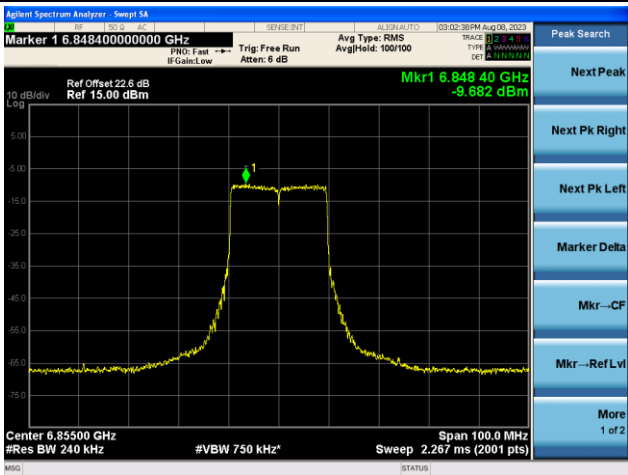


The Mask Data

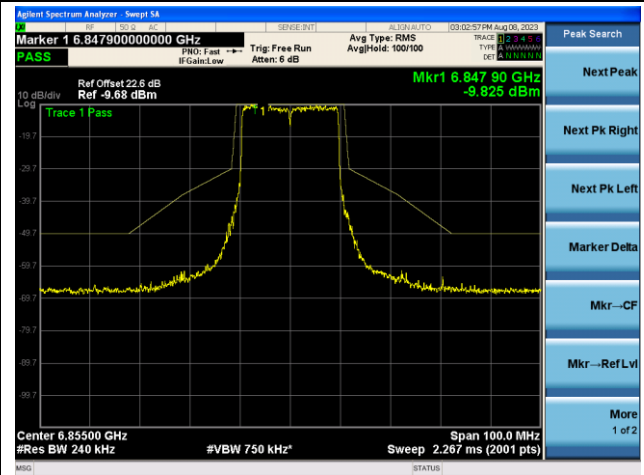 


802.11ax-HE20 - Ant 2 (Nss = 1)

Channel 185 (6875MHz)

 The Reference Level

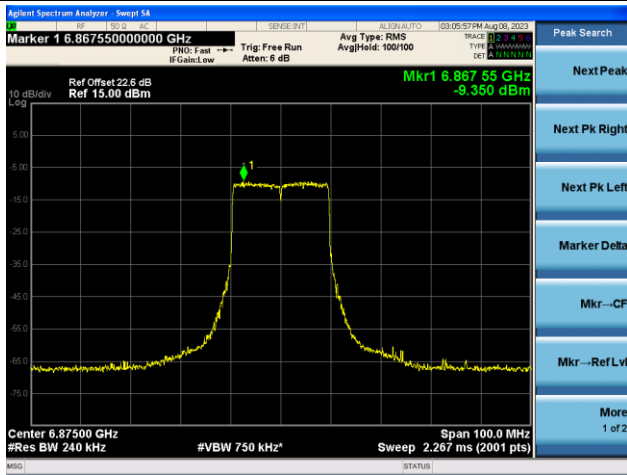


The Mask Data

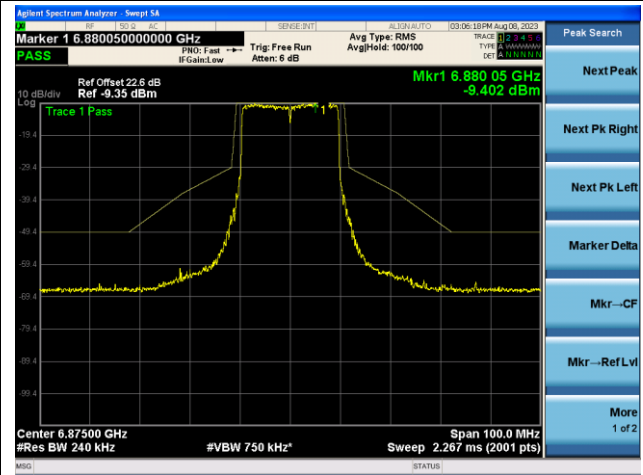 


Channel 189 (6895MHz)

 The Reference Level

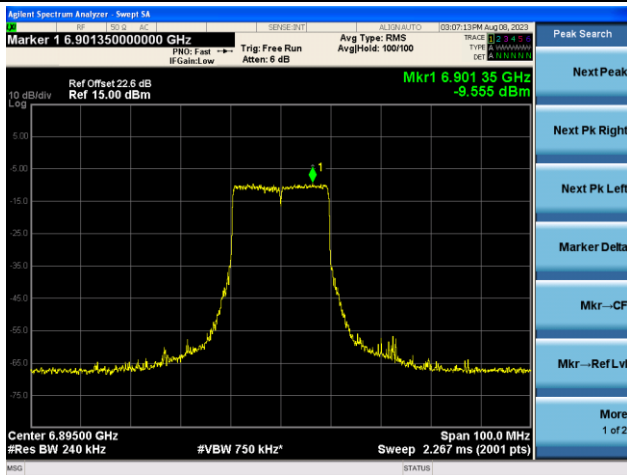


The Mask Data

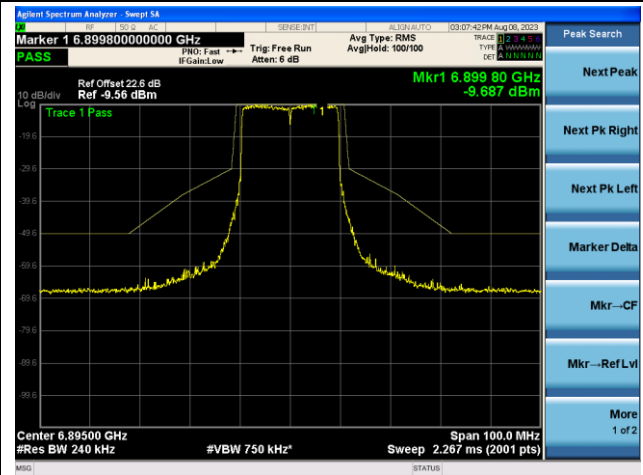 

Channel 213 (7015MHz)

 The Reference Level

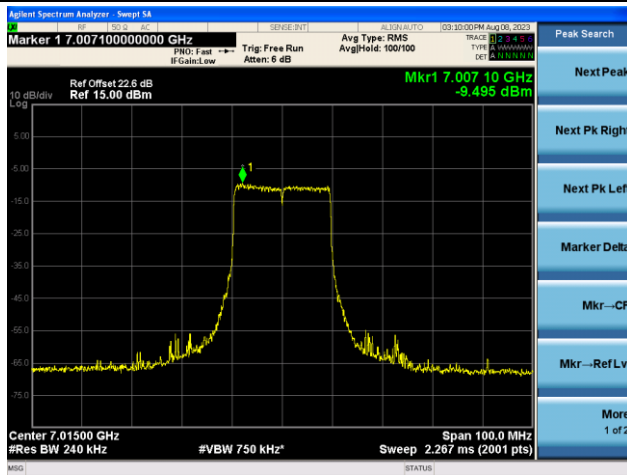

The Mask Data

