ROYAL AUDIO USER MANUAL

PROFESSIONAL BATTERY TROLLEY SPEAKER

MODEL:RA 2210



Please read this user manual carefully before system connection

FCC ID:2BCKURA2210

SIZE:100*140mm

材质:105g铜版纸黑白印刷

THANK YOU FOR PURCHASING OUR SPEAKER. PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATING.

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions. Please adhere to all the instructions herein, and save this information in a safe place for future use.









- 1. Please ensure the power cord for this unit is out of the path of foot traffic. Do not place heavy objects on the power cord as it will cause damage to the cord. Always firmly grasp the plug and pull the plug from the power supply, never yank the cable in order to pull out the plug. Avoid the use of an extension cable.
- 2. Ventilation: This unit should be placed in a well ventilated space where it has no less than 10cm ventilation space on either side of it. Do not cover the unit with a cloth or blanket. Do not put it on a bed, sofa, or carpet as this will stifle the ventilation of the unit.
- 3. Casing Dismantling: DO NOT dismantle the casing. There are no usable parts inside the unit. Make use of a service center in order to have your unit repaired.
- 4. Should the unit emit any smell or smoke, immediately turn off the power supply. Take the unit to the service center from which you bought it for repairs.

FEATURES

- BT Function
- •Plays Mp3 files stored in SD card/USB drive/external audio device.
- •FM radio
- Microphone input
- Aux input
- Remote control
- Built-in rechargeable battery

CONNECTING

- 1. This set applies to AC 110V-240V, 50/60Hz
- AC power: battery can be charged when connected to AC power. Red light on battery is charging, it will change to green once battery complete charge.
- 3. Internal battery will be charged even device switch off when plugged in to AC power
- 4. Adjust function keys to your personal audio preference.

BT INSTRUCTION

Change the mode into "BLUE", the BT sign light twinkles, and speaker will give an alarm. Ensure you enable the BT function on your BT device. Search for BT connection until you find device model and pair.

TWS CONNECTION





In BT mode, press the TWS button and hold it down for three seconds, the primary speaker will sound an alarm and the screen will show "BTST". The secondary speaker switch to BT mode will automatically connect to the primary speaker, and the screen will show "BT".




BATTERY & CHARGING

- 1. The units takes approximately 8 hours to fully charge. It will automatically begin charging once the power cord is connected.
- 2. If the battery power is low may caused sound distortion or stop play, pls charging the battery ontime.
- 3. To maximize the battery's lifespan, please charging the battery immediately. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 30days.
- 4. To saving battery, please power off once stop using.

REMOTE CONTROL




- Standby
- USB/SD/LINE/BT (Audio input)
- Prev/FM CH-
- Play/pause/FM tuner
- Next/FM CH+
- Repeat
- Stop
- W Volume up
- Volume down
- Mute
- Equalizer
- Number

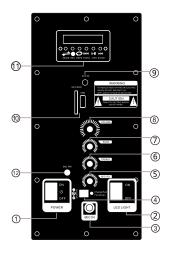

TYPE 1


PANEL FUNCTION

- ① POWER: POWER ON/OFF
- ② LED LIGHT: LED LIGHT ON/OFF
- ③ MIC IN: WIRED MICROPHONE INPUT
- (4) **DC9V IN**: DC 9V CHARGING INPUT
- (5) MIC VOL: MICROPHONE VOLUME ADJUST
- ⑥ TREBLE: ECHO ADJUST
- (7) BASS: MASTER VOLUME ADJUST
- ® VOLUME: MASTER VOLUME CONTROL
- AUX INPUT
- (10) USB/SD CARD INPUT
- 1 DISPLAY PANEL FUNCTION:
 - REC: RECORDING; INSERT USB/SD CARD PRESS THIS
 - BUTTON FOR RECORDING, PRESS AGAIN TO STOP AND PLAY RECORDING SOUND.
 - :PLAY/PAUSE; FM STATION AUTO SEARCHING
 - TWS ON/OFF SWITCH (PRESS & HOLD)
 - :PREVIOUS; ECHO-: ECHO EFFECT DECREASE(PRESS & HOLD)
 - :NEXT; ECHO+: ECHO EFFECT INCREASE(PRESS & HOLD)
 - MODE: MODE SELECT
- 12 MIC PRI.: MICROPHONE PRIORITY EFFECT ON/OFF BUTTON

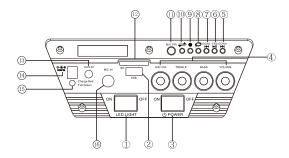

TYPE 2 PANEL FUNCTION


- 1) LED LIGHT: LED LIGHT ON/OFF
- ② USB INPUT
- ③ POWER: POWER ON/OFF
- MIC VOL: MICROPHONE VOLUME ADJUST TREBLE: TREBLE ADJUST
 BASS: BASS ADJUST
 - **VOLUME: MASTER VOLUME CONTROL**
- ⑤ M: NEXT; ECHO+: ECHO EFFECT INCREASE(PRESS & HOLD)
 ⑥ M: SCAN PLAY/PAUSE; FM STATION AUTO SEARCHING
 TWS ON/OFF SWITCH (PRESS & HOLD)
- ⑦ № :PREVIOUS; ECHO-: ECHO EFFECT DECREASE(PRESS & HOLD)
- ® ♥:REPEAT
- REC: RECORDING; INSERT USB/SD CARD PRESS THIS
 BUTTON FOR RECORDING, PRESS AGAIN TO STOP AND
 PLAY RECORDING SOUND.
- MIC PRI: MICROPHONE PRIORITY
- (1) SD CARD INPUT
- AUX INPUT
- (4) DC9V IN: DC 9V CHARGING INPUT
- (6) BATTERY CHARGE LIGHT
- (6) MIC IN: WIRED MICROPHONE INPUT

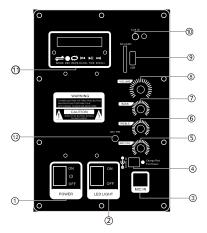

TYPE 3 PANEL FUNCTION


- ① POWER: POWER ON/OFF
- ② LED LIGHT: LED LIGHT ON/OFF
- 3 MIC IN: WIRED MICROPHONE INPUT
- 4 DC9VIN: DC 9V CHARGING INPUT
- (5) MIC VOL: MICROPHONE VOLUME ADJUST
- ® TREBLE: ECHO ADJUST
- 7 BASS: MASTER VOLUME ADJUST
- ® VOLUME: MASTER VOLUME CONTROL
- (10) AUX INPUT
- (i) DISPLAY PANEL FUNCTION:
 - REC: RECORDING; INSERT USB/SD CARD PRESS THIS BUTTON FOR RECORDING, PRESS AGAIN TO STOP AND PLAY RECORDING SOUND.
 - ► PLAY/PAUSE; FM STATION AUTO SEARCHING TWS ON/OFF SWITCH (PRESS & HOLD)

 - MODE: MODE SELECT
- (2) MIC PRI.: MICROPHONE PRIORITY EFFECT ON/OFF BUTTON

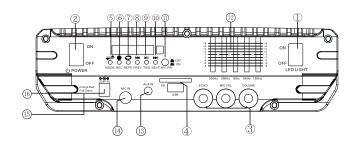

TYPE 4 PANEL FUNCTION

- 1. LED LIGHT ON/OFF SWITCH
- 2. POWER ON/OFF SWITCH
- 3. ECHO/MIC. VOLUME/VOLUME ADJUST
- 4. USB/SD CARD INPUT SLOT
- 5. ≠ MODE: MODE SELECT
- 6. REC: RECORDING
- 7. C REPE: REPEAT
- 8. ₩ PREV: PREVIOUS TRACK
- 9. ► SCAN/PAUSE, TWS ON/OFF SWITCH(PRESS & HOLD)
- 10. ► NEXT: NEXT TRACK
- 11. MIC PRI.: MICROPHONE PRIORITY EFFECT ON/OFF BUTTON
- 12. EQUALIZER: TREBLE AND BASS ADJUST
- 13. AUX IN
- 14. MIC IN
- 15. BATTERY CHARGE INDICATING LIGHT
- 16. DC 9V IN: DC 9V CHARGING INPUT

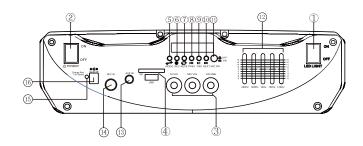

TYPE 5

PANEL FUNCTION

- 1. LED LIGHT ON/OFF SWITCH
- 2. POWER ON/OFF SWITCH
- 3. ECHO/MIC VOLUME/VOLUME ADJUST
- 4. USB/SD CARD INPUT SLOT
- 5. A MODE: MODE SELECT
- 6. REC: RECORDING
- 7. 🗭 REPE: REPEAT
- 8. ₩ PREV: PREVIOUS TRACK
- 9. ► SCAN/PAUSE, TWS ON/OFF SWITCH(PRESS & HOLD)
- 10. ► NEXT: NEXT TRACK
- 11. MIC PRI.: MICROPHONE PRIORITY EFFECT ON/OFF BUTTON
- 12. EQUALIZER: TREBLE AND BASS ADJUST
- 13. AUX IN
- 14. MIC IN
- 15. BATTERY CHARGE INDICATING LIGHT
- 16. DC 9V IN: DC 9V CHARGING INPUT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

