

User manual

tablet pc

Model: G103

Contents

Acknowledgments	3
Overview	4
Safety precautions for batteries	5
Warnings	6
Updates management	7
Understanding devices	8
Technical data sheet	9
Correct disposal	10

Acknowledgments

The specifications and information contained in this manual are provided only for informational use and are subject to change at any time, without notice, and can not be construed as a commitment by the company. The company assumes no responsibility and does not assume any error or inaccuracy that may appear in this manual, including the products and software described.

Overview

If the device does not respond when you press the power button, the battery is probably completely discharged. Charge the battery for at least 30 minutes (using the Type-c line and the power adapter supplied with the device) then try to switch on the device again.

You can recharge the battery multiple times, but all batteries have a limited life span. If you notice a significant reduction in the battery life of the device, you can contact our company to purchase the battery for replacement.

The device can heat up during prolonged use or if exposed to high temperatures. If the device overheats excessively, stop charging and disable unnecessary functions. Place the device in a cool place and allow it to cool down to room temperature. Avoid touching the surface of the device in case of overheating.

Charging times may vary depending on the ambient temperature and the remaining battery level.

Safety precautions for batteries









Use the correct external power supply. The power adapter of this product can only be used with the power type indicated on the electrical rating label. If you are unsure of the type of power required, please contact our service center.

Battery pack care

The product contains a lithium polymer battery. If the battery pack is handled incorrectly there is a risk of fire and burns. Do not attempt to open or repair the battery pack.

In case of prolonged stop of the device make sure to leave the batteries with a residual charge of about 50%. The device displays a low battery warning when the battery is almost empty. Charge the device immediately to prevent it from turning off automatically.

Warnings


-  Only the original power adapter and Type-c line cable can be used to charge the tablet. Using different power adapters may damage the tablet.
-  Make sure you plug the power supply into the power outlet with the correct input voltage. The adapter output voltage is 5.0V DC,2A.
-  Keep your device away from strong magnetic fields which may damage the device.
-  Only qualified employees of our company can repair tablets.
-  We recommend keeping the volume at a safe level to preserve your health. In case of prolonged exposure to loud noise hearing troubles may arise.
-  Be careful not to drop the device or bump it against objects, it may cause damages not covered by the standard warranty.
-  Do not expose your device to damp environments, rain or extremely hot environments.
-  The contact with water, sand or prolonged exposure to high temperatures may cause an irreparable damage.

Updates Management

During software updates or during download operations do not remove the power supply, it may cause irreversible data loss.

Any tampering with the software may generate additional costs for recovery.

Understanding devices

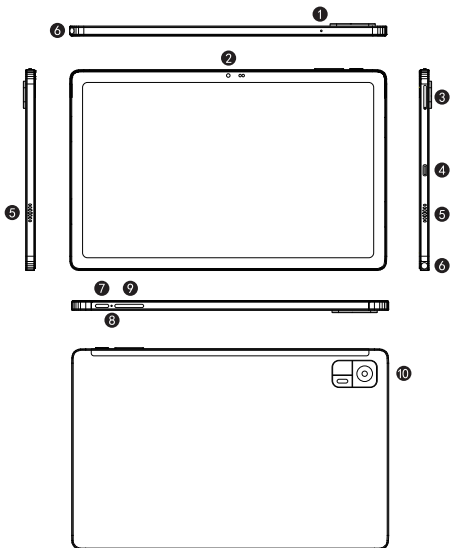

① Microphone

② Camera

③ SIM/TF card

④ Type-C interface

⑤ Speaker

⑥ Headphone

⑦ Power switch

⑧ Reset key

⑨ Vol-/Vol+

⑩ Rear camera

Technical data sheet

Tablet Width:247.2mm Thickness:8.2mm
dimensions Height: 156.9mm Weight: 433g

CPU	MTK 8788
Display	10.36" 2000*1200
TP	10
Memory	RAM: 6GB ROM: 128GB
bluetooth	BT5.0
WIFI	2.4G+5G
Battery	6000mAh
Speaker	8Ω/1W *2 BOX
Camera	5MP Front, 13MP Rear
Camera	ACCELEROMETER
Operating system	Android 13

Correct disposal



EXPLOSION HAZARD if the battery is replaced with a not compliant model. Dispose of used batteries according to the manufacturer's instructions.



DO NOT THROW the battery in the dustbins. The X symbol on the dustbin indicates that it is forbidden to throw the battery in it.

DO NOT DISPOSE OF the tablet in the trash.

This product has been designed to enable the reuse of some parts and the recycling of other parts. The X symbol on the dustbin indicates that the product (electrical, electronic, batteries containing mercury)



should not be thrown in the bins of municipal waste. Check local regulations for proper disposal of electronic products.



DO NOT THROW tablet in fire. **DO NOT** short-circuit the internal contacts. **DO NOT** disassemble your tablet.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer

could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) This device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This tablet pc meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: tablet pc has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the tablet pc kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the tablet pc. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.