

## Get Started

### Insert SIM card

You must insert the SIM card before using the phone.

1. Switch off the mobile phone.
2. Insert the SIM card correctly in the card slot.



### Charge Mobile Phone

Your phone is powered by a rechargeable battery. If your phone comes up a message which notifies you that the battery power is too low, at that moment, please recharge the battery, if the charge is too low, it may shorten the life of the battery.



---

## **PC-Phone File Transfer**

 
Once the mobile phone is connected to a PC with USB, the PC will charge the mobile phone automatically. In such case, ***USB computer connection*** will appear on your screen.

1. Drag the notification panel down and tap

## ***Charging this device via USB.***

2. Select ***Use USB for File Transfer.***

3. The device is recognized as a Removable Disk by the computer. Open the folder and transfer or copy files from your phone to PC and vice-versa.

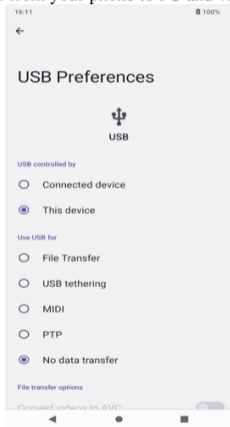

## Keys and Parts

The phone has an exceptional user experience on Camera, Video recorder, FM radio, Music and Sound recorder. Install various APPs, games and more (supports APK format) by downloading on Google Play.



---

**1.SIM card slot**

To insert the sim card.

---

**2.Receiver**

To hear the voice of the other side when calling.

---

<b>3. Front Camera</b>	Allow you to take pictures while facing the screen.
<b>4.Screen</b>	To output information of the devices,
<b>5..USB jack</b>	To connect charger or USB data cable for data exchange.
<b>6.Mic</b>	To record your voice.
<b>7. Headset port</b>	To connect an earphone so you can listen to music or radio, etc
<b>8.Volume Up/Down Key</b>	To adjust the ringer volume, adjust the voice volume during a call and adjust media volume.
<b>9. Power Key</b>	Switch the phone on or off. Press and hold to open phone options menu.
<b>10. Loud speaker</b>	To listen to music, and other sounds offered by your phone.
<b>11. Flashlight</b>	To take photos in low-light conditions.
<b>12. Back Camera</b>	For taking photos.

---

## Lock and Unlock the Screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then drag the lock upward to unlock.



## Notification Panel

Notification icons on the status bar report the new arrival of messages, calendar events, alarm set and ongoing settings such as when call forwarding is on or the current call status. You can open the Notifications panel to open the message, reminder or event notification and see the mobile operator's name. Even you can switch on Data connection, WLAN, Bluetooth, etc.

-> Opening the Notifications panel

Press and hold the status bar, slide your finger downward to open the Notifications panel.

If you have several notifications, you can scroll down the status bar to view more notifications.

-> Closing the Notifications panel

 
Do one operation of the following:

1. Press and hold the bottom bar of the Notifications panel, then slide your finger up the screen.
2. Press BACK or Home directly.

Mon, Sep 11

16:19

Emergency calls only 100%

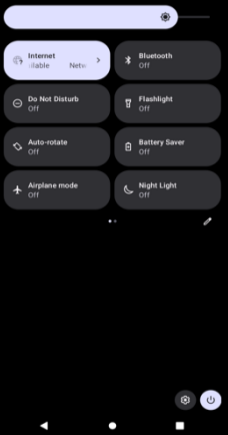



## Arranging and Rearranging Widgets and Icons

Rearrange the widgets and icons on your Home screen to give room for adding more items to the Home screen.

-> Press and hold the widget or icon you are desired to move.

-> Drag the widget or icon to a new location on the screen. Pause at the left or right edge of the screen to drag the widget or icon onto another Home screen panel.

-> When the widget or icon is where you are desired to put it, release your finger. If you've released your finger but a message shows that there's no space to place the widget or icon, drag it right or left again to another Home screen panel.



## Adding Folders on your Screen

Use folders to group related applications and other shortcuts to keep your Home screen tidy and organized.

-> *Adding folder on your screen*

Press and hold an application icon or a widget that you want to move. Don't release your finger. Drag the application icon or widget and drop it on top of another application icon or widget. Then, simply tap the folder to open it so you can access the applications and widgets inside the folder.

 
-> *Deleting folder*

Drag out all the applications from the folder, then the folder will be deleted automatically.

## Adjusting Brightness

Drag the notification panel down and adjust brightness. Or enter Settings ->Display ->Brightness level, and adjust the brightness level here (by dragging the brightness slider to the left to decrease or to the right to increase the screen Brightness).

**Note:** Lower the brightness of the screen to prolong the battery life.

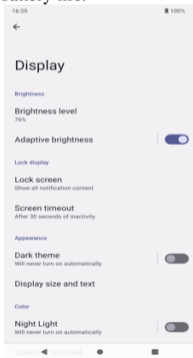


## Changing your Wallpaper


Personalizing your Home screen wallpaper with your favorite photo is a quick and easy way to change the feel of your phone and give it a fresh look. Browse the collection of wallpapers included in your phone by default or choose from photos that you have taken with the camera.


- > Press and hold the screen where there is space.
- > The screen will show an optional context.
- > Select the wallpaper you want and confirm to set it as wallpaper.

 Or you can enter Settings->Wallpaper & style, then will show an optional context.

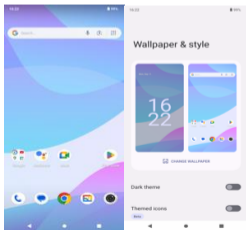

## Make a Call

 On the start screen choose  and enter a complete phone number to make a call.

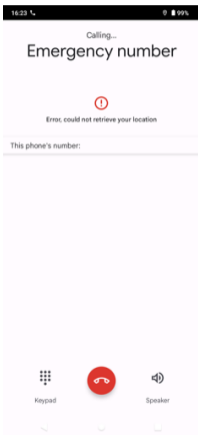

## Call Log

Enter Phone interface, then tap Recents access Call log. In call log options, you can make calls, Create new contact and send message etc.


## Reject a Call by Sending a Busy Message

While there is an incoming call, you are inconvenient to accept the call, and then you can send a busy message for rejecting the call.

Tap the message icon, some busy messages will show on the screen, short tap any of them to send out.

## Add a Contact


Tap  and enter Contacts and then add a contact (see figure below.)


Tap  to add a new contact to Phone .





16:25 99%

✕ Create contact Save ⓘ


 Add photo

  ⓘ






Label



Label






Label

◀ ● ▣

16:25 99%



☰ Search contacts ⓘ

 Phone contacts  Email contacts  Company



No contacts yet

 
+

 **Contacts**  Highlights  Fix & manage

◀ ● ▣

## Messaging

Enter Messaging, and then compose new message. You touch a text field where you want to enter text, to open the keyboard.

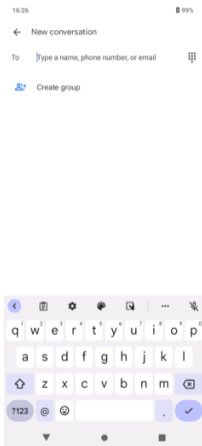

## **Receiving a New Message**

When there is a new message comes, a new message icon will appears in the notifications area of the status bar to notify you of a new text or multimedia message.

To open the message, press and hold the status bar, and then slide the status bar down to open the Notifications panel. Or go to Messaging, read the message directly.

## **Editing SMS and MMS**

-> When you are composing a new text message, you can select text for cutting or copying. Touch the text field or portion that contains text. You can select all contexts, copy, cut and share. The selected text is highlighted in Blue.

-> A multimedia message may contain video, pictures, audio,ideshow, etc. Thus, when you are supposed to edit a MMS, you can just add videos, pictures and more to SMS and change to MMS.

## **Message conversations**

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the All

 
messages screen. Threaded SMS or MMS let you see exchanged messages (similar to a chat program) with a contact on the screen.

## Browse the Web

Open the browser; click the URL on the screen to search or tap website address.


The browser is fully optimized and comes with advanced features that let you enjoy Internet browsing on your phone.

You must have an active data connection or Wi-Fi connection to access the Internet.

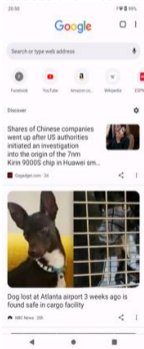

## Enjoy Music

 When you copy music to your Micro SD card, the Music player searches the device for music files and builds a catalogue of your music, based on information about each file that is stored in the file itself.

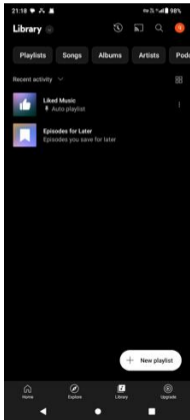

# Download Applications on Google Play

## Add a Google™ account



 
Open Google Play and enjoy your favorite entertainment, from apps and games, movies, music, books and more.



## Manage Applications

Enter Settings >Apps, then manage the applications. Tap any app to view the information of the applications, and you can also force the apps to stop or uninstall the apps.

To install Apps, you need switch on “Allow from this source” in settings.

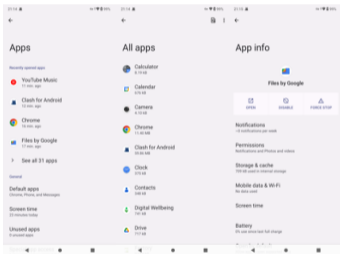



## Maintenance & Safety

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

### 1. After sales service

Kindly refer to the Warranty Card provided in the sales package box.

### 2. Charger and Adapter Safety

Charger and adapter are designed for indoor use only.

### 3. Battery Information and Care

- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- To prevent burning and injury, the battery in your phone should only be removed by a Nikola-approved service centre.
- If your phone becomes unresponsive, press and hold the Power button until the screen goes dark and your phone restarts.

### 4. General Notice

- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e. TV or Radio) may cause interference to the phone.
- Do not immerse your phone in water. If this happens, take it to an Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, picture, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- Do not turn your phone on or off when the phone is close to your ear.
- The suitable temperature for the phone and accessories is  $-10^{\circ}\text{C}\sim 45^{\circ}\text{C}$ .
- When charging, please place the phone in an environment that has a normal room

temperature and good ventilation. It is recommended to charge the phone in an environment with a temperature under 40°C. Please ensure to use only the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the phone and the guarantee article.

- Dispose of used batteries according to the instructions.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

**Warning:** Company will not bear any responsibility for any incompliance with the above guidelines or improper use of the mobile phone. Our company keeps the right to make modifications to any of the content here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the device. In such case, the latter shall govern.

Google, Google Play, YouTube and other marks are trademarks of Google LLC.

## FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Specific Absorption Rate (SAR) information:

Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Phone has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the Smart POS Terminal kept 10cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an

10cm separation distance between the user's body and the back of the Phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.