
 




 




As shown in the figure:

1.  button: Press this key to turn on or off the fan.
2. 1-6Number button: Gear 1-6 is the fan/motor speed button, gear 1 is the lowest speed, gear 6 is the highest speed.
3.  button: This key can turn off the indicator light and electric fan.
4.  button: Press this key to turn on or off the light
5.  Natural wind button: Press this key for natural wind, and the fan rotates from the current gear to the first gear.

6.  button: This key can control the fan to rotate counterclockwise.
7.  button: This key can control the clockwise rotation of the fan.
8. 1H、2H、4H: Is the timed shutdown key, press this key, 1H/2H/4H later turn off the motor.

Restore electrical power. Within 30 seconds of restoring electrical power, press and hold the “” button on the remote controtransmitter for 5 seconds or until light on the fan.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirements, the device can be used in portable exposure condition without restriction