


黑白印刷  
装订翻页 (按照页码排版)  
封面: 0.2MM (157G双铜)  
内页: 0.07MM (105G双铜)

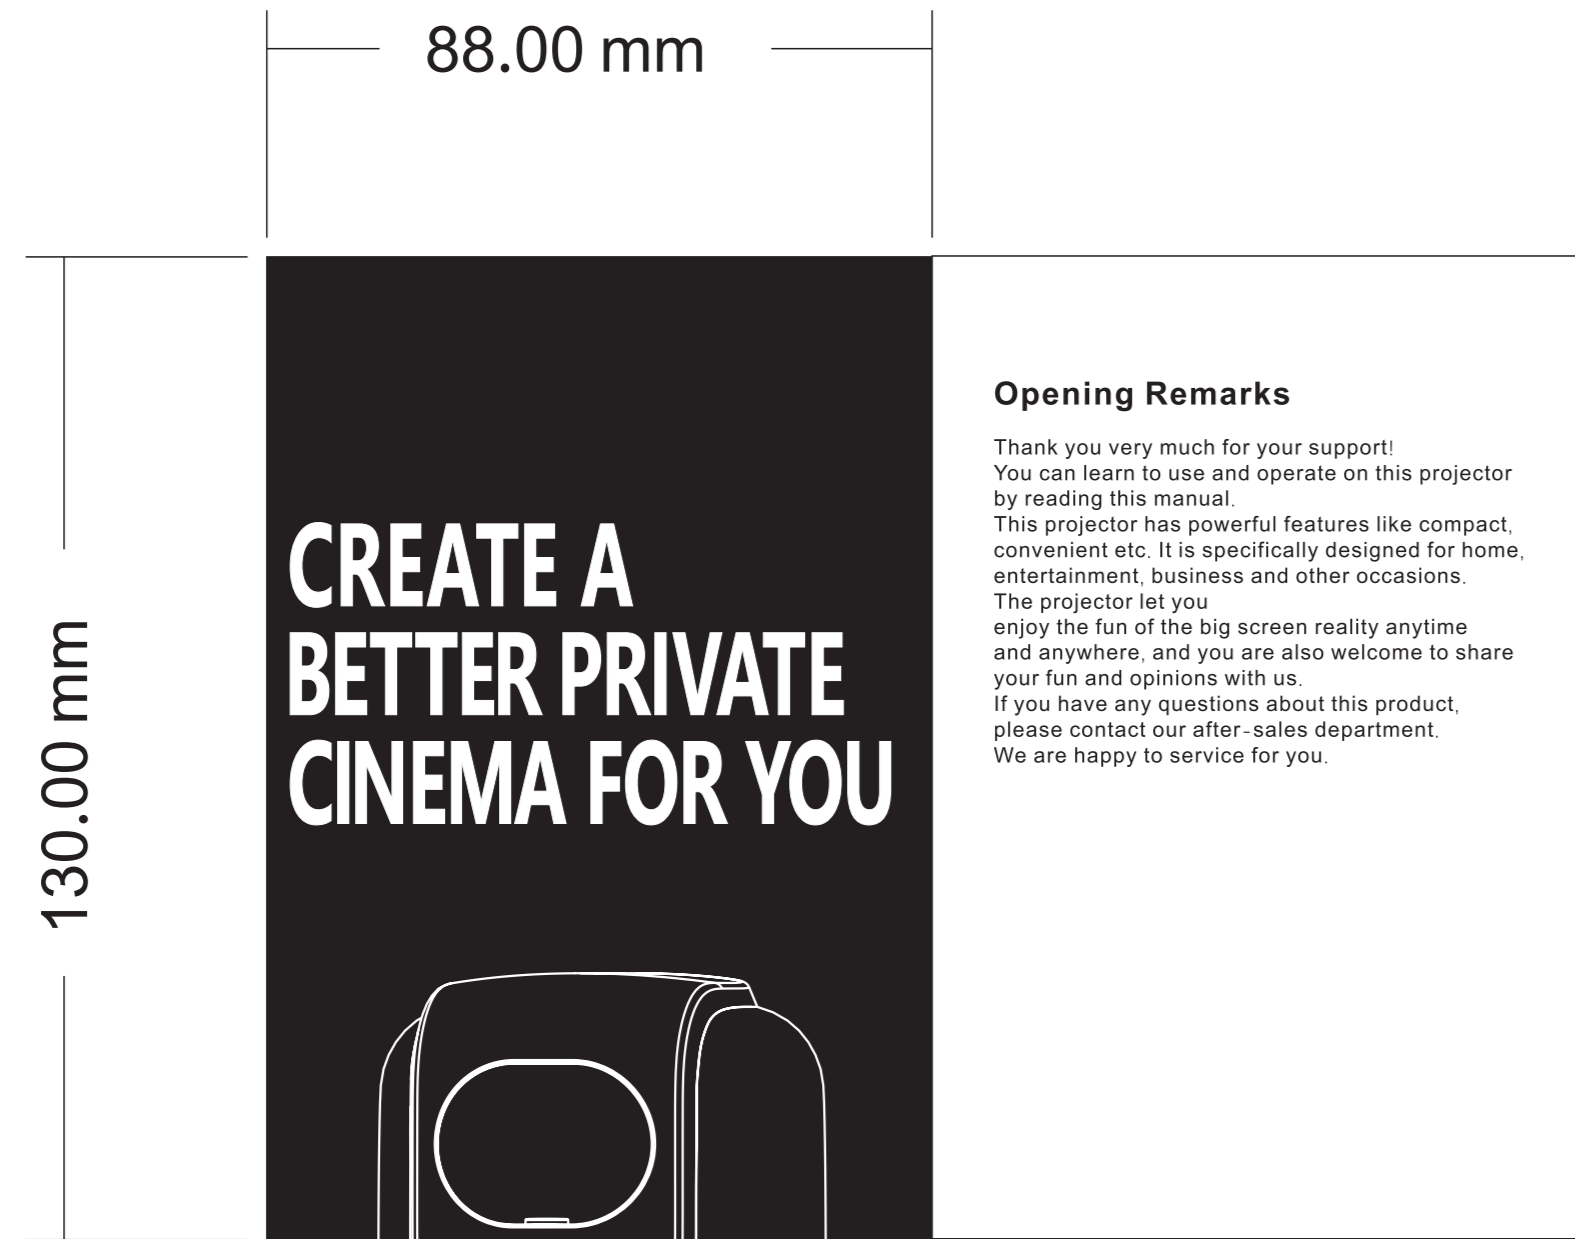

CATALOGUE	
Cautions And Warnings	01-02
List Of Items	03-04
The Remote Control	05-06
Product Details	07-08
Installation And Debugging	09-11
Install The Equipment	12-12
The Software Settings	13-14
Media Player	15-15
Same screen	16-16
Clean And Maintain	17-17
Warranty Card	18-19

**CAUTIONS AND WARNINGS**

- Do not install the machine where directly from the air conditioner, the water (rainwater or high temperature) may make machine failure.
- Make sure the floor is not too wet and the ventilation is not blocked.
- Prevent dust or paper falling into the machine, and do not put any small objects into the machine. (Accidentally dropping, please look at the manual immediately and do not operate it.)
- Do not touch the lens of the lens; do not place any tape on the machine.
- When connecting the camera, please make sure the connection cover is closed.
- Do not touch the lens with your hands.
- Do not touch the lens with your hands.
- Do not touch the lens with your hands.

**NOTICE**  
Do not open the case. Please refer to qualified professional maintenance personnel for product maintenance.

**NOTICE**  
This mark warns there is an unbalanced voltage in this unit, and the case should be checked for the voltage. If necessary, please stop touch any parts inside the machine.

**NOTICE**  
To prevent the accident please do not remove this machine to rain or moisture.

