

Wireless Keyboard S109 皮套键盘保护套英文说明书尺寸大小: 100*150 mm

材质: 128g铜版纸 (封面); 80g书写纸 (内页)

印刷工艺: 单色双面印刷

装订方式: 折页

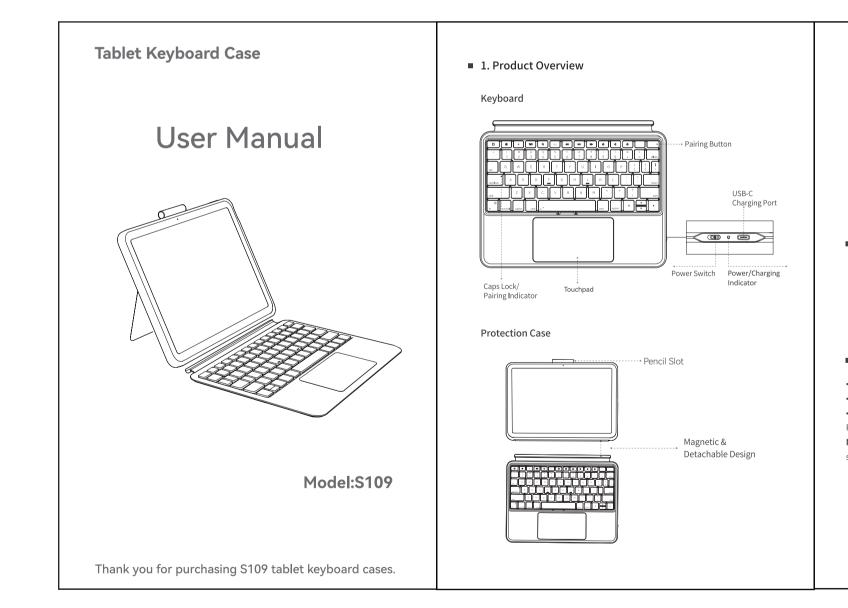

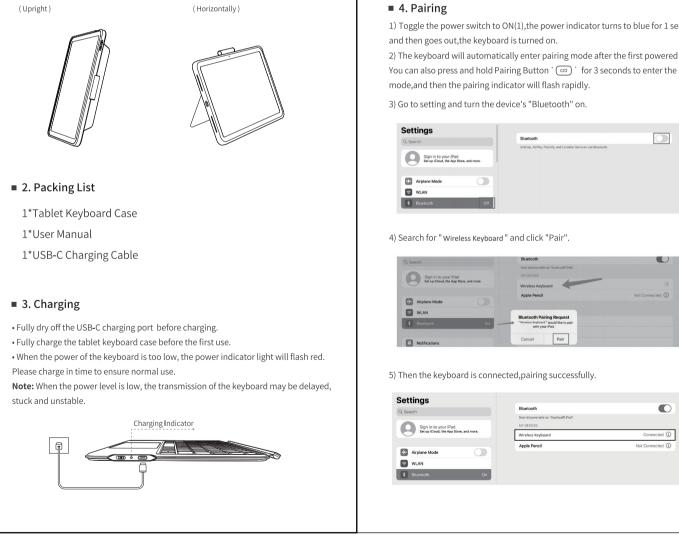



	■ Note:			
to blue for 1 second	If the keyboard is turned on for 3 minutes without being connected to any devi it will enter sleep mode automatically until you press any key or press and hold (
e first powered on.	for 3 second	ls to repairing.		
ds to enter the pairing		board has already been p next time without pairing		they will automatically conr
	■ 5. Slee _l	p Mode		
	automatical 2) Before us will automa	unot use the keyboard fo ly go to sleep mode and o sing the keyboard, please tically connect to the dev suchpad can not wake the	disconnect from press any key to ice whithin 3 sec	devices. wake it up and the keyboar onds.
	■ 6. Func	tion Key Description	on	
		Home	ंः	Decrease brightness
% Not Connected ①	-; \ \	Increase brightness	2.0	Open the App Switcher
	Q	Search	777	Single press to adjust backlight brightness
	43	Previous track	DII	Play/Pause
	DD	Next track	ا×	Mute
	□	Volume down	ď»	Volume up
	a	Lock screen	<u>0</u>	Pairing Button
Connected ①	fn + \(\start \) + \(\start \) Shift	Touchpad switch	fn + delete	press for 3 seconds, Restore factory settings
The Committee of the Co				

7. Indicator

Blue Caps status light will stay on

8. Schematic Diagram of Touchpad Functions

Finger movement Finger Gesture Instructions

Press with one finger until you feel a click.

ym	Use one finger to move the pointer to select the status icons at the top left, then click. Or use one finger to move the pointer past the top of the screen near the middle.	Open Notification Center
#	Swipe two fingers up or down.	Scroll up or down
	Swipe two fingers left or right.	Scroll left or right
(0)	Place two fingers near each other. Pinch open to zoom in, or pinch closed to zoom out.	Zoom
	Swipe up with three fingers.	Go Home
	Swipe up with three fingers, pausing before you lift your fingers. Or pinch four fingers together, pausing before you lift your fingers.	Open the App Switcher
	Swipe left or right with three fingers.	Switch between open apps
	When the Home Screen or the Lock Screen is visible, use two fingers to swipe right.	Open Today View
	Swipe down with two fingers.	Open search from the Home Screen
(My	Click with two fingers to show the quick actions menu for items like icons on the Home Screen, messages in a mailbox, and the Camera button in Control Center. Or if you're using an external keyboard, you can press the Control key while you click the trackpad.	Secondary click

	Use one finger to move the pointer to select the status icons at the top left, then click. Or use one finger to move the pointer past the top of the screen near the middle.	Open Notification Center		■ 9. Specificat	
_	pointer past the top of the serven near the middle.			Wireless Version	
	Swipe two fingers up or down.	Scroll up or down		Bluetooth Pairing N	
				Wireless Range	
	Swipe two fingers left or right.	Scroll left or right		Battery Capacity	
	Place two fingers near each other. Pinch open to zoom in, or	7		Continuous working	
	pinch closed to zoom out.	Zoom		Continuous working	
	Swipe up with three fingers.	Go Home		Standby Time	
	Swipe up with three fingers, pausing before you lift your	0th A		Charging Time	
	fingers. Or pinch four fingers together, pausing before you lift your fingers.	Open the App Switcher		Keys Life	
	Swipe left or right with three fingers.	Switch between open apps	Note: Features		
	When the Home Screen or the Lock Screen is visible, use two fingers to swipe right.	Open Today View		notice,we apolog	
	Swipe down with two fingers.	Open search from the Home Screen			
	Click with two fingers to show the quick actions menu for items like icons on the Home Screen, messages in a mailbox, and the Camera button in Control Center. Or if you're using an external keyboard, you can press the Control key while you click the trackpad.	Secondary click		■ Safety Instr	
_	1			= Salety Histi	

Use one finger to move the pointer to select the status icons at the top left, then click. Or use one finger to move the pointer past the top of the screen near the middle.	Open Notification Center	■ 9. Specifications			
pointer past the top of the screen hear the middle.		Wireless Version	V5.0		
Swipe two fingers up or down.	Scroll up or down	Bluetooth Pairing Name	Wireless Keyboa		
		Wireless Range	8m		
Swipe two fingers left or right.	Scroll left or right	Battery Capacity	650mAh		
Place two fingers near each other. Pinch open to zoom in, or	7	Continuous working time with backlight on	>6.5 hours		
pinch closed to zoom out.	Zoom	Continuous working time with backlight off	>346 hours		
Swipe up with three fingers.	Go Home	Standby Time	>365 days		
Swipe up with three fingers, pausing before you lift your	Open the App	Charging Time	<2.5 hours		
fingers. Or pinch four fingers together, pausing before you lift your fingers.	Switcher	Keys Life	3 Million Stroke		
Swipe left or right with three fingers.	Switch between open apps	Note: Features and technical specific	ations are subj		
When the Home Screen or the Lock Screen is visible, use two fingers to swipe right.	Open Today View	notice,we apologize for any inconven	notice,we apologize for any inconvenience.		
Swipe down with two fingers.	Open search from the Home Screen				
Click with two fingers to show the quick actions menu for items like icons on the Home Screen, messages in a mailbox,					

⚠ Warning: Fire, electric shock, damage to keyboard device could occur if the following instructions are not obeyed ♦ Danger (high risk) X Warning (Moderate risk) △ Note (Poor risk)

- x 1. Away from edge tool 2. Away from microwave radiation source
 3. Do not place heavy objects on this product
- △ 5. Away from oil, chemical, or organic solvents

Q1. I can't find the keyboard name on iPad?

languages, first you need to upload the keyboard language in your iPad. (Must connected keyboard) Then you need to change the input to the correct language. "Settings-General-Keyboard-Keyboard-Add new keyboard."

■ 10. FAQ

A: Though our keyboard case combo only for iPad 10th because of the cover, but if you want to use the keyboard for Other Tablets or Smartphones, Normal function are the same, just have a little difference for the shortcut keys and

Q4: Why can't I use the touchpad?

A: Please follow the below steps:

Setting-General-Keyboard-Hardware keybaord-Turn off the Swtiches languages

A: 1. Please make sure you have opened the keyboard to ON status; 2. Please press the " " button for 3 seconds till the indicator flashing rapidly 3. If you tried both 1 & 2, then kindly reset the keyboard or the iPad.

Q2: Why can't I type in Spanish, French or other small languages? A: Our keyboard are standard US English version, if you want to type in small

This product bears the selective sorting symbol for Waste

Q3: Can I use the keyboard for Samsung tablet or smartphones?

to minimize its impact on the environment.

A: Please press "fn+shift+spacebar" to open or close the touchpad.

Q5: Why I press the caps to switch the languages?

using Caps Lock.



RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING

electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new

DC voltage



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's

carefully on our website. authority to operate the equipment. with the product if your product's warranty is valid. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful nterference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver isconnected. -Consult the dealer or an experienced radio/TV technician

The device has been evaluated to meet general RF exposure requirement. The device can beused in portable exposure condition without restriction.

WARRANTY CARD

-Please read the return procedures and warranty policy before sending items back to point-of-purchase. -Please fill the card and send it to your reseller together

S.N:	
Date of Purchase:	
Product Model:	
RMA Number:	
Return Reason:	
Customer Name:	
TEL:	
E-mail:	
Address:	