

	图号	名称	尺寸	材质
	型号 BB006K	备注		
业务	客户 Bella baby	单号	版本 V1	日期 2024-3-6

BABY SWING CHAIR

USER MANUAL

IMPORTANT! KEEP IT FOR FUTURE REFERENCE.
Before installing and using, please follow the instructions carefully to ensure the safety of your baby.

Product Contents

Product Introduction 2
Product Specification 2
Product Features 2
Parts Instruction 3
Installation 4
For Base Bracket 4
For Pillow and Seat Cover 4
For Canopy With Toys 5
Safety Belt Instruction 5
Assemble Instructions 6
Button Description 7
Motion Lock 7
Remote Control 8
Power Supply 8
WARNING 9
Clean & Maintenance 9
Clean 9
Maintenance 9
Troubleshooting 10
After-sales Service 11

Product Introduction

Product Specification:

Product Name	BABY SWING CHAIR
Model Number	BB006
Input Voltage	100-240V~
Output Voltage	5V
Output Current	1A
Frequency	50/60Hz
Application	Children up to a weight of 9 kg or unable to sit up unaided
Main Material	100% polyester fiber, anodized aluminum base brackets
Certificate	EN12790, EN16332, ASTM F2088-22, ASTM F963-17

Product Features:

- Swinging from side to side, with five gears mimicking human movement.
- Protecting baby's spine design on the basis of human engineering.
- Power supplied by safe 5V low voltage adapter.
- One-button installation and disassembly, simple and convenient to use.
- Seat cover made of environmental friendly super soft fabric and non-heatable, cozy, breathable and safe & removable and machine-washable seat fabric.
- Made of aluminum alloy base with light weight and strong hardness guaranteeing safety for baby.
- Controlled by pushing screen or remote controller, easy to operate.
- With motion lock and safety belt for protection.
- With built-in soft nature sounds & Bluetooth enabled music.

Parts Instruction

Make sure that all of the following parts listed are included in the box. If any part is missing, please contact us before operating. No tools are required for assembly.

- 1) Back top*2
- 2) Pillow*1
- 3) Mosquito net with canopy*1
- 4) Seat cover
- 5) Remote controller
- 6) Adaptor*1, 2 meters of USB cable*
- 7) Seat frame*1
- 8) Base bracket*1

Installation

For Base Bracket
Assembling: Put the frame in the base with -①- shape components aligned.
Disassembling: Pull out of the sheet metal and pull up the seat frame.

For Pillow and Seat Cover
Installation: Put the seat cover on the seat frame and fasten the snap button on the back. Attach the pillow to the top retaining ring of the seat frame and press the Velcro of the pillow.
Removing: Pull off the Velcro to detach the pillow and unfasten the snap button to remove the seat cover.

For Canopy With Toys
Installation: Attach the toys on canopy and fasten the clasps to the pipe of the seat frame, and attach mosquito net to the bottom of the seat frame.
Disassembling: Put out of the clasps to remove the canopy.

Safety Belt Instruction
Place the baby into the swing and let his legs across both sides of the crotch support restraint, then turn the crotch support cover up. Adjust the seat belt on both sides and buckle up.
Note: Be sure to use the safety belt correctly when your baby lies on the baby swing for the safety of your child. Buckle off when you take your baby out of swing.

Assemble Instructions

- Press the steel clips, insert the upper seat frame into the hole of the down frame, ensure the clips bounce up a clear "click" will be heard when correctly inserted.
- Insert left and right side into main engine, ensure that the foot tube is aligned with the screw hole of the main engine in the bottom.
- Fix 4 screws into the foot tube.

Warning:
Guardian should take good care of your child, prohibit to play accessories and avoid to get hurt or swallow!

User Instruction

Button Description

Power button: Plug in and the indicator light is on. Press the button to turn the swing off.
Play/pause: Touch the button to play the built-in music. Touch it again to turn the sound off.
Time setting: Turn on the Bluetooth on smart phone and connect with "BB006". The swing beeps, and then Bluetooth is now connected well. Then the music from phone plays.
Music priority: Bluetooth-Built-in music.
Five swing gears: Touch the button to make swing settings. There are five swing gears indicated by the lights.
Timer: Touch the button to set the time. The first touch will have the swing chair swing for 15 minutes, the second touch will have it swing for 30 minutes, and the third will have it swing for 45 minutes.
Next song: Touch the button to play the next song.
Volume up/down: Touch the button to increase the volume gradually.
Volume down: Touch the button to decrease the volume gradually.

Motion Lock
Push the motion lock down to lock the seat frame and stop movement.
Pull the motion lock up to unlock the seat frame and the baby swing will swing again.

Remote Control

Power on/off, Play/pause, Time setting, Built-in music/Bluetooth music, Volume up/down, Five swing gears, Auto mode: push to enter auto mode/gear 2 with timer 15 minutes, Stop swing: press to stop swing, and press any gear key to resume swing.

Power Supply

- DC plug can be inserted into 100-240V ~ 50 / 60Hz AC power supply.
- Adapter output parameters: voltage is 5V and current is 1A.

WARNING

- The power terminals must not be short-circuited.
- Do not use adapters other than those supplied with this product to power the product.
- Keep children away from working adapter.
- Check the adapter cable connection regularly.

WARNING

Fall hazard: Subject has a fixed fall structure falling while in and from bouncers. Do not use for children under 3 years old. Always use with safety and adjust to height, even if baby falls asleep. Do not use for children under 3 years old.

Surface hazard: Subject has a surface that is not smooth. Do not use for children under 3 years old. Do not use for children under 3 years old. Do not use for children under 3 years old.

Choking hazard: Subject has small parts and objects that can be a choking hazard. Do not use for children under 3 years old. Do not use for children under 3 years old. Do not use for children under 3 years old.

Strangulation hazard: Subject has a cord that can be used to strangle. Do not use for children under 3 years old. Do not use for children under 3 years old. Do not use for children under 3 years old.

Small parts hazard: Subject has small parts and objects that can be a choking hazard. Do not use for children under 3 years old. Do not use for children under 3 years old. Do not use for children under 3 years old.

FCC Compliance Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the requirements for class B, digital devices. Operation of this device may cause interference, if not installed and used in accordance with the instructions. There is no guarantee that interference will not occur in certain installations. However, there is no guarantee that interference will not occur in certain installations, which can be determined by turning the equipment off and on, or by using a different frequency. Recycle or reuse the receiving antenna. Increase the separation between the equipment and receiver. Power line connection. Contact the dealer or an experienced radio/TV technician for help. Caution: The dealer or an experienced radio/TV technician is responsible for compliance with the user's instructions to operate the equipment. This equipment complies with FCC radiation exposure limits set for an uncontrolled environment. This restriction must not be exceeded during normal operation with any other antenna or transmitter. The base bracket should be installed and operated with minimum distance shown between the receiver and base.

Clean & Maintenance

Clean

- Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
- Removable and washable fabric.
 - Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.
 - Canopy: Take it off and put a little cleaner, wash it gently by hands, rinse it with clean water, and then hang it to dry, avoiding exposure to the sun.
 - Pillow: Tear the Velcro off and take the pillow off. Put a little cleaner, wash it gently by hands, and then rinse it with clean water. Hang it avoiding sun exposure.

Maintenance

- Please check this baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and connect it well again if necessary.
- This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry and store it in a cool and dry place, avoiding direct sunshine for a long time.

After-sales Service

Thank you for purchasing our products. If there is any quality problem, please contact with the distributor.

Note:

- From the purchase date, normal users can enjoy one year's free maintenance service for the circuit board components and one year's free maintenance service for the whole machine.
- Other consumables and accessories are not covered by the warranty.

Non-warranty Coverage:

- Improper use.
- Damage caused by natural disasters and other irresistible forces.

备注:
材质: 80g双胶纸
颜色: 黑白印刷
结合方式: 骑马钉
页数: 12p

图号 (Drawing No.)		材料描述 (Material)				表面处理 (Treatment)		I	II	III	IV	V	VI	VII	VIII	IX	X	备注 (Remark)	
T O L E R A N C E	GRADE	F	M	C	V	ANGLE		图幅 共 张 第 张 单位 mm 比例 版本 (version) 03	第三角画法			产品型号 Model	材料标记	图号	零件名称	Part name	佛山市熊宝宝科技有限公司	审核/日期 设计/日期	
	SCALE				FM	CV													