

1	2	3	4	5	6	7	8
	图号	名称	说明书	尺寸	材质		
	型号 BB501	备注					
业务	客户	单号	版本	V1	日期	2024-3-6	

170.00 mm

125.00 mm

### BABY SWING CHAIR

USER MANUAL

MODEL BB501

IMPORTANT! KEEP IT FOR FUTURE REFERENCE. Before installing and using, please follow the instructions carefully to ensure the safety of your baby.

#### Product Contents

Product Contents .....2  
Product Specification .....2  
Product Features .....2  
Parts Instruction .....3  
Parts list .....3  
Installation .....3  
Assemble/disassemble base stand .....3  
To unfold the seat frame .....4  
Adjust the backrest .....4  
For Canopy With Toys .....5  
Safety Belt Instruction .....5  
User Instruction .....6  
Button Description .....6  
Lock/Unlock .....6  
Remote Control .....7  
Power Supply .....7  
WARNING .....7  
WARNING .....8  
WARNING .....8  
Clean & Maintenance .....9  
Clean .....9  
Maintenance .....9  
Troubleshooting .....9  
After-sales Service .....10

#### Product Introduction

**Product Specification:**

Product Name	BABY SWING CHAIR
Model Number	BB501
Input Voltage	100-240V~
Output Voltage	5V
Output Current	1A
Frequency	50/60Hz
Application	Children up to a weight of 9 kg or unable to sit, up to 18 months
Main Material	100% polyester fiber, strong iron base bracket
Certificate	EN12790

**Product Features:**

- Soft fabric brings safe and comfort feeling.
- Protecting baby's spine design on the basis of human engineering.
- Controlled by Touching screen or remote controller, easy to operate.
- With built-in soft songs & Bluetooth enabled for music.
- With broadening seat, removable seat cover, mosquito netting.

**Parts Instruction**

**Parts List**

- Toys \* 2
- Pillow \* 1
- Mosquito net \* 1
- Seat Cover \* 1
- Remote \* 1
- Adapter \* 1 USB Cable \* 1
- Seat Frame \* 1
- Seat Base \* 1

#### Installation

##### Assemble/disassemble base stand

Assemble: 1. Remove the plastic bracket from the base stand. 2. Put the seat frame in the base with "L" shape components aligned. Disassemble: Press the button and pull up the seat frame from the base (stand back side of the swing).

##### To unfold the seat frame

1. Press both buttons of left and right side, lift up the upper tube in the meantime. 2. Press both buttons of left and right side, lift up the nether tube in the meantime.

##### Adjust the backrest

1. Press button ① of the same time on the left and right side to adjust the recline of backrest. There are Level 0, 1 & 2.  
2. Press button ② of the same time on the left and right side to adjust horizontal position of the baby swing. There are Level 0 & 1.

##### For Canopy With Toys

Installation: Attach the toys on canopy and fasten the clasps to the pipe of the seat frame, and attach mosquito net to the bottom of the seat frame. Dismantling: Put out of the clasps to remove the canopy.

##### Safety Belt Instruction

Place the baby into the swing and let his legs across both sides of the crotch support restraint, then turn the crotch support cover up. Adjust the seat belt on both sides and buckle up.  
Note: Be sure to use the safety belt correctly when your baby lies on the baby swing for the safety of your child. Buckle off when you take your baby out of swing.

#### User Instruction

##### Button Description

① Power on/off: Plug in and the indicator light is on. Press the button to turn the swing off.  
② Turn on the Bluetooth on smart phone and connect with "BB501". The swing beeps, and then Bluetooth is now connected well. Then the music from phone plays.  
③ Music priority: Bluetooth/Built-in music.  
④ Touch the button to make swing settings. There are five swing gears indicated by the lights.  
⑤ Touch the button to set the time. The first touch will have the swing chair swing for 8 minutes, the second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.  
⑥ Touch the button to play the next song.  
⑦ Touch the button to increase the volume gradually.  
⑧ Touch the button to decrease the volume gradually.

##### Lock/Unlock

1. Press down the button will stop swinging.  
2. Boost up the button to unlock.

#### Remote Control

Power on/off	Play/Pause
Time setting	Previous song
Built-in music/Bluetooth music	Next song
Volume up	Volume down

① ② ③ Three swing gears  
④ Sleep music: press to enter sleep mode/gear 2 with timer 15 minutes.  
⑤ Stop swing: press to stop swing, and press any gear key to resume swing.

#### WARNING

**WARNING:** This product contains a Rechargeable or Coin Cell Battery. A well-sealed Rechargeable or Coin Cell battery can cause internal chemical burns in as little as two hours and lead to death.  
**WARNING:** Disposal of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

#### Power Supply

- DC plug can be inserted into 100-240V~50/60Hz AC power supply.
- The DC interface can be connected to the power bank (the power bank output is 5V/1A).
- Adapter output parameters: voltage 5V and current 1A.

**BATTERY SAFETY PRECAUTIONS**

**WARNING:** This product contains a Rechargeable or Coin Cell Battery. A well-sealed Rechargeable or Coin Cell battery can cause internal chemical burns in as little as two hours and lead to death.  
**WARNING:** Disposal of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**Full and STRENGTHEN THE BATTERY SAFETY**

Always use correct load (your child) for swing and have straight sit-ups.  
① Do not use the product for more than 12 months.  
② Do not use the product for more than 12 months.  
③ Do not use the product for more than 12 months.  
④ Do not use the product for more than 12 months.  
⑤ Do not use the product for more than 12 months.  
⑥ Do not use the product for more than 12 months.  
⑦ Do not use the product for more than 12 months.  
⑧ Do not use the product for more than 12 months.  
⑨ Do not use the product for more than 12 months.  
⑩ Do not use the product for more than 12 months.

#### Clean & Maintenance

##### Clean

- Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
- Removable and washable fabric.
  - Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.
  - Canopy: Take it off and put a fabric cleaner, wash it gently by hand, rinse it with clean water, and then hang it to dry, avoiding exposure to the sun.
  - Filter: Tear the fabric off and take the pillow off. Put a fabric cleaner, wash it gently by hand, and then rinse it with clean water. Hang it avoiding sun exposure.

##### Maintenance

- Please check this baby swing regularly. Make sure of each part to be well connected and well installed. Stop using for poor connection and connect/install it again if necessary.
- This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry, and store it in a cool and dry place, avoiding direct sunlight for a long time.

#### Troubleshooting

No.	Trouble	Solution
1	Not energized	Check whether the adapter and DC cable are properly connected. Please connect them firmly. If DC cable may be damaged, please contact customer service to replace DC cable.
2	The power lamp keeps flashing	Turn the main power switch off and check if it is well connected.
3	Motor lock stuck	Check the motor lock. Pull up to unlock the seat frame.
4	Overheating/Smell	Power off and restart it again.

Note: For other trouble, please contact our customer service for help. Never disassemble and repair the swing by yourself.

#### After-sales Service

Thank you for purchasing our products. If there is any quality problem, please contact with the distributor.

Note:

- From the purchase date, normal users can enjoy one year's free maintenance service for the circuit board components and one year's free maintenance service for the whole machine.
- Other consumables and accessories are not covered by the warranty.

Non-warranty Coverage:

- Improper use.
- Damage caused by natural disasters and other irresistible forces.

**备注:**  
**材质: 80g双胶纸**  
**颜色: 黑白印刷**  
**结合方式: 骑马钉**  
**页数: 12p**

图号 (Drawing No.)		材料描述 (Material)				表面处理 (Treatment)		I	II	III	IV	V	VI	VII	VIII	IX	X	备注 (Remark)			
T O L E R A N C E	GRADE	F	M	C	V	ANGLE		图幅	共 张 第 张	第三角画法		产品型号	Model	材料标记	图号	零件名称	Part name				
	SCALE				FM	CV	单位												mm	比例	
							版本 (version)												03	批准/日期	
							审核/日期													设计/日期	
佛山市熊宝宝科技有限公司																					